


[Click here to get the complete manual](#)

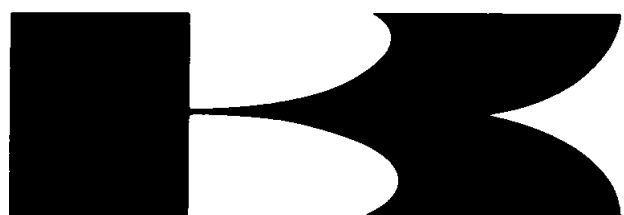

**Kawasaki**

**JETSKI**  
watercraft®

**ULTRA150**



# **JET SKI® Watercraft Service Manual**

# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Periodic Maintenance</b>	<b>2</b>
<b>Fuel System</b>	<b>3</b>
<b>Engine Lubrication System</b>	<b>4</b>
<b>Exhaust System</b>	<b>5</b>
<b>Engine Top End</b>	<b>6</b>
<b>Engine Removal/Installation</b>	<b>7</b>
<b>Engine Bottom End</b>	<b>8</b>
<b>Cooling and Bilge System</b>	<b>9</b>
<b>Drive System</b>	<b>10</b>
<b>Pump and Impeller</b>	<b>11</b>
<b>Steering</b>	<b>12</b>
<b>Hull/Engine Hood</b>	<b>13</b>
<b>Electrical System</b>	<b>14</b>
<b>Storage</b>	<b>15</b>
<b>Appendix</b>	<b>16</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.

## LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) perminute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

**Read OWNER'S MANUAL before operating.**