

(B7400 · B7500)



■ CONTENTS I

TO THE READER SAFETY INSTRUCTIONS SPECIFICATIONS DIMENSIONS

G GENERAL

1 ENGINE

MECHANISM SERVICING

2 CLUTCH

MECHANISM SERVICING

3 TRANSMISSION MECHANISM

SERVICING

4 REAR AXLE

MECHANISM SERVICING 5 BRAKES

MECHANISM SERVICING

6 FRONT AXLE

MECHANISM SERVICING

7 STEERING

MECHANISM

SERVICING

B HYDRAULIC SYSTEM MECHANISM

SERVICING

9 ELECTRICAL SYSTEM

MECHANISM SERVICING

NOTE: Please click the item to which you want to refer. When returning the index, click the arrow \blacksquare on the tool bar which introduces to the first page.

· The code No. of these Workshop Manuals is as follows.

WSM for North America:No.97897-12490

Get the complete manual

TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of KUBOTA Tractor B7400, B7500. It is divided into two parts, "Mechanism" and "Servicing" for each section.

Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Servicing

Under the heading "General" section comes general precautions, check and maintenance and special tools. Other section, there are troubleshooting, servicing specification lists, checking and adjusting, disassembling and assembling, and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information, illustrations and specifications contained in this manual are based on the latest production information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

January 2000

© KUBOTA Corporation 2000

12490**Z**00010