# WORKSHOP MANUAL TRACTOR BX22 [LA210 FRONT LOADER] [BT600 BACKHOE]

Kubota

# TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of KUBOTA Tractor BX22, KUBOTA Front Loader LA210 and KUBOTA Backhoe BT600. It is divided into two parts, "Mechanism" and "Servicing" for each section.

## ■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel engine / Tractor Mechanism Workshop Manual (Code No. 97897-01872 / 97897-18200) for the one which has not been described to this workshop manual.

# ■ Servicing

The heading "General" includes general precautions, check and maintenance and special tools. Other section, there are troubleshooting, servicing specification lists, checking and adjusting, disassembling and assembling, and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

March 2002

© KUBOTA Corporation 2002