WORKSHOP MANUAL TRACTOR

L3240-3,L3540-3,L3940-3,L4240-3, L4740-3,L5040-3,L5240-3,L5740-3

Kubota

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the KUBOTA Tractor L3240-3, L3540-3, L3940-3, L4240-3, L4740-3, L5040-3, L5240-3 and L5740-3. It contains 4 parts: "Information", "General", "Mechanism" and "Servicing".

Information

This section contains information below.

- Safety First
- · Safety Decal
- · Specification
- · Dimension

■ General

This section contains information below.

- · Engine Identification
- · Model Identification
- · General Precautions
- · Maintenance Check List
- · Check and Maintenance
- Special Tools

■ Mechanism

This section contains information on the struction and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of the Workshop Manual (Code No. 9Y021-01870 / 9Y021-18200) for the diesel engine / tractor mechanism that this workshop manual does not include.

Servicing

This section contains information below.

- Troubleshooting
- · Servicing Specifications
- · Tightening Torques
- · Checking, Disassembling and Servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

November, 2009

© KUBOTA Corporation 2009