

WORKSHOP MANUAL

M5640SU

Kybota

KiSC issued 07, 2009 A

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the M5640SU and M5640DT-SU. It contains 4 parts: "Information", "General", "Mechanism" and "Servicing".

Information

This section contains information below.

- Safety First
- Safety Label
- Specification
- Dimension

General

This section contains information below.

- Engine Identification
- Model Identification
- · General Precautions
- Maintenance Check List
- · Check and Maintenance
- · Special Tools

Mechanism

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-01870 / 9Y021-18200) for the diesel engine / tractor mechanism that this workshop manual does not include.

Servicing

This section contains information below.

- Troubleshooting
- Servicing Specifications
- · Tightening Torques
- Checking, Disassembling and Servicing

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

July, 2009

© KUBOTA Corporation 2009