

WSM

WORKSHOP MANUAL
TRACTOR

M8560, M9960

Kubota

[Click here to get the complete manual](#)

TO THE READER

This Workshop Manual tells the servicing personnel about the mechanism, servicing and maintenance of the M8560 and M9960. It contains 4 parts: "**Information**", "**General**", "**Mechanism**" and "**Servicing**".

■ **Information**

This section primarily contains information below.

- Safety First
- Safety Decal
- Specification
- Dimension

■ **General**

This section primarily contains information below.

- Engine Identification
- Model Identification
- General Precautions
- Maintenance Check List
- Check and Maintenance
- Special Tools

■ **Mechanism**

This section contains information on the structure and the function of the unit. Before you continue with the subsequent sections, make sure that you read this section.

Refer to the latest version of Workshop Manual (Code No. 9Y021-01870 / 9Y021-18200) for the diesel engine / tractor mechanism that this workshop manual does not include.

■ **Servicing**

This section primarily contains information below.

- Troubleshooting
- Servicing Specifications
- Tightening Torques
- Checking, Disassembling and Servicing

Regarding the servicing of Common Rail System (CRS), refer to "DIAGNOSIS MANUAL" (9Y111-01920).

Regarding the servicing of Diesel Particulate Filter (DPF), refer to "DIESEL PARTICULATE FILTER HANDLING MANUAL" (9Y111-08130).

All illustrations, photographs and specifications contained in this manual are of the newest information available at the time of publication.

KUBOTA reserves the right to change all information at any time without notice.

Since this manual includes many models, information or illustrations and photographs can show more than one model.

August, 2012

© KUBOTA Corporation 2012