

WSM

WORKSHOP MANUAL
TRACTOR
L39

[TL1000 FRONT LOADER]
[BT1000 BACKHOE]

Kubota

[Click here to get the complete manual](#)

TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of KUBOTA Tractor L39. It is divided into three parts, "General", "Mechanism" and "Servicing" for each section.

■ General

Information on the tractor identification, the general precautions, maintenance check list, check and maintenance and special tools are described.

■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel Engine / Tractor Mechanism Workshop Manual (Code No. 97897-01870 / 97897-18200) for the one which has not been described to this workshop manual.

■ Servicing

Information on the troubleshooting, servicing specification lists, tightening torque, checking and adjusting, disassembling and assembling and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

February 2005

© KUBOTA Corporation 2005