

[CLICK HERE FOR  
TABLE OF  
CONTENTS](#)



# TA30 Articulated Dumptruck Service Manual



[CLICK HERE TO RETURN TO  
MAIN LIBRARY INDEX](#)

TECHNICAL PUBLICATIONS DEPARTMENT  
TEREX EQUIPMENT LIMITED  
MOTHERWELL, SCOTLAND ML1 5RY  
REF. NO. SM 775

## TABLE OF CONTENTS

| Section No. | Description   | SM No.     |
|-------------|---|------------|
| <b>000</b>  | <b>GENERAL INFORMATION</b>                          |            |
| 0000        | Technical Data - TA30                               | 1528       |
| <b>100</b>  | <b>CHASSIS</b>                                      |            |
| 0010        | Frames  | 1462 Rev 1 |
| 0020        | Articulation and Oscillation Pivot                  | 1529       |
| 0040        | Hood and Mounting - Pre March 1999 Production       | 1530       |
| 0040        | Hood and Mounting - From March 1999 Production      | 1805       |
| 0070        | Fenders and Mounting - Pre June 1999 Production     | 1531       |
| 0070        | Fenders and Mounting - From June 1999 Production    | 1809       |
| <b>110</b>  | <b>ENGINE</b>                                       |            |
| 0030        | Engine and Mounting - Pre March 1999 Production     | 1532       |
| 0030        | Engine and Mounting - From March 1999 Production    | 1810       |
| 0040        | Kysor DST Fan                                       | 1518       |
| 0050        | Air Cleaner - Pre May 1999 Production               | 1468       |
| 0050        | Air Cleaner - From May 1999 Production              | 1811       |
| <b>120</b>  | <b>TRANSMISSION</b>                                 |            |
| 0010        | Transmission and Mounting                           | 1533 Rev 1 |
| <b>130</b>  | <b>DRIVELINES</b>                                   |            |
| 0010        | Front and Rear Drivelines                           | 1534       |
| <b>140</b>  | <b>FRONT AXLE GROUP</b>                             |            |
| 0020        | Axle Group (Hub) (Refer to Section 160-0030)        | -          |
| 0040        | Wheel Rim and Tyre (Refer to Section 160-0050)      | -          |
| 0060        | Differential Drive Head (Refer to Section 160-0020) | -          |
| <b>150</b>  | <b>CENTRE AXLE</b>                                  |            |
| 0020        | Differential Drive Head                             | 1472       |
| <b>160</b>  | <b>REAR AXLE GROUP</b>                              |            |
| 0020        | Differential Drive Head                             | 1473       |
| 0030        | Axle Group (Hub)                                    | 1474       |
| 0050        | Wheel Rim and Tyre                                  | 1475       |
| <b>165</b>  | <b>BRAKE PARTS</b>                                  |            |
| 0010        | Brake Parts - Rear                                  | 1476       |
| 0020        | Brake Parts - Front (Refer to Section 165-0010)     | -          |
| <b>170</b>  | <b>PARKING BRAKE</b>                                |            |
| 0010        | Parking Brake and Mounting                          | 1477       |
| <b>180</b>  | <b>SUSPENSION SYSTEM</b>                            |            |
| 0020        | Front Suspension                                    | 1479       |
| 0021        | Air Spring  | 1480       |
| 0022        | Levelling Valve                                     | 1481       |
| 0040        | Rear Suspension                                     | 1482       |
| <b>190</b>  | <b>ELECTRICAL SYSTEM</b>                            |            |
| 0000        | Circuit Diagrams - Pre June 1999 Production         | 1535       |
| 0000        | Circuit Diagrams - From June 1999 Production        | 1812       |
| 0270        | Switches and Sensors                                | 1536       |

## TABLE OF CONTENTS

| Section No. | Description   | SM No.     |
|-------------|---|------------|
| <b>200</b>  | <b>FUEL SYSTEM</b>  |            |
| 0040        | Fuel Tank, Lines and Mounting                                   | 1537       |
| <b>210</b>  | <b>COOLING SYSTEM</b>   |            |
| 0000        | Cooling System - Pre March 1999 Production                      | 1538       |
| 0000        | Cooling System - From March 1999 Production                     | 1818       |
| 0040        | Radiator and Mounting - Pre March 1999 Production               | 1487       |
| 0040        | Radiator, Header Tank and Mounting - From March 1999 Production | 1813       |
| 0060        | Transmission Oil Cooler - Pre June 1999 Production              | 1488       |
| 0060        | Transmission Oil Cooler - From June 1999 Production             | 1814       |
| 0100        | Hydraulic Oil Cooler  | 1556       |
| <b>220</b>  | <b>STEERING SYSTEM</b>  |            |
| 0000        | Steering System Schematic                                       | 1817       |
| 0050        | Steering Pump   | 1540       |
| 0070        | Accumulator Valve   | 1541       |
| 0080        | Accumulator   | 1542       |
| 0090        | Steering Valve  | 1543       |
| 0120        | Steering Cylinder   | 1495       |
| 0130        | Crossover Relief Valve  | 1544       |
| 0150        | Steering Filter   | 1545       |
| <b>230</b>  | <b>BODY SYSTEM</b>  |            |
| 0000        | Body System Schematic   | 1816       |
| 0040        | Hydraulic Tank  | 1547       |
| 0050        | Hydraulic Pump  | 1548       |
| 0060        | Body Control Valve  | 1549       |
| 0081        | Body Control Joystick   | 1411       |
| 0121        | Pilot Supply Valve  | 1550       |
| 0130        | Body Cylinder   | 1501       |
| <b>250</b>  | <b>BRAKING SYSTEM</b>   |            |
| 0000        | Air Braking System Schematic - Pre June 1999 Production         | 1551       |
| 0000        | Air Braking System Schematic - From June 1999 Production        | 1815       |
| 0000        | Hydraulic Braking System Schematic                              | 1503       |
| 0070        | Treadle Valve   | 1552       |
| 0170        | Air Tanks and Mounting  | 1553       |
| 0171        | Pressure Protection Valve                                       | 1561       |
| 0172        | Relief Valve  | 1562       |
| 0173        | Check Valve   | 1563       |
| 0190        | Park Emergency Control Valve                                    | 1554       |
| 0200        | Air Drier - Pre June 1999 Production                            | 1555       |
| 0200        | Air Drier - From June 1999 Production                           | 1507 Rev 1 |
| 0260        | Pressure Converter  | 1508       |
| 0270        | Air Breather  | 1509       |
| 0280        | Relay Emergency Valve   | 1510       |

## TABLE OF CONTENTS

| Section No. | Description                                 | SM No.     |
|-------------|---|------------|
| <b>260</b>  | <b>OPERATORS COMPARTMENT</b>                |            |
| 0010        | Cab and Mounting                            | 1614       |
| 0090        | Driver Seat and Mounting                    | 1804       |
| 0130        | Air Conditioning                            | 1557       |
| <b>270</b>  | <b>BODY</b>                                 |            |
| 0010        | Body and Mounting                           | 1558       |
| <b>300</b>  | <b>MISCELLANEOUS</b>                        |            |
| 0020        | Lubrication System                          | 1559 Rev 2 |
| 0070        | Service Tools                               | 1560 Rev 1 |
| 0080        | Axle Bolt and Nut Torque Specifications     | 1521       |
| 0080        | Standard Bolt and Nut Torque Specifications | 1238       |
| 0090        | Unit Storage                                | 1239       |

\* \* \* \*