



Service Manual

	Serial Number Range
S-80	from S8008-8000
S-85	from S8508-8001
S-80X	from S80X10-8500

Part No. 122985

Rev D

February 2012

Table of Contents

Introduction

Important Information	<i>ii</i>
Serial Number Information	<i>ii</i>
Serial Number Legend	<i>iii</i>

Section 1

Safety Rules

General Safety Rules	<i>v</i>
----------------------------	----------

Section 2

Rev

Specifications

Machine Specifications	2 - 1
Performance Specifications	2 - 2
Hydraulic Oil Specifications	2 - 2
Hydraulic Component Specifications	2 - 3
Valve Coil Resistance Specifications	2 - 4
Continental TME27 Engine Specifications	2 - 5
Deutz TD2011L04i Engine Specifications	2 - 6
Perkins 804D-33 Engine Specifications	2 - 7
Machine Torque Specifications	2 - 8
Manifold Component Specifications	2 - 8
Hydraulic Hose and Fitting Torque Specifications	2 - 9
SAE and Metric Torque Specifications	2 - 10

 TABLE OF CONTENTS

Section 3	Rev	Scheduled Maintenance Procedures	
		Introduction	3 - 1
		Pre-Delivery Preparation	3 - 3
		Maintenance Inspection Report	3 - 5
		Checklist A Procedures	
	A-1	Inspect the Manuals and Decals	3 - 7
	A-2	Perform Pre-operation Inspection	3 - 8
	A-3	Perform Engine Maintenance	3 - 8
	A-4	Perform Function Tests	3 - 9
	A-5	Test the Oscillate Axle	3 - 9
	A-6	Check the High Pressure Hydraulic Filter Condition Indicator	3 - 10
	A-7	Perform 30 Day Service	3 - 10
	A-8	Perform Engine Maintenance - Deutz and Continental Models	3 - 11
	A-9	Inspect the Fuel Filter/Water Separator - Diesel Models	3 - 11
	A-10	Grease the Turntable Rotation Bearing and Rotate Gear	3 - 13
	A-11	Perform Engine Maintenance	3 - 14
	A-12	Replace the Drive Hub Oil	3 - 15
	A-13	Perform Engine Maintenance - Perkins Models	3 - 17
		Checklist B Procedures	
	B-1	Inspect the Battery(s)	3 - 18
	B-2	Inspect the Electrical Wiring	3 - 19
	B-3	Test the Key Switch	3 - 21
	B-4	Check the Exhaust System	3 - 21

TABLE OF CONTENTS

Section 3	Rev	Scheduled Maintenance Procedures, continued	
	B-5	Inspect the Engine Air Filter	3 - 22
	B-6	Check the Oil Cooler and Cooling Fins - Deutz Models	3 - 23
	B-7	Confirm the Proper Brake Configuration	3 - 24
	B-8	Inspect the Tires, Wheels and Lug Nut Torque	3 - 24
	B-9	Check the Drive Hub Oil Level and Fastener Torque	3 - 25
	B-10	Check and Adjust the Engine RPM	3 - 26
	B-11	Perform Engine Maintenance	3 - 28
	B-12	Check the Oscillate Directional Valve Linkage	3 - 28
	B-13	Test the Ground Control Override	3 - 29
	B-14	Test the Platform Self-leveling	3 - 29
	B-15	Test the Engine Idle Select Operation	3 - 30
	B-16	Test the Fuel Select Operation - Gasoline/LPG Models	3 - 31
	B-17	Test the Drive Enable System	3 - 32
	B-18	Test the Drive Brakes	3 - 33
	B-19	Test the Drive Speed - Stowed Position	3 - 33
	B-20	Test the Drive Speed - Raised or Extended Position	3 - 34
	B-21	Test the Alarm Package (if equipped) and the Descent Alarm	3 - 35
	B-22	Inspect the Fuel and Hydraulic Tank Cap Venting Systems	3 - 36
	B-23	Perform Hydraulic Oil Analysis	3 - 37
	B-24	Inspect the Boom Extend/Retract Cables	3 - 37
		Checklist C Procedures	
	C-1	Perform Engine Maintenance - Deutz and Perkins Models	3 - 39
	C-2	Grease the Platform Overload Mechanism (if equipped)	3 - 39
	C-3	Test the Platform Overload System (if equipped)	3 - 40
	C-4	Replace the Engine Air Filter Element - Deutz and Perkins Models	3 - 43
	C-5	Replace the Fuel Filter/ Water Separator Element - Diesel Models	3 - 43
	C-6	Check the Safety Envelope Limit Switches and Angle Sensor, S-80X	3 - 45