

Genie®



Service Manual

Third Edition
First Printing
Part No. 65196

STM-60

STM-65

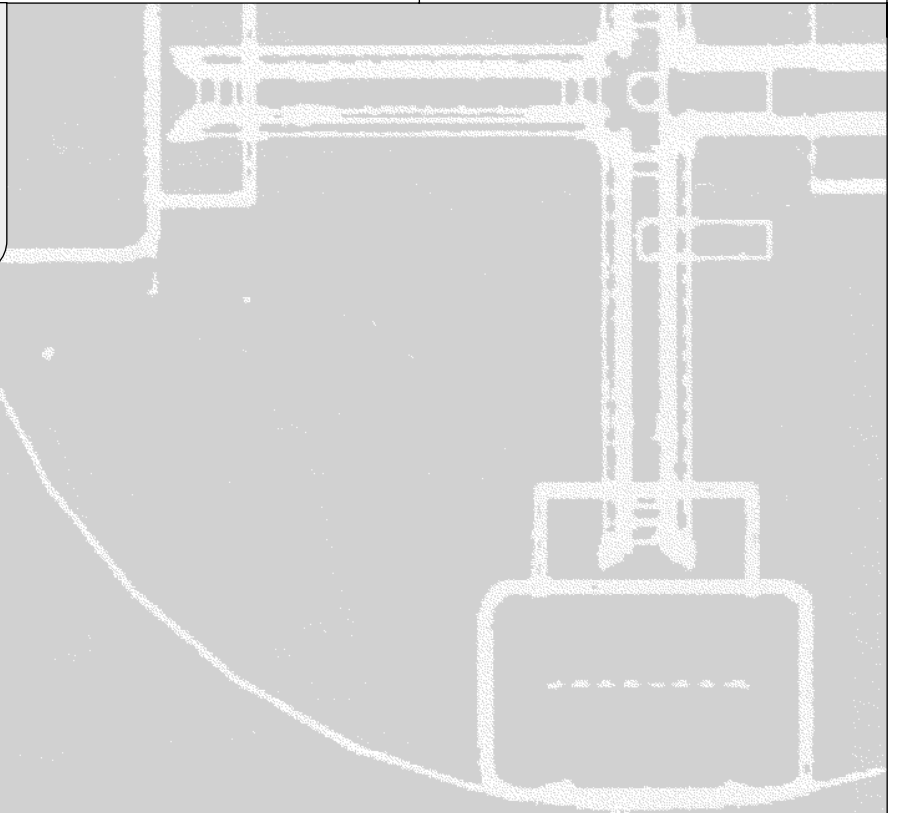


Table of Contents

Introduction

Important Information	<i>ii</i>
-----------------------------	-----------

Section One **Safety Rules**

General Safety Rules	<i>iii</i>
----------------------------	------------

Section Two **Specifications**

Machine Specifications	2 - 1
Performance Specifications	2 - 2
Hydraulic Specifications	2 - 3
Ford Engine LRG 425 EFI Specifications	2 - 4
Deutz Engine F4L 1011F Specifications	2 - 5
Perkins Engine 704-30 Specifications	2 - 6
Hydraulic Hose and Fitting Torque Specifications	2 - 7

Section Three **Theory of Operation**

Power Source	3 - 1
Hydraulic System	3 - 1
Electrical System	3 - 1
Limit Switches	3 - 2
Machine Controls	3 - 2

 TABLE OF CONTENTS

Section Four	Scheduled Maintenance Procedures	
	Introduction	4 - 1
	Maintenance Inspection Report	4 - 3
A-1	Inspect the Operator's and Safety Manuals	4 - 5
A-2	Inspect the Decals and Placards	4 - 5
A-3	Inspect for Damage and Loose or Missing Parts	4 - 6
A-4	Check the Engine Oil Level	4 - 7
A-5	Check the Engine Coolant Level - Liquid Cooled Models	4 - 8
A-6	Check for Fuel Leaks	4 - 8
A-7	Check the Hydraulic Oil Level	4 - 9
A-8	Check for Hydraulic Leaks	4 - 10
A-9	Check the Tire Pressure	4 - 10
A-10	Test the Oscillate Axle (if equipped)	4 - 11
A-11	Test the Platform and Ground Controls	4 - 12
A-12	Test the Auxiliary Power Operation	4 - 13
A-13	Test the Tilt Sensor	4 - 14
A-14	Test the Limit Switches	4 - 14
A-15	Drain the Fuel Filter/Water Separator - Diesel Models	4 - 17
A-16	Inspect the Engine Air Filter	4 - 19
A-17	Perform 30 Day Service	4 - 20
A-18	Inspect the Radiator - Liquid Cooled Models	4 - 20
A-19	Check the Battery	4 - 21
A-20	Replace the Engine Oil and Filter - Gasoline/LPG Models	4 - 22
A-21	Inspect the Electrical Wiring	4 - 24
A-22	Check the Oil Cooler and Cooling Fins - Deutz Diesel Models	4 - 25
A-23	Check the Engine Belt - Gasoline/LPG and Perkins Diesel Models	4 - 26
A-24	Replace the Fuel Filters - Gasoline/LPG Models	4 - 28

Section Four	Scheduled Maintenance Procedures, continued	
B-1	Check the Exhaust System	4 - 30
B-2	Check the Hydraulic Tank Return Filter Condition Indicator	4 - 31
B-3	Inspect the Tires and Wheels (including lug nut torque)	4 - 32
B-4	Confirm the Proper Brake Configuration	4 - 33
B-5	Check the Oil Level in the Drive Hubs	4 - 34
B-6	Check and Adjust the Engine RPM	4 - 36
B-7	Test the Key Switch	4 - 37
B-8	Test the Emergency Stop Buttons	4 - 38
B-9	Test the Ground Control Override	4 - 38
B-10	Check the Directional Valve Linkage	4 - 39
B-11	Test the Platform Self-leveling	4 - 39
B-12	Test the Horn	4 - 40
B-13	Test the Foot Switch	4 - 40
B-14	Test the Engine Idle Select Operation	4 - 41
B-15	Test the Fuel Select Operation - Gasoline/LPG Models	4 - 42
B-16	Test the Drive Enable System	4 - 43
B-17	Test the Drive Brakes	4 - 44
B-18	Test the Drive Speed - Stowed Position	4 - 45
B-19	Test the Drive Speed - Raised or Extended Position	4 - 46
B-20	Test the Alarm Package (if equipped)	4 - 47
B-21	Perform Hydraulic Oil Analysis	4 - 48
B-22	Replace the Hydraulic Tank Return Filter	4 - 48
B-23	Inspect the Fuel Tank Cap Venting System	4 - 49
B-24	Replace the Engine Air Filter Element	4 - 50
B-25	Replace the Spark Plugs - Gasoline/LPG Models	4 - 51

 TABLE OF CONTENTS

Section Four	Scheduled Maintenance Procedures, continued	
	C-1 Check the Engine Belt - Deutz Diesel Models	4 - 52
	C-2 Check the Engine Valve Clearances - Deutz Diesel Models	4 - 53
	C-3 Replace the Fuel Filter/Water Separator Element - Perkins Diesel Models ...	4 - 53
	C-4 Replace the Fuel Filter Element - Perkins Diesel Models	4 - 55
	C-5 Replace the Engine Oil and Filter - Perkins Diesel Models	4 - 57
	C-6 Check the Glow Plugs - Perkins Diesel Models	4 - 58
	C-7 Check the Specific Gravity of Engine Coolant - Liquid Cooled Models	4 - 59
	C-8 Replace the PCV Valve - Gasoline/LPG Models	4 - 60
	D-1 Check the Boom Wear Pads	4 - 61
	D-2 Check the Free-wheel Configuration	4 - 61
	D-3 Check the Turntable Rotation Bearing Bolts	4 - 63
	D-4 Grease the Turntable Rotation Bearing and Rotate Gear	4 - 64
	D-5 Replace the Drive Hub Oil	4 - 64
	D-6 Replace the Drive Loop Hydraulic Filter	4 - 66
	D-7 Replace the Engine Oil and Filter - Deutz Diesel Models	4 - 67
	D-8 Clean the Fuel Pump Strainer - Deutz Diesel Models	4 - 68
	D-9 Replace the Diesel Fuel Filter/Water Separator - Deutz Diesel Models	4 - 69
	D-10 Change the Fuel Hoses - Deutz Diesel Models	4 - 70
	D-11 Check the Engine Valve Clearances - Perkins Diesel Models	4 - 72
	D-12 Clean the Engine Breather Assembly - Perkins Diesel Models	4 - 72
	E-1 Test or Replace the Hydraulic Oil	4 - 73
	E-2 Change or Recondition the Engine Coolant - Liquid Cooled Models	4 - 75
	E-3 Change the Fuel Hoses - Gasoline/LPG Models	4 - 76
	E-4 Replace the Engine Air Breather - Perkins Diesel Models	4 - 78
	E-5 Grease the Steer Axle Wheel Bearings, 2WD Models	4 - 78
	E-6 Check the Fuel Injectors - Perkins Diesel Models	4 - 80

Section Five	Troubleshooting Flow Charts	
	Introduction	5 - 1
	Fault Code Chart	5 - 3
1	Engine Will Not Crank Over	5 - 8
2	Engine Cranks Over But Will Not Start - Gasoline/LPG Models	5 - 10
2A	Engine Runs While Cranking then Dies- Gasoline/LPG Models	5 - 12
3	Engine Cranks Over But Will Not Start - Diesel Models	5 - 13
4	Engine Will Not Start On LPG, But Will Start On Gasoline - Gasoline/LPG Models	5 - 16
5	Engine Will Not Start On Gasoline, But Will Start On LPG - Gasoline/LPG Models	5 - 18
6	Engine High Idle Inoperative - Gasoline/LPG Models	5 - 19
7	Engine Low Idle Inoperative - Gasoline/LPG Models	5 - 20
8	Engine High Idle Inoperative - Diesel Models	5 - 21
9	Engine Low Idle Inoperative - Diesel Models	5 - 23
10	All Functions Inoperative, Engine Starts and Runs	5 - 24
11	All Lift and Steer Functions Inoperative, Drive Functions Operational	5 - 25
12	Ground Controls Inoperative, Platform Controls Operate Normally	5 - 26
13	Platform Controls Inoperative, Ground Controls Operate Normally	5 - 27
14	Boom Up Function Inoperative	5 - 28
15	Boom Down Function Inoperative	5 - 31
16	Boom Extend Function Inoperative	5 - 34
17	Boom Retract Function Inoperative	5 - 36
18	Turntable Rotate Left Function Inoperative	5 - 38
19	Turntable Rotate Right Function Inoperative	5 - 42

 TABLE OF CONTENTS

Section Five	Troubleshooting Flow Charts, continued	
20	All Platform Leveling Functions Inoperative	5 - 46
21	Platform Level Up Function Inoperative	5 - 47
22	Platform Level Down Function Inoperative	5 - 49
23	Platform Rotate Left Function Inoperative	5 - 51
24	Platform Rotate Right Function Inoperative	5 - 53
25	Oscillate Function Inoperative	5 - 55
26	Jib Boom Up Function Inoperative	5 - 56
27	Jib Boom Down Function Inoperative	5 - 58
28	Steer Left Function Inoperative	5 - 60
29	Steer Right Function Inoperative	5 - 62
30	All Drive Functions Inoperative, All Other Functions Operate Normally	5 - 64
31	Drive Forward Or Reverse Function Inoperative	5 - 67
32	Traction Function Inoperative	5 - 68
33	Machine Will Not Drive At Full Speed	5 - 69
34	Machine Drives At Full Speed With Platform Raised or Extended	5 - 70
35	Drive Enable System Is Malfunctioning	5 - 71
36	Auxiliary Functions Inoperative	5 - 72

TABLE OF CONTENTS

Section Six	Schematics	
	Introduction	6 - 1
	Electrical Components	6 - 2
	Electrical Symbols Legend	6 - 4
	Abbreviation Legend	6 - 5
	Engine Wire Harness - Gasoline/LPG Models	6 - 7
	Electrical Schematic - Gasoline/LPG Models - Rev B	6 - 8
	Ground Control Box Wiring Diagram - Gasoline/LPG Models	6 - 10
	Platform Control Box Wiring Diagram - Gasoline/LPG Models	6 - 11
	Electrical Schematic - Deutz Diesel Models	6 - 12
	Ground Control Box Wiring Diagram - Deutz Diesel Models	6 - 14
	Platform Control Box Wiring Diagram - Deutz Diesel Models	6 - 15
	Electrical Schematic - Perkins Diesel Models	6 - 16
	Ground Control Box Wiring Diagram - Perkins Diesel Models	6 - 18
	Platform Control Box Wiring Diagram - Perkins Diesel Models	6 - 19
	Hydraulic Symbols Legend	6 - 21
	2WD Hydraulic Schematic - Non-oscillating axle	6 - 22
	2WD Hydraulic Schematic - Oscillating axle	6 - 23
	4WD Hydraulic Schematic - Non-oscillating axle	6 - 24
	4WD Hydraulic Schematic - Oscillating axle	6 - 25

TABLE OF CONTENTS

Section Seven	Repair Procedures	
	Introduction	7 - 1
	Platform Controls	
1-1	Joystick Controllers	7 - 2
1-2	Horsepower Limiter Board	7 - 9
1-3	Foot Switch	7 - 11
1-4	Toggle Switches	7 - 12
	Platform Components	
2-1	Platform	7 - 13
2-2	Platform Leveling Slave Cylinder	7 - 13
2-3	Platform Rotator	7 - 15
	Jib Boom Components, S-65 Models	
3-1	Jib Boom	7 - 18
3-2	Jib Boom Lift Cylinder	7 - 19
	Boom Components	
4-1	Cable Track	7 - 20
4-2	Boom	7 - 23
4-3	Boom Lift Cylinder	7 - 26
4-4	Extension Cylinders	7 - 27
4-5	Platform Leveling Master Cylinder	7 - 29
	Turntable Covers	
5-1	Turntable Covers	7 - 30

Section Seven	Repair Procedures, continued	
	Deutz Engine F4L 1011F	
6-1	RPM Adjustment	7 - 31
6-2	Flex Plate	7 - 31
6-3	Oil Temperature and Oil Pressure Gauges	7 - 32
	Perkins Engine 704-30	
7-1	RPM Adjustment	7 - 33
7-2	Flex Plate	7 - 33
7-3	Coolant Temperature and Oil Pressure Gauges	7 - 34
	Ford Engine LRG-425 EFI	
8-1	Timing Adjustment	7 - 35
8-2	Flex Plate	7 - 35
8-3	Coolant Temperature and Oil Pressure Gauges	7 - 36
	Ground Controls	
9-1	Control Relays	7 - 38
9-2	Toggle Switches, See 1-4, <i>Toggle Switches</i>	7 - 39
9-3	Wago® Components	7 - 39
9-4	Engine Fault Codes - Ford Models	7 - 39
	Hydraulic Pumps	
10-1	Lift/Steer Pump	7 - 41
10-2	Drive Pump	7 - 42

 TABLE OF CONTENTS

Section Seven Repair Procedures, continued**Manifolds**

11-1	Function Manifold Components	7 - 44
11-2	Valve Adjustments - Function Manifold	7 - 48
11-3	Turntable Rotation Manifold Components	7 - 50
11-4	Oscillate Manifold Components	7 - 51
11-5	Valve Adjustments - Oscillate Manifold	7 - 52
11-6	Directional Valve Manifold Components	7 - 53
11-7	Steer Manifold Components, Oscillating Models	7 - 55
11-8	Steer Manifold Components, Non-oscillating Models	7 - 56
11-9	2WD Drive Manifold Components	7 - 57
11-10	Valve Adjustments, 2WD Drive Manifold	7 - 58
11-11	4WD Drive Manifold Components	7 - 60
11-12	Valve Adjustments, 4WD Drive Manifold	7 - 62
11-13	Jib Boom/Platform Rotate Manifold Components, S-65 Models	7 - 63

Fuel and Hydraulic Tanks

12-1	Fuel Tank	7 - 64
12-2	Hydraulic Tank	7 - 65

Turntable Rotation Components

13-1	Rotation Hydraulic Motor	7 - 68
------	--------------------------------	--------

Section Seven	Repair Procedures, continued	
	2WD Steering Axle Components	
14-1	Yoke and Hub	7 - 71
14-2	Steering Cylinders	7 - 73
14-3	Tie Rod	7 - 74
	4WD Steering Axle Components	
15-1	Yoke and Hub	7 - 75
15-2	Steering Cylinders, See 14-2, <i>Steering Cylinders</i>	7 - 76
15-3	Tie Rod, See 14-3, <i>Tie Rod</i>	7 - 76
	Oscillating Axle Components	
16-1	Oscillating Axle Lock-out Cylinders	7 - 77
	Non-steering Axle Components	
17-1	Drive Motor	7 - 78
17-2	Drive Hub	7 - 79
17-3	Wheel Brake	7 - 80