## PARTS MANUAL TL10 BU6Z003-0-0 S/N 201000002-UP

PARTS MANUAL

## Contents

UNDERCARRIAGE
TRACK ROLLER A
TRACK ROLLER B
FRONT IDLER
TRACK ADJUSTER
TRAVEL DEVICE9
CRAWLER BELT
MAIN FRAME & CONTROL LEVER
FRAME
ARM STOPPER
HOOK
OPERATION LEVER & STAND
PIPING; OPERATION LEVER
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 1
PIPING; OPERATION LEVER (ISO-H pattern) (add-on type) 2
FIFTING, OF ENATION LEVER (130-11 pattern) (add-on type) 2
ENGINE & ELECTRICAL SYSTEM
ENGINE & ACCESSORIES (1/4) 1
ENGINE & ACCESSORIES (1/4) 2
ENGINE & ACCESSORIES (1/4) 3
ENGINE & ACCESSORIES (1/4) (with CCV heater) 1
ENGINE & ACCESSORIES (1/4) (with CCV heater) 2
ENGINE & ACCESSORIES (1/4) (with CCV heater) 3
ENGINE & ACCESSORIES (2/4)
ENGINE & ACCESSORIES (3/4)
ENGINE & ACCESSORIES (4/4)
DRAIN PLUG
CONTROL BOX; R.H
CONTROL BOX; R.H. (with CCV heater)
CONTROL BOX; L.H
CONTROL BOX; L.H. (hydraulic quick hitch type)
ENGINE CONTROL
FOOT ACCELERATOR
ELECTRICAL (1/2) (201000002-201001716) 1
ELECTRICAL (1/2) (201000002-201001716) 2
ELECTRICAL (1/2) (201000002-201001716) 3
ELECTRICAL (1/2) (201000002-201001716) 4
ELECTRICAL (1/2) (201000002-201001716) 5
ELECTRICAL (1/2) (201001717-) 1
ELECTRICAL (1/2) (201001717 ) 2
ELECTRICAL (1/2) (201001717 ) 3
ELECTRICAL (2/2) (201000002-201001716)
ELECTRICAL (2/2) (201001717-)
ELECTRICAL (CAB)
ELECTRICAL (CANOPY)
BATTERY
REAR LAMP
MAINTENANCE LIGHT SOCKET
WINDOW WASHER
RADIO
HYDRAULIC PIPING & TANK
VALVE & ACCESSORIES (1/3)
VALVE & ACCESSORIES (1/3) (high flow) 1
VALVE & ACCESSORIES (1/3) (high flow) 2
VALVE & ACCESSORIES (2/3)
VALVE & ACCESSORIES (3/3)

PIPING 1	37
PIPING 2	
PIPING (high flow) 1	
PIPING (high flow) 2	.49
RIDE CONTROL	.53
PUMP DRIVE	
GEAR PUMP DRIVE (HIGH FLOW)	
,	
HYDRAULIC TANK	
FUEL TANK & FUEL PIPING (1/2) 1       1	
FUEL TANK & FUEL PIPING (1/2) 2	.67
FUEL TANK & FUEL PIPING (2/2)	71
COVER & CAB	
COVER (1/3)	
COVER (2/3) (rear door)	
COVER (3/3) (engine hood)	.79
FLOOR FRAME	.81
SEAT (1/2)	
SEAT (2/2)	
SEAT (1/2) (with air suspension)	
SEAT BELT (THREE POINT SEAT BELT)	
SEAT SWITCH	.93
SAFETY BAR	.95
CANOPY MOUNT	
CANOPY 1	
CANOPY 2	
CANOPY 3	.07
CAB MOUNT	209
CAB (1/2) 1	13
CAB (1/2) 2	
CAB (1/2) 3	
CAB (1/2) 4	
CAB (1/2) 5	.25
CAB (2/2) (front door)	27
CAB FRONT DOOR POLYCARBONATE TYPE (2/2) (2/2)	29
CAB KIT (1/2) 1	
CAB KIT (1/2) 2	
CAB KIT (1/2) 3	
CAB KIT (1/2) 4	:37
CAB KIT (2/2) (front door)         2	39
DOOR KIT (1/2) POLYCARBONATE TYPE	41
DOOR KIT (2/2) POLYCARBONATE TYPE	
REAR MIRROR	
AIR CONDITIONER (1/5) (compressor)	
AIR CONDITIONER (2/5) (condenser)	
AIR CONDITIONER (3/5) (air conditioner unit)	55
AIR CONDITIONER (4/5)	57
AIR CONDITIONER (5/5)	
(4,2,	
ATTACHMENT	
ARM	
QUICK HITCH	
QUICK HITCH (hydraulic type) 1	67
QUICK HITCH (hydraulic type) 2	
QUICK HITCH (hydraulic type, with 3/4 coupler) 1	
QUICK HITCH (hydraulic type, with 3/4 coupler) 2	
PIPING; ARM 1	
PIPING; ARM 2	0
	.83
PIPING; ARM (with coupler) 1	

PIPING; ARM (high flow) 1	
PIPING; ARM (high flow) 2	
PIPING; ARM (high flow, with 3/4 coupler) 1	
PIPING; ARM (high flow, with 3/4 coupler) 2	
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 1	
PIPING; ARM (high flow, with coupler, hydraulic quick hitch type) 2	
2ND AUXILIARY LINE	
2ND AUXILIARY LINE (except for main aux. type)	31/
DECAL & TOOL	
DECAL (canopy) 1	310
DECAL (canopy) 2	
DECAL (canopy) 3	
DECAL (cab) 1	
DECAL (cab) 2	
DECAL (cab) 3	
DECAL (high flow)	
TOOL & ACCESSORIES	
PAINTED COLOR	359
HYDRAULIC DEVICE	
SERVICE TOOL	
CONTROL VALVE	
CONTROL VALVE (HIGH FLOW)	
BLOCK ASSY NO. 1	
BLOCK ASSY NO. 2	
BLOCK ASSY NO. 3	
RH PILOT VALVE	
LH PILOT VALVE	
HANDLE (WITH SLIDE SWITCH)  HANDLE (WITH 5 SWITCH)	
SUB VALVE	
SOLENOID VALVE; 1 BLOCK (201000002-201001488)	
SOLENOID VALVE; 1 BLOCK (20100002 20100100)	
SOLENOID VALVE; 1 BLOCK	
SOLENOID VALVE; 1 BLOCK	
ELECTRICAL PROPORTION VALVE	
SELECTOR VALVE (ISO-H PATTERN)	
SHUTTLE VALVE (ISO-H PATTERN)	397
LIFT ARM CYLINDER	399
BUCKET CYLINDER	401
QUICK HITCH CYLINDER	403
TRAVEL MOTOR (1/3) (reduction sec.)	
TRAVEL MOTOR (2/3) (motor sec.)	
TRAVEL MOTOR (3/3) (valve sec. )	
HYDRAULIC PUMP (1/5)	
HYDRAULIC PUMP (2/5)	
HYDRAULIC PUMP (3/5)	
HYDRAULIC PUMP (4/5)	
HYDRAULIC PUMP (5/5)	
GEAR PUMP (2 blocks)	
GEAR PUMP (high flow)	<del>4</del> 31
ENGINE V3800-CR-TE4B-TLTU1 (HIGH FLOW) EBC	
CRANK CASE (HIGH FLOW)	
CRANK CASE (HIGH FLOW)	433
OH DAN	
OIL PAN	435
OIL PAN	<del>4</del> 35

DIPSTICK AND GUIDE DIPSTICK AND GUIDE
CYLINDER HEAD CYLINDER HEAD
INLET VALVE AND EXHAUST VALVE INLET VALVE AND EXHAUST VALVE
ROCKER ARM SHAFT  ROCKER ARM SHAFT
HEAD COVER HEAD COVER
GEAR CASE
PISTON AND CRANKSHAFT  PISTON AND CRANKSHAFT
CAMSHAFT AND IDLE GEAR SHAFT  CAMSHAFT AND IDLE GEAR SHAFT
BEARING CASE COVER  BEARING CASE COVER
FLYWHEEL
SUPPLY PUMP         457
FUEL FILTER         459
FUEL FILTER         461
<b>FUEL PIPE</b> FUEL PIPE
SEPERATOR         465
INJECTION PIPE INJECTION PIPE
COMMON RAIL COMMON RAIL
ALTERNATOR AND PULLEY  ALTERNATOR AND PULLEY 471
ALTERNATOR (COMPONENT PARTS)  ALTERNATOR (COMPONENT PARTS)
### STARTER ### STARTER ### 475