

[Click here to get the complete manual](#)

INTRODUCTION

This service manual has been prepared to provide necessary information concerning the maintenance and repair procedures for the NISSAN FORKLIFT D01 and D02 series.

Any changes effected in the series after publication of this service manual will be announced in a technical bulletin. It is, therefore, recommended that each relevant technical bulletin be inserted in front of each section and be used together with the service manual as a reference.

If a new model requires different service method or has undergone a major change, revised sections will be issued to replace the applicable sections. Each revised section will include the description of how to service the parts for the former specifications. The publication of a revised section will be announced in the technical bulletin.

This service manual consists of nineteen sections as shown in the following table, which gives the updated symbols. When a revised service manual is issued, this "INTRODUCTION" sheet should be replaced with a revised one.

Section	Symbol
GENERAL INFORMATION	(GI)
MAINTENANCE	(MA)
ENGINE TUNE-UP (H20-II, H25, TD27 ENGINE)	(ET)
ENGINE MECHANICAL (H20-II, H25, TD27 ENGINE)	(EM)
ENGINE LUBRICATION & COOLING SYSTEMS (H20-II, H25, TD27 ENGINE)	(LC)
ENGINE FUEL (H20-II, H25, TD27 ENGINE)	(EF)
ENGINE ELECTRICAL (H20-II, H25, TD27 ENGINE)	(EE)
ENGINE REMOVAL	(ER)
AUTOMATIC TRANSMISSION	(AT)
DIFFERENTIAL CARRIER	(DF)
FRONT AXLE	(FA)
REAR AXLE	(RA)
BRAKE SYSTEM	(BR)
STEERING SYSTEM	(ST)
HYDRAULIC SYSTEM	(HD)
LOADING MECHANISM	(LM)
ENGINE CONTROL SYSTEM	(EC)
BODY & FRAME	(BF)
BODY ELECTRICAL	(BE)

Edition: November 1999

Printing: November 1999 (01)

Publication No. SM99E-D12SE0