

Click here to get the complete manual

INTRODUCTION

This service manual has been prepared to provide necessary information concerning the maintenance and repair work on the NISSAN FORKLIFT F03 series.

For H30 and SD33 engines, refer to the NISSAN FORKLIFT SERVICE MANUAL & TECHNICAL BULLETIN MODEL J15, H20, H30, SD22, SD33 ENGINE.

Any changes effected in the series after publication of this service manual will be announced in a technical bulletin. It is, therefore, recommended that each relevant technical bulletin be inserted in front of each section and be used together with the service manual as a reference.

If a new model requires different service method or has undergone a major change, revised sections will be issued to replace the applicable sections. Each revised section will include the description of how to service the parts for the former specifications. The publication of a revised section will be announced in the technical bulletin.

This service manual consists of twenty-one sections as shown in the following table, which gives the updated symbols. When a revised service manual is issued, this "INTRODUCTION" sheet should be replaced with a revised one.

Section	Symbol
GENERAL INFORMATION	(GI)
MAINTENANCE	(MA)
ENGINE TUNE-UP (P ENGINE)	(ET)
ENGINE MECHANICAL (P ENGINE)	(EM)
ENGINE LUBRICATION SYSTEM (P ENGINE)	(EL)
COOLING SYSTEM (P ENGINE)	(CO)
FUEL SYSTEM (P ENGINE)	(EF)
GOVERNOR SYSTEM (P ENGINE)	(GO)
ENGINE ELECTRICAL (P ENGINE)	(EE)
ENGINE REMOVAL	(ER)
AUTOMATIC TRANSMISSION	(AT)
DIFFERENTIAL CARRIER	(DF)
FRONT AXLE	(FA)
REAR AXLE	(RA)
BRAKE SYSTEM	(BR)
STEERING SYSTEM	(ST)
HYDRAULIC SYSTEM	(HD)
LOADING MECHANISM	(LM)
ENGINE CONTROL, FUEL & EXHAUST SYSTEMS	(FE)
BODY AND FRAME	(BF)
BODY ELECTRICAL	(BE)