

Click here to get the complete manual

INTRODUCTION

This service manual has been prepared to provide necessary information concerning the maintenance and repair procedures for the NISSAN FORKLIFT J01 and J02 series.

Any changes effected in the series after publication of this service manual will be announced in a technical bulletin. It is, therefore, recommended that each relevant technical bulletin be inserted in front of each section and be used together with the service manual as a reference.

If a new model requires different service method or has undergone a major change, revised sections will be issued to replace the applicable sections. Each revised section will include the description of how to service the parts for the former specifications. The publication of a revised section will be announced in the technical bulletin.

This service manual consists of twenty-one sections as shown in the following table, which gives the updated symbols. When a revised service manual is issued, this "INTRODUCTION" sheet should be replaced with a revised one.

Section	Symbol
GENERAL INFORMATION	(GI)
MAINTENANCE	(MA)
ENGINE TUNE-UP (H15, H20-II, H25 ENGINE)	(ET)
ENGINE MECHANICAL (H15, H20-II, H25 ENGINE)	(EM)
ENGINE LUBRICATION & COOLING SYSTEMS (H15, H20-II, H25 ENGINE)	(LC)
ENGINE FUEL (H15, H20-II, H25 ENGINE)	(EF)
ENGINE ELECTRICAL (H15, H20-II, H25 ENGINE)	(EE)
ENGINE REMOVAL	(ER)
CLUTCH	(CL)
MANUAL TRANSMISSION	(MT)
AUTOMATIC TRANSMISSION	(AT)
DIFFERENTIAL CARRIER	(DF)
FRONT AXLE	(FA)
REAR AXLE	(RA)
BRAKE SYSTEM	(BR)
STEERING SYSTEM	(ST)
HYDRAULIC SYSTEM	(HD)
LOADING MECHANISM	(LM)
ENGINE CONTROL, FUEL & EXHAUST SYSTEMS	(FE)
BODY & FRAME	(BF)
BODY ELECTRICAL	(BE)

Edition: May 1993
Printing: July 1997 (02)
Publication No. SM3E-J012G0