

Table of contents

Operation	1
Important information about this manual	1-1
Abbreviations/symbols	1-2
Brief description	1-2
Hydrostatic drive	1-2
Work hydraulics and four-wheel steering	1-2
Cooling system	1-2
Machine overview	1-3
Serial plates and component numbers	1-4
Serial number	1-4
Cab number	1-4
Engine number	1-4
Hydraulic pump number	1-5
Hydraulic motor number	1-5
Rear axle number	1-5
Front axle number	1-5
Safety decals	1-6
Fire extinguisher (option)	1-8
Cab overview	1-9
Instrument panel, multi-functional lever and switch panel: overview	1-10
Indicators and warning lights: overview	1-11
Oil and fuel pre-heater (option)	1-12
Jump-starting the engine	1-13
Backup warning system (option)	1-14
Manual throttle (option)	1-14
Low-speed control (option)	1-15
Towing the machine	1-16
Safety instructions for towing	1-16
Towing preparation	1-16
After towing	1-17
Specifications	2
Frame	2-0
Types and Models: overview	2-0
Engine	2-0
Power train	2-1
Variable-displacement pump	2-1
Boost pump	2-1
Variable-displacement motor	2-1
Axles	2-2
Front axle	2-2
Rear axle	2-2
Brakes	2-2
Steering system	2-3
Work hydraulics	2-3
Pilot control	2-3
Loader unit with bucket — model AWS36	2-4
Loader unit with bucket — model AWS46	2-4
Loader unit with pallet forks — model AWS36	2-5
Loader unit with pallet forks — model AWS46	2-5
Alternator, starter, battery	2-5
Fuse box	2-6
Main fuse box — model AWS36	2-7
Main fuse box — model AWS46	2-7
Overview of switching relays	2-8

Tires for wheel loader — model AWS36	2-9
Tires for wheel loader — model AWS46	2-9
Weights	2-9
Noise levels	2-9
Vibration	2-10
Hardware torques	2-10
General torques	2-10
Specific torques	2-10
Dimensions — model AWS36	2-11
Dimensions — model AWS46	2-12
Maintenance	3
Introduction	3-0
Important information on maintenance and service work	3-0
Fluids and lubricants	3-1
Index to component maintenance	3-2
Explanation of symbols on maintenance label	3-3
Maintenance label	3-4
Maintenance schedule	3-5
Maintenance of the fuel system	3-8
Specific safety instructions	3-8
Refueling	3-8
Stationary fuel pumps	3-8
Diesel fuel specification	3-8
Replacing the fuel filter	3-9
Cleaning the fuel pump screen filter	3-10
Bleeding the fuel system	3-10
Checking/adding engine oil	3-11
Changing engine oil	3-12
Changing the engine oil filter cartridge	3-13
Engine and hydraulics cooling system	3-14
Specific safety instructions	3-14
Cleaning the oil cooler	3-14
Hydraulic system	3-15
Specific safety instructions	3-15
Checking hydraulic pressure lines	3-16
Specific safety instructions	3-16
Monitoring the hydraulic oil return filter	3-17
Important information for the use of biodegradable oil	3-17
Hydraulic oil return filter	3-18
Changing the filter insert	3-18
Checking the hydraulic oil level	3-19
Adding hydraulic oil	3-19
Changing the hydraulic oil	3-20
Rear axle transfer gearbox oil levels	3-21
Front and rear axle differential oil levels	3-22
Front and rear axle planetary drive oil levels	3-23
Air filter maintenance	3-24
Check: air filter contamination	3-24
Replacing the air filter cartridge	3-25
V-belt	3-26
Checking V-belt tension	3-26
Tensioning the V-belt	3-26
Lubrication points	3-27
Lubricating the rear axle oscillation-type bearing	3-27
Lubricating the front and rear axle planetary drive bearings	3-27
Lubricating the loader unit	3-28

Attachment maintenance	3-28
Brake system	3-29
Specific safety instructions	3-29
Checking/adding brake fluid	3-29
Repair work on the brake system	3-29
Tire care	3-30
Daily tire check	3-30
Weekly check	3-30
Changing wheels	3-31
Heating	3-32
Cleaning the dust filter of the heating system	3-32
Electric system	3-33
Safety instructions	3-33
Service and maintenance work at regular intervals	3-34
Cables, bulbs and fuses	3-34
Alternator	3-34
Battery maintenance	3-35
General maintenance work	3-36
Cleaning	3-36
When using washing solvents	3-36
When using compressed air	3-36
When using a high-pressure or steam jet cleaner	3-36
When using volatile and flammable anti-corrosion agents and sprays	3-36
Cleaning inside the cab	3-37
Cleaning the seat belt	3-37
Machine exterior	3-37
Engine compartment	3-38
Bolted connections, hinges	3-38
Engine	4
F4M 2011/BF4M 2011 engine: overview	4-0
Engine oil cooling	4-1
Fuel system	4-2
Checking and adjusting valve clearance	4-3
Replacing the fuel injection pump	4-4
Setting the charge-air pressure — model AWS46	4-9
Charge-pressure dependent full-load stop — model AWS46	4-10
Turning off minus compensation	4-10
Minus compensation — function	4-10
Switching off minus compensation — model AWS36	4-11
Heating connection	4-11
Removing/mounting the cylinder head	4-12
Sealing the bleeder valve	4-16
Intake/exhaust manifold	4-16
Engine trouble	4-17
Power train	5
Variable-displacement pump test ports — model AWS36	5-0
Variable-displacement pump — model AWS36	5-1
Variable-displacement pump test ports, 12 mph (20 kph) — model AWS46	5-2
Variable-displacement pump, 12 mph (20 kph) — model AWS46	5-3
Variable-displacement motor, 12 mph (20 kph) — all models	5-4
.....	5-4
Variable-displacement pump test po	5-4
Inching valve overview	5-5
Inching valve circuit, 12 mph (20 kph)	5-6
Drive circuit, 12 mph (20 kph) — model AWS36	5-7
Drive, 12 mph (20 kph): wiring diagram	5-8

Towing and transporting the machine	5-9
Transporting	5-9
Towing	5-9
Test report — model AWS36	5-10
Test report — model AWS46	5-11
Power train adjustment	5-12
Tools required	5-12
Adjusting boost pressure	5-12
Adjusting starting speed	5-12
Setting high pressure/drive pressure	5-13
Setting the secondary valves for forward/reverse driving	5-14
Setting the pump hydraulic resistance (characteristic curve)	5-14
Setting engine droop	5-15
Setting control initiation on the hydraulic motor	5-15
Setting the wheel speed	5-16
Tools required	5-16
Axles	6
Axle overview	6-0
Sealing service (joint housing/axle carrier)	6-1
Bevel gear shaft seals	6-12
Differential cage/differential lock screw connections	6-13
Overview of differential lock and differential cage	6-14
Removing the differential cage with the differential lock	6-15
Removing the differential lock	6-16
Assembling the differential lock	6-17
Removing the gearbox	6-18
Input shaft version 1 sealing: overview	6-24
Assembling the gearbox	6-25
Brakes	7
Brake circuit	7-0
Brake diagram	7-1
Handbrake circuit	7-2
Inching valve circuit, 12 mph (20 kph)	7-3
Service brake	7-4
Brake caliper maintenance	7-4
Steering	8
Steering circuit for model AWS36	8-0
Steering diagram for model AWS36	8-1
Steering circuit for model AWS46	8-2
Steering diagram for model AWS46	8-3
Steering system adjustment	8-4
Function	8-4
Checking a steering cylinder	8-4
Checking the check block	8-4
Hydraulic ports on servostat	8-5
Pressure relief valve: adjustment	8-5
Steering cylinder: seals	8-6
Overview of steering cylinder adjustment	8-7
Necessary tools	8-7
How to adjust the steering cylinders	8-8
Checking the track setting	8-9
Correcting the track setting	8-9
Setting the steering limit	8-10
Checking steering synchronization	8-11
Checking the bypass	8-11
Bleeding the steering cylinders	8-12

Setting steering synchronization	8-13
Final check/test run	8-13
Hydraulic system	9
Test report for model AWS36	9-0
Test report for model AWS46	9-1
Work hydraulics oil supply	9-2
Control valve ports	9-3
Priority valve ports	9-3
Priority valve diagram	9-4
Load stabilizer ports	9-4
Load stabilizer circuit	9-5
Load stabilizer diagram	9-5
Lift cylinder: seals	9-6
Tilt cylinder: seals	9-7
Control cylinder (quick-hitch frame): seals	9-8
Work hydraulics diagram	9-10
Electrical system	10
Ohm's Law	10-0
Measuring equipment and methods	10-0
Terminal description	10-2
Cable color coding	10-6
Other color codes	10-8
Relays	10-8
Use, mode of function	10-8
Terminal description on relay	10-8
Starter, battery, alternator	10-9
Fuse box	10-9
Main fuse box with relays for model AWS36	10-10
Main fuse box with relays for model AWS46	10-10
Switching relays	10-11
Description of blocking diodes	10-12
Blocking diodes V8, V9	10-12
Blocking diode V10	10-12
Blocking diode V11	10-12
Blocking diodes V16, V17	10-12
Blocking diodes V20, V21	10-12
Overview of switch assignment	10-13
Installing a rotating beacon	10-14
Installing the backup warning system	10-14
Installing two front work lights	10-15
Installing two front work lights and one rear work light	10-15
Electric diagram (sheet 1) for model AWS36	10-17
Electric diagram (sheet 2) for model AWS36	10-18
Legend: electric diagram for model AWS46	10-19
Electric diagram (sheet 1) for model AWS46	10-20
Electric diagram (sheet 2) for model AWS46	10-21

