

[Click here to get the complete manual](#)

# INTRODUCTION

With correct maintenance and proper use, the Gehl V400 and Mustang 4000V skid-steer loaders will give years of dependable service. This service manual is intended to be a guide in the assembly and disassembly, installation and removal, adjustment and testing, troubleshooting and replacement of components that together make up the Gehl V400 and Mustang 4000V skid-steer loaders.

In many of the procedures found within, the installation steps are the exact opposite of the removal steps, and therefore the opposite procedure is not written. Instead, a note to reverse the procedure is stated. This reduces redundancy and excessive pages in the manual. In cases though, where the assembly and disassembly or removal and installation procedures differ, and additional steps or safety concerns are paramount, the entire reverse procedure is written to include the additional information.

The Table of Contents and the Index can be used to make finding a procedure easier. Many schematics, photographs and line art drawings are used to help perform the necessary repairs, tests and adjustments that the skid-steer loader needs to keep it in good running condition.

If you have any questions, please contact your authorized Gehl or Mustang dealer, or call the Gehl and Mustang Service Department for assistance.

# TABLE OF CONTENTS

<b>Specifications</b>	<b>Page</b>
SPECIFICATIONS .....	1

<b>Safety</b>	<b>Page</b>
General Information .....	3
Signal Words .....	3
Additional Safety Reminders .....	3
Mandatory Safety Shutdown Procedure .....	4
Lift Arm Support Device .....	5
Lift Arm Support Device Engagement .....	5
Lift Arm Support Device Disengagement .....	5
ROPS/FOPS – Raising .....	6
ROPS/FOPS – Lowering .....	7
Relieving Hydraulic Pressure - T-Bar Controls - Lift/Tilt/Auxiliary .....	7
Relieving Hydraulic Pressure - Dual Joystick and Hand/Foot Controls - Lift/Tilt/Auxiliary .....	7
Loader Raising Procedure .....	8
Loader Lowering Procedure .....	8

<b>Lubrication</b>	<b>Page</b>
General Information .....	9
Hydraulic Oil Reservoir .....	9
Crankcase Oil .....	10
Chaincases .....	11
Grease Fitting Locations .....	12
Cooling System Drain Procedure .....	13

<b>Mainframe</b>	<b>Page</b>
Introduction .....	15
Mainframe (Chassis) and Rear Grille Components .....	15
Engine Cover Components .....	16
Engine Access Cover - Removal and Installation .....	17
Roll-Over and Falling Object Protective Structure Components - ROPS/FOPS .....	18
ROPS/FOPS Removal and Installation .....	19
Seat Removal and Installation .....	20
Seat Slide Replacement .....	21
Side Console Removal and Installation .....	21
Non-HVAC Assembly - ROPS/FOPS .....	22
HVAC Assembly - ROPS/FOPS .....	22
Air Duct Louver Replacement .....	23
ROPS/FOPS Rear Window Removal and Installation .....	23
Restraint Bar Components .....	25
Restraint Bar Removal and Installation .....	26

All-Tach® Hitch Components . . . . .	27
Actuator Group Components - All-Tach® Hitch . . . . .	27
Power-A-Tach® Components . . . . .	28
All-Tach® and Power-A-Tach® Hitch Removal and Installation . . . . .	29
Lift Arm Components . . . . .	30
Lift Arm Removal and Installation . . . . .	31
Rear Link Removal and Installation . . . . .	34
Timing Link Removal and Installation . . . . .	35
Lift Arm, Rear Link, Hose Pivot and Timing Link Bushing Replacement . . . . .	36
Control Cover Components - Hand/Foot . . . . .	37
Control Cover Components - Dual Joystick . . . . .	38
Control Cover Components - T-Bar . . . . .	39
Control Console Removal and Installation . . . . .	40
Floor Plate, Battery Access Cover and Kickplate Cover Removal and Installation . . . . .	41
Crossmember Removal and Installation . . . . .	43
Rear Bumper Removal and Installation . . . . .	46
Fuel Tank Removal and Installation . . . . .	46
Fuel Sensor Removal and Installation . . . . .	48
Rear Grille Removal and Installation . . . . .	48
Rear Grille Latch Removal and Installation . . . . .	49

<b>Wheel Drives</b>	<b>Page</b>
Introduction . . . . .	51
Wheel Drive Components . . . . .	51
Drive Chain Adjustment . . . . .	52
Axle Housing Assembly Removal and Installation . . . . .	53
Drive Chain Removal and Installation . . . . .	54
Axle Assembly Components . . . . .	55
Axle and Wheel Bearing Disassembly and Assembly . . . . .	56

<b>Controls</b>	<b>Page</b>
Introduction . . . . .	59
Control Locations - Dual Joystick and Hand/Foot Controls . . . . .	60
Control Locations - T-Bar Controls . . . . .	60
Wheel Drive Components - T-Bar Controls . . . . .	61
Wheel Drive Components - Dual Joystick Controls . . . . .	62
Wheel Drive Components - Hand/Foot Controls . . . . .	63
Lift and Tilt Components - T-Bar Controls . . . . .	64
Lift and Tilt Components - Dual Joystick Controls . . . . .	65
Lift and Tilt Components - Hand/Foot Controls . . . . .	66
Control Handle Assembly (Both Control Handles) Removal and Installation . . . . .	67
Control Handle Removal and Installation - Electrical Auxiliary Grip - Dual Joystick and Hand/Foot Controls . . . . .	67
Control Handle Removal and Installation - T-Bar Controls . . . . .	69
T-Bar Control Handle Assembly . . . . .	70
Dual Joystick and Hand/Foot Control Handle Assembly . . . . .	72
Pivot Tube Removal and Installation, Disassembly and Assembly - T-Bar Controls . . . . .	74
Control Handle Position Adjustment - T-Bar Controls . . . . .	76
Control Handle Tracking Adjustment . . . . .	76
Neutral Centering Test and Adjustment . . . . .	78

Lift/Tilt Control Removal and Installation . . . . .	80
Lift/Tilt Control Adjustment - T-Bar Controls . . . . .	82
Electrical Foot Throttle Components - Dual Joystick and T-Bar Controls. . . . .	83
Electrical Foot Throttle Removal and Installation - T-Bar and Dual Joystick Controls. . . . .	84
Electrical Auxiliary Hydraulics Foot Pedal - T-Bar Controls. . . . .	85
Electrical Auxiliary Hydraulics Foot Pedal Removal and Installation - T-Bar Controls . . . . .	86

**Hydrostatic System**

**Page**

Introduction. . . . .	87
Hydrostatic Components - Two-Speed - Dual Joystick and Hand/Foot Controls . . . . .	87
Hydrostatic Components - Two-Speed - T-Bar Controls . . . . .	88
Charge Pressure Test and Adjustment . . . . .	89
Hydrostatic Pump Relief Valves. . . . .	90
Hydrostatic Pump Removal and Installation . . . . .	90
Hydrostatic Pump Drive Coupling Removal and Installation . . . . .	92
Drive Motor Removal and Installation. . . . .	93
Troubleshooting Guide . . . . .	95
Hydrostatic/Hydraulic Schematic - Dual Joystick Controls. . . . .	100
Hydrostatic/Hydraulic Schematic - Hand/Foot Controls . . . . .	102
Hydrostatic/Hydraulic Schematic - T-Bar Controls . . . . .	104

**Hydraulic System**

**Page**

Introduction. . . . .	107
Troubleshooting Guide . . . . .	107
Hydraulics - Standard Chassis Components - Dual Joystick and Hand/Foot . . . . .	112
Hydraulics - Standard Chassis Components - T-Bar . . . . .	114
Hydraulics - High-Flow Chassis Components - Dual Joystick and Hand/Foot . . . . .	116
Hydraulics - High-Flow Chassis Components - T-Bar. . . . .	118
Hydraulics - Standard Auxiliary Lift Arm Components . . . . .	120
Hydraulics - High-Flow Auxiliary Lift Arm Components. . . . .	121
Hydraulics - Hydraglide™ Components . . . . .	122
Pressure and Load-Sense Check, Test and Adjustment . . . . .	123
Tilt Cylinder Test . . . . .	125
Tilt Circuit Spool Leakage Test . . . . .	126
Self-Leveling Valve Test. . . . .	127
Lift Cylinder Test . . . . .	127
Lift Circuit Spool Leakage Test . . . . .	128
Solenoid Valve Test - Joystick Drive Supply, All-Tach/Fan, Brake/Two-Speed, Safety Locks - Ride Control. . . . .	129
Hydraulic Oil Filter Element Replacement . . . . .	131
Lift Cylinder Components . . . . .	132
Tilt Cylinder Components . . . . .	132
Tilt Cylinder Removal and Installation . . . . .	133
Lift Cylinder Removal and Installation . . . . .	134
Lift/Tilt Cylinder Disassembly / Assembly . . . . .	136
Auxiliary Pump Removal and Installation . . . . .	137
Load-Sense Axial Piston Pump Removal and Installation. . . . .	139
Self-Leveling Valve Removal and Installation. . . . .	140
Self-Leveling Valve Adjustment. . . . .	142

Brake/Two-Speed and Safety Lock Solenoid Valves - Removal and Installation . . . . .	143
Joystick Drive Supply, All-Tach/Fan and Hydraglide™ Ride Control Solenoid Valves - Removal and Installation . . . . .	144
Lift/Tilt, Joystick Drive Supply, Brake/Two-Speed, All-Tach/Fan and Hydraglide™ Ride Control Solenoid Valves - Disassembly and Assembly . . . . .	146
Main Control Valve Components - Standard . . . . .	147
Main Control Valve Components - High-Flow . . . . .	148
Control Valve Removal and Installation . . . . .	149
Control Valve Disassembly and Assembly . . . . .	151
Control Valve Solenoid Removal and Installation. . . . .	152
Inlet Relief Valve and Drain Orifice Removal and Installation. . . . .	152
Hydraulic Oil Reservoir Removal and Installation . . . . .	153
Hydraglide™ Ride Control Accumulator Removal and Installation. . . . .	155
Fan and Fan Motor Removal and Installation . . . . .	156

**Electrical System**

**Page**

Introduction . . . . .	159
Description of Operation - Right and Left Instrument Panels . . . . .	159
Troubleshooting Guide . . . . .	162
Electrical Chassis Components . . . . .	164
Electrical ROPS/FOPS Components . . . . .	166
Power Distribution Panel Test and Operation . . . . .	167
Interlock Control Module Test. . . . .	171
Interlock Control Module Truth Table . . . . .	172
Two-Speed, Ride Control and Float Module Test . . . . .	173
Two-Speed, Ride Control and Float Module Truth Table . . . . .	174
High-Flow Controller Module Test . . . . .	175
Fan Control/Power-A-Tach® Module Test . . . . .	176
Fan Control Module Truth Table . . . . .	177
Control Handle Actuation Buttons - Two-Speed and Ride Control and Float Module . . . . .	178
Electrically-Controlled Standard Auxiliary Hydraulic Flow System Test and Operation. . . . .	179
Engine Throttle Test and Operation. . . . .	180
Seat Switch Removal and Installation . . . . .	181
Electrical Lights Components . . . . .	182
Restraint Bar Components . . . . .	183
Restraint Bar Switch Removal and Installation. . . . .	184
Master Disconnect Switch - Remote Battery Terminal Removal and Installation . . . . .	185
Front and Rear Work Light Bulb Replacement . . . . .	186
Dome Light Bulb Replacement . . . . .	186
Information Center Electronic Display Removal and Installation. . . . .	187
Information Center Electronic Display - The Display Modes . . . . .	188
Electrical Heater Schematic. . . . .	191
Electrical HVAC Schematic. . . . .	192
Electrical 14-Pin Auxiliary Schematic . . . . .	193
Electrical Chassis Schematic . . . . .	195
Electrical ROPS/FOPS Schematic. . . . .	198

<b>Engine</b>	<b>Page</b>
Introduction . . . . .	201
Troubleshooting Guide . . . . .	201
Engine Components . . . . .	203
Air Cleaner and Exhaust Components . . . . .	204
Radiator/Cooler Components . . . . .	205
Pre-Cleaner Assembly Components . . . . .	206
Oil Filter Element Removal and Installation . . . . .	207
Air Cleaner Assembly Removal and Installation . . . . .	208
Air Filter Element Removal and Installation . . . . .	209
Batteries Removal and Installation . . . . .	210
Starter Removal and Installation . . . . .	212
Exhaust Assembly Removal and Installation . . . . .	213
Alternator Belt Adjustment . . . . .	214
Radiator/Cooler Removal and Installation . . . . .	214
Charge Air Cooler Removal and Installation . . . . .	215
Fan Shroud Removal and Installation . . . . .	216
Fan Adjustment . . . . .	218
Engine Removal and Installation . . . . .	219
Engine Diagnostic Chart . . . . .	221
Cummins QSB4.5 Engine Diagnostic Fault Codes . . . . .	222
 <b>INDEX</b>	 <b>233</b>

**Page Intentionally Left Blank**