

Introduction	1
Chapter 1 — Safety	3
Mandatory Safety Shutdown Procedure	4
Before Starting	4
During Operation.....	5
Service Safety Practices	6
Fire Hazards	8
Crystalline Silica Exposure	8
Safety Decals.....	9
Hazard and Hazard Avoidance Symbols	9
Chapter 2 — Specifications	11
Fluid Capacities/Lubricants.....	11
Dimensions	12
Weights and Capacities	14
Engine.....	15
Hydraulics	15
Electrical System	15
Sound Levels	15
Wheels.....	16
FOPS	16
Chapter 3 — Maintenance	17
Maintenance Introduction.....	17
Maintenance Schedule	18
Engine Maintenance	20
Air Cleaner	22
Engine Cooling System.....	23
Fuel System.....	25
Checking and Adjusting V-belt Tension	27
Air Conditioning Maintenance	28
Hydraulic System Maintenance	29
Planetary Axles.....	30
Brake Fluid Reservoir	32
Wheels and Tires	33
Lubrication	35
Electrical System	37
Storing the Loader	44
Maintenance Log	45
Chapter 4 — Operation.....	49
Operation Safety.....	49
Controls and Switches	50
Instrument Panel and Indicators	52
Cab Controls (Cab only)	54
Warning Indicators.....	56
Operator’s Seat and Ignition Switch.....	57

Table of Contents

Steering Column	58
Hand Throttle	59
Lift Arm Down-Stop.....	59
Lift/Tilt Lock.....	60
Chapter 5 — Chassis.....	61
Tilting the Platform.....	61
Lowering the Platform	62
Repairing or Replacing Platform Switch	64
Hood Removal	65
Hood Installation	66
Center/Steering Bearing Removal	67
Center/Steering Bearing Installation	70
Lift Arm Removal	74
Lift Arm Installation	75
Attachment Plate Hydraulics Removal.....	77
Attachment Plate Hydraulics Installation.....	78
Chapter 6 — Engine.....	79
Engine Removal.....	79
Engine Installation.....	83
Drive Coupling Removal	87
Drive Coupling Installation	87
Starter Removal.....	88
Starter Installation.....	88
Chapter 7 — Cooling System	89
Radiator/Oil Cooler Removal	89
Radiator/Oil Cooler Installation	92
Chapter 8 — Axles	95
Front Axle Removal	95
Front Axle Installation	98
Rear Axle Removal.....	100
Rear Axle Installation.....	102
Chapter 9 — Hydraulics	103
Work Hydraulics Troubleshooting	103
Hydrostatic Drive System.....	106
Hydraulics Troubleshooting Diagnostic Flow Charts	107
Drive System Pressure Tests	121
Work System Pressure Tests	124
Steering Circuit Pressure Test.....	125
2-Spool Control Valve Removal.....	126
3-Spool Control Valve Removal.....	128
2-Spool Control Valve Installation.....	131
3-Spool Control Valve Installation.....	133
Lift/Tilt Lock, Power-A-Tach® System and Auxiliary Hydraulics Valve Locations	135

Table of Contents

Lift Cylinder Removal.....	136
Lift Cylinder Installation.....	137
Tilt Cylinder Removal.....	138
Tilt Cylinder Installation.....	138
Steering Cylinder Removal.....	139
Steering Cylinder Installation.....	139
Hydraulic Cylinder Disassembly/Assembly.....	141
Gear/Work Hydraulic Pump Removal.....	149
Gear/Work Hydraulic Pump Installation.....	149
Piston/Drive Hydraulic Pump Removal.....	150
Piston/Drive Hydraulic Pump Installation.....	152
Hydrostatic Motor Removal.....	153
Hydrostatic Motor Installation.....	155
Steering Control Valve Removal.....	156
Steering Control Valve Removal.....	158
Steering Control Valve Installation.....	159
Steering Control Valve Installation.....	160
Raising Machine for Drive System Troubleshooting.....	161
AL 400 Series Hydraulic Schematic – SN 41250 and Up.....	163
AL 400 Series Hydraulic Schematic – SN 41249 and Before.....	164
AL 500 Series Hydraulic Schematic – SN 51242 and Up.....	165
AL 500 Series Hydraulic Schematic – SN 51241 and Before.....	166
Chapter 10 — Machine/Drive Controllers.....	167
Machine and Drive Controllers.....	167
Machine Controller.....	168
Drive Controller (Plus+1 Module).....	172
Service Communication Kit and PLUS+1 GUIDE Service Tool Software.....	173
Plus+1 Service Tool Navigation/Overview.....	174
Software Log Monitoring Screen.....	175
Electrical Inputs/Outputs Monitoring Screen.....	176
Electrical Status Error Reporting Screen.....	177
System Definition Error Count/Timestamp Reset Screen.....	178
Drive Controller Pedal Calibration Parameters.....	179
Pump Profiling Screen/Drive “Creep” Adjustment.....	179
Pedal Calibration Procedure.....	181
Chapter 11 — Electrical System.....	183
Battery Removal.....	183
Battery Installation.....	184
AL 400 Series (Serial Numbers 41250 and up) Complete Electrical Schematic.....	185
AL 400 Series (Serial Numbers 41250 and up) Steering Column Electrical Schematic.....	186
AL 400 Series (Serial Numbers 41250 and up) Chassis Electrical Schematic.....	187
AL 400 Series (Serial Numbers 41250 and up) Engine Electrical Schematic.....	188
AL 400 Series (Serial Numbers 41250 and up) FOPS, Power-A-Tach® and Tail Light Electrical Schematic.....	189
AL 500 Series (Serial Numbers 51242 and up) Complete Electrical Schematic (Includes Air Conditioning Option).....	190

Table of Contents

AL 500 Series (Serial Numbers 51242 and up) Steering Column Electrical Schematic (Includes Air Conditioning Option)	191
AL 500 Series (Serial Numbers 51242 and up) Chassis Electrical Schematic (Includes Air Conditioning Option)	192
AL 500 Series (Serial Numbers 51242 and up) Engine Electrical Schematic (Includes Air Conditioning Option)	193
AL 500 Series (Serial Numbers 51242 and up) FOPS, CAB, Power-A-Tach® and Tail Light Electrical Schematic (Includes Air Conditioning Option)	194
AL 400 Series (Serial Numbers 41249 and below), AL 500 Series (Serial Numbers 51241 and below) Complete Electrical Schematic	195
Chapter 12 — Troubleshooting	197
Engine.....	197
Indicator Lamps / Seals and Hoses	199
Hydraulic System.....	200
Hydrostatic Drive System.....	202