

[Click here to get the complete manual](#)

TCR50

Dump Carrier

BOOK No. CS2E000

WORKSHOP MANUAL

Serial No. 30500003 ~ 30500038
30510001 ~

TAKEUCHI

FOREWORD

This service manual is intended for service engineers who maintain the TAKEUCHI construction machinery, and describes the specifications, maintenance procedures of individual machine sections, and operational precautions.

Read this manual carefully and become familiar with your TAKEUCHI machinery so that you will be able to quickly and accurately maintain and keep it in perfect working order throughout its life.

The dimensions and other values referred to in this manual are for your reference in servicing, and should not be considered as the values stipulated in the Inspection Standard.

This manual represents the most up-to-date information at the time of publication and is subject to change without notice to reflect specification changes for performance improvement or technological advancement, and/or correction of typographical errors. If you find any discrepancies between your machine and the information in this manual, obtain the most up-to-date information from our Parts Department.

You will be informed of major improvements and specification changes by delivery of the revised version of this manual.

We recommend that you read this manual together with:

- 1) TCR50 Operator's Manual**
- 2) TCR50 Parts Manual**

Be sure to read carefully and fully understand the instructions and precautions given in this manual and on the labels on the machine before you start working.

The degrees of hazards caused by improper service are represented by the following warning words and symbols:

 DANGER	Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This warning is used in safety messages and safety labels, and the necessary precautions are described.
 WARNING	Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. This warning is used in safety messages and safety labels, and the necessary precautions are described.
 CAUTION	Indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury or damage.
IMPORTANT	Indicates a potentially hazardous situation that, if not avoided, could result in damage to or reduced life of the machine.

This workshop manual is intended for service engineers who maintain the TAKEUCHI construction machinery. The safety signs given in this manual do not cover all the hazardous situations that may occur when using the machinery.

CONTENTES

1. General Cautions for Maintenance Work

1-1. Correct Work	1-1
1-2. Safety Precautions	1-1
1-3. Preparations	1-7
1-4. Cautions for Disassembly and Reassembly	1-7
1-5. Cautions for Removal and Installation of Hydraulic Equipment	1-8
1-6. Cautions for Removal and Installation of Hydraulic Piping	1-8
1-7. Cautions for Handling Seals	1-9
1-8. Correct Installation of Hydraulic Hose	1-10
1-9. Types of Hydraulic Hoses	1-11
1-10. How to Release Air from Hydraulic Units	1-15
1-10-1. Releasing Air from the HST System	1-15
1-10-2. Releasing Air from Hydraulic Cylinder	1-16

2. Technical Data

2-1. Specifications	2-1-1
2-2. Outside Drawing	2-2-1
2-3. Hydraulic Circuit Diagram	2-3-1
2-4. Electrical Circuit Diagram	2-4-1

3. Servicing Standards

3-1. Machine Performance	3-1-1
3-1-1. Reference Value Table	3-1-1
3-1-2. Methods for Inspecting Performance	3-1-2
3-2. Engine Servicing Standards (S/N: 30500003~30500038)	3-2-1
3-3. Servicing Standards for Parts of Undercarriage	3-3-1
3-4. Control Equipment	3-4-1
3-5. Hydraulic Equipment	3-4-1
3-5-1. Hydraulic Cylinder	3-4-1
3-6. Tightening Torque Table	3-6-1
3-6-1. Tightening Torque for Bolts and Nuts for Vehicle	3-6-1
3-6-2. Tightening Torque for Bolts and Nuts for Engine (S/N: 30500003~30500038)	3-6-2

4. Engine Servicing Procedure (S/N: 30500003~30500038)

4-1. Inspection and Adjustment	4-1-1
4-1-1. Oil Inspection	4-1-1
4-1-2. Cooling Water Inspection	4-1-1
4-1-3. Inspecting Water Leak from Cooling Water System and Radiator	4-1-1
4-1-4. Fan Belt Tension Inspection and Adjustment	4-1-2
4-1-5. Adjusting the Valve Clearance	4-1-3
4-1-6. Inspecting the Fuel Injection Valve Injection Pressure and Spray Pattern	4-1-4
4-1-7. Fuel Injection Timing Inspection and Adjustment	4-1-8
4-1-8. Adjusting the No-load Maximum (or Minimum) Revolutions	4-1-9
4-1-9. Sensor Inspection	4-1-10
4-2. Engine Body	4-2-1
4-2-1. Introduction	4-2-1
4-2-2. Cylinder Head	4-2-2
4-2-3. Gear Train and Camshaft	4-2-11
4-2-4. Cylinder Block	4-2-17
4-3. Lubrication System	4-3-1
4-3-1. Lubrication System Diagram	4-3-1
4-3-2. Trochoid Pump Components	4-3-1
4-3-3. Disassembly (Reverse the procedure below for assembly)	4-3-2

4-3-4. Servicing Points	4-3-2
4-3-5. Parts Inspection and Measurement	4-3-2
4-4. Cooling System	4-4-1
4-4-1. Cooling Water System	4-4-1
4-4-2. Cooling Water Pump Components	4-4-1
4-4-3. Disassembly (Reverse the procedure below for assembly)	4-4-2
4-4-4. Servicing Points	4-4-2
4-5. Fuel Injection System/Governor	4-5-1
4-5-1. Introduction	4-5-1
4-5-2. Fuel Injection Pump	4-5-1
4-5-3. Fuel Injection Valve	4-5-7
4-5-4. Fuel Feed Pump	4-5-7
4-5-5. Governor	4-5-8
4-5-6. Special Service Tools for Disassembly/Assembly	4-5-9
4-6. Starting Motor	4-6-1
4-6-1. Specifications	4-6-1
4-7. Alternator	4-7-1
4-7-1. Specifications	4-7-1
4-8. Special Service Tools	4-8-1
4-8-1. Special Tools	4-8-1
4-8-2. Measuring Instruments	4-8-3

5. Hydraulic System

5-1. Hydraulic Units	5-1-1
5-1-1. Hydraulic Pump (S/N: 30500003~30500038)	5-1-1
5-1-2. Hydraulic Pump (S/N: 30510001~)	5-1-5
5-1-3. Gear Pump (S/N: 30510001~)	5-1-35
5-1-4. Travel Motor (S/N: 30500003~30500038)	5-1-41
5-1-5. Travel Motor (S/N: 30510001~)	5-1-45
5-1-6. Swing Motor	5-1-71
5-1-7. Control Valve	5-1-93
5-1-8. Solenoid Valves	5-1-107
5-1-9. Pilot Valve	5-1-113
5-1-10. Swivel Joint	5-1-123
5-1-11. Cylinders	5-1-129
5-2. Pressure Adjustments	5-2-1
5-3. Precautions in Case of Hydraulic Source Failures	5-3-1

6. Service Procedures for Individual Components

6-1. Undercarriage	6-1-1
6-1-1. Removing and Installing the Crawler	6-1-1
6-1-2. Removing and Installing the Travel Motor	6-1-4
6-1-3. Disassembling and Assembling the Idler	6-1-6
6-1-4. Disassembling and Assembling the Carrier Roller	6-1-9
6-1-5. Disassembling and Assembling the Track Roller	6-1-11
6-1-6. Installing the Floating Seal	6-1-19
6-1-7. Removing and Installing the Shoe Tension Cylinder	6-1-20

7. Fuel, Lube Oil and Grease Recommended

7-1. Fuel, Lube Oil and Grease Recommended	7-1-1
--	-------

8. Troubleshooting

8-1. Phenomenon That is not a Machine Failure	8-1-1
8-2. Troubleshooting	8-2-1
8-3. HST Troubleshooting	8-3-1