

[Click here to get the complete manual](#)

TAKEUCHI®

Service manual

WHEEL LOADER SERIES TW65



ISSUE:08-08-07

It is not allowed to duplicate this service manual, to use it otherwise or to leave it to a third party for evaluation without our explicit consent.

II. Table of Contents

I. Preface 3

II. Table of Contents 5

0 Introduction 9

0.1 User Information on the Service Manual 10

0.2 Breakdown of Assembly Groups and Chapter Overview 11

0.3 Technical Description of the Wheel Loader 12

0.4 Safety Regulations for Work on the Wheel Loader 13

0.5 Safety Regulations in the Service Manual 14

0.6 Securing the Wheel Loader Prior to Beginning Work 15

0.7 Site Where Repair Work is Completed 16

0.8 International Measuring Units 17

0.9 Tightening Torques 18

 0.9.1 Hose connections 18

 0.9.2 Metric headless screws with standard threads 19

 0.9.3 Metric headless screws with fine threads 19

 0.9.4 RIPP screws with cheese head and hexagon socket 20

 0.9.5 RIPP screws and nuts with cheese head and hexagon head 20

 0.9.6 Self-locking screws and nuts with hexagon head 21

0.10 Positioning of Hydraulic Hose 22

1 Front and Rear Carriage 23

1.1 General Data 23

1.2 Front Carriage 23

1.3 Repairing the Front Carriage 24

1.4 Checking the Articulated Pendulum Joint 24

 1.4.1 Faults in the articulated pendulum joint 24

 1.4.2 Checking the assembly dimensions 25

 1.4.3 Disconnecting the front carriage from the rear carriage 26

 1.4.4 Checking/Disassembling the pendulum joint and replacing components 32

 1.4.5 Checking/Disassembling the articulated joint and replacing components 35

 1.4.6 Completing the front carriage 38

1.5 Repairing the Rear Carriage 42

 1.5.1 Disassembling the engine hood 42

1.6 Welding and Preservation Work on the Wheel Loader 43

 1.6.1 Welding 43

 1.6.2 Preservation 44

1.7 Table of Figures 45

2 Hoisting Gear 47

2.1 General Data 47

2.2 Operating Faults and Solutions 48

2.3 Maintenance Work 49

 2.3.1 Greasing the hoisting gear 49

2.4 Repairing the Hoisting Gear and Hoisting Gear Hydraulics 50

 2.4.1 Checking the hoisting gear 50

 2.4.2 Disassembling the hydraulic connections from the front carriage 51

 2.4.3 Disassembling the hoisting gear 52

 2.4.4 Replacing the hoisting gear components 53

 2.4.5 Replacing the hoisting gear hydraulic cylinders 54

 2.4.6 Assembling the hoisting gear 55

 2.4.7 Completing the hoisting gear 56

2.1 Table of Figures 57

6-ANROD-ALBIS-SERVICEIV_Z.tif

3	Hydraulic System	59
3.1	Breakdown of Assembly Groups	59
3.2	Technical Data	59
3.3	Faults, Causes and Corrective Measures	60
3.4	Setting Instructions, Hydraulic System	65
3.4.1	Operating conditions for correct measurement results	66
3.4.2	Measuring and test instruments	67
3.4.3	Safety regulations, measurement and adjustment work	67
3.4.4	Environmental protection measures	67
3.4.5	Arranging the gauge points	68
3.5	Setting Instructions	69
3.6	Repairing the Pump Set	87
3.6.1	Completing repairs to the travel pump	88
3.6.2	Repairing the load pump	97
3.6.3	Repairing the charge pump	100
3.6.4	Repairing the pump set and travel pump	102
3.6.5	Replacing the clutch between the engine and pump set	107
3.7	Repairing the travel motor	109
3.8	Repairing the Loading Circuit Control Block	117
3.8.1	Replacing the control block valves	119
3.8.2	Replacing the loading circuit control block	127
3.8.3	Checking the control lever in the operator's cab	131
3.9	Repairing the Hydraulic Cylinders	135
3.9.1	Checking the hydraulic cylinders	136
3.9.2	Checking the steering cylinder	136
3.9.3	Checking the lifting and working cylinder	140
3.9.4	Checking the QDC hydraulic system	144
3.9.5	Venting the QDC hydraulic system	148
3.10	Repairing the Steering Circuit	149
3.10.1	Repairing the steering unit	149
3.11	Repairing the Hydraulic Components	153
3.11.1	Repairing the inching valve	153
3.11.2	Repairing the solenoid valve control block	156
3.12	Checking the Hydraulic Circuit	163
3.12.1	Checking the hydraulic oil	163
3.12.2	Venting the hydraulic circuit	166
3.12.3	Operating the vacuum pump	168
3.12.4	Rinsing the hydraulic circuit	169
3.12.5	Replacing the hydraulic oil sort (to biological oil)	171
3.13	Table of Figures	173
Appendix to Chapter 3: Hydraulic Circuit Diagram		177
4	Electrical System	181
4.1	General Data	181
4.2	Overview of Fuses and Relays	182
4.2.1	Overview of fuses	182
4.2.2	Overview of relays	183
4.2.3	Overview of lighting	183
4.3	Operating Faults, Electrical System	184
4.4	Maintenance Procedures	185
4.5	Setting Instructions	186
4.6	Completing Repairs	187

4.6.1	Electrical system installation locations	188
4.6.2	Repairing the lighting system	191
4.6.3	Replacing the fuses and relays on the control board	192
4.6.4	Replacing the relay in the engine compartment	193
4.6.5	Replacing switches in the operator's cab	193
4.6.6	Replacing the display and steering column switch	194
4.6.7	Replacing the accelerator pedal plunger switch	195
4.6.8	Replacing the control board	196
4.7	Table of Figures	197
Appendix to Chapter 4: Electrical System Circuit Diagrams		199
5	Diesel Engine	215
5.1	Breakdown of Assembly Groups	215
5.2	Technical Data	216
5.2.1	Diesel engine	216
5.2.2	Fuel	216
5.2.3	Engine oil	216
5.2.4	Engine electrical system	216
5.3	Faults, Causes, Solutions	217
5.3.1	Faults, causes and solutions related to the diesel engine	217
5.3.2	Faults, Causes and Solutions	218
5.4	Maintenance Procedures on the Diesel Engine	219
5.4.1	Maintenance table	219
5.4.2	Checking and changing the engine oil	220
5.4.3	Visual inspection of the engine and checking the unit for leaks	220
5.4.4	Checking the battery and cabling in the engine compartment	221
5.4.5	Cleaning the engine cooling system	221
5.4.6	Checking the engine mount	222
5.4.7	Checking the timing belt	222
5.4.8	Checking the injection valves	222
5.4.9	Checking the fuel system	223
5.5	Setting Instructions	224
5.5.1	Preparatory work	224
5.5.2	Checking the fan belt	225
5.5.3	Checking the valves	227
5.5.4	Adjusting the accelerator cable	229
5.5.5	Tightening torques for screws in the diesel engine	230
5.6	Repairing the Diesel Engine	230
5.6.1	Preparing the wheel loader for repairs to the diesel engine	231
5.6.2	Replacing the accelerator cable	232
5.6.3	Checking and replacing the control unit timing belt	234
5.6.4	Checking and replacing the electric alternator	238
5.6.5	Disassembling/Assembling the diesel engine	241
5.6.6	Restarting the diesel engine	245
5.6.7	Replacing the exhaust system	246
5.7	Table of Figures	247
7	Axles and Brakes	249
7.1	General Data	249
7.2	Operating Faults and Solutions	250
7.3	Maintenance Work, Axles	251
7.3.1	Lubricants and filling quantities	251
7.3.2	Checking the axle oil levels	251
7.3.3	Checking and changing the brake fluid	254

6-AN00-7ALBIS-SERVICEIV.Z-11M

7.4	Completing Repairs	256
7.4.1	Securing the wheel loader for work on the axles	256
7.4.2	Replacing the cardan shaft	256
7.4.3	Replacing the front axle	257
7.4.4	Replacing the rear axle	258
7.4.5	Checking the axle transfer box	259
7.4.6	Replacing the foot brake laminated disks in the rear axle	263
7.4.7	Disassembling the parking brake and brake piston unit	267
7.4.8	Checking the brake piston unit	270
7.4.9	Finishing off the brake piston unit and reassembling it	272
7.4.10	Reassembling the axle	278
7.5	Table of Figures	281
8	Operator's Cab	283
8.1	Breakdown of Assembly Groups	283
8.2	Operating Faults and Solutions	284
8.3	Maintenance Work	285
8.3.1	Cleaning work	285
8.3.2	Monthly maintenance	285
8.3.3	Checking fill levels	286
8.4	Setting Instructions	286
8.4.1	Adjusting the door lock	286
8.4.2	Adjusting the door retaining bolt	286
8.5	Completing Repairs	287
8.5.1	Disassembling/Assembling the interior trim	287
8.5.2	Disassembling/Assembling the steering column cover	287
8.5.3	Replacing the doors	288
8.5.4	Replacing the windscreen, rear window and door window	289
8.5.5	Replacing the operator's seat	291
8.5.6	Replacing the windscreen wiper motors	292
8.5.7	Repairing the heater/ventilation	294
8.5.8	Checking and replacing the accelerator and inching pedals	297
8.5.9	Cab openings	300
8.6	Table of Figures	301
9	Table of Topics	303