

[Click here to get the complete manual](#)

FE.FG

SERVICE MANUAL 2012 Model FOREWORD

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE. FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

MARCH 2011

GROUP INDEX

GENERAL	00
MAINTENANCE SCHEDULE	01
ENGINE.....	11
LUBRICATION	12
FUEL AND ENGINE CONTROL.....	13
COMMON RAIL SYSTEM.....	13E
COOLING.....	14
INTAKE AND EXHAUST	15
EMISSION CONTROL	17
BlueTec® SYSTEM	17E
CLUTCH.....	21
TRANSMISSION <DUONIC™>	22
DUONIC™	22E
TRANSFER.....	24
PROPELLER SHAFT	25
FRONT AXLE	
<FE>	26A
<FG>	26B
REAR AXLE.....	27
WHEEL AND TIRE	31
FRONT SUSPENSION	33
REAR SUSPENSION.....	34
BRAKE.....	35
ANTI-LOCK BRAKE SYSTEM (ABS)	35E
PARKING BRAKE	36
STEERING	37
BUMPER AND FRAME	41
CAB.....	42
DOOR.....	43
EXTERIOR	51
INTERIOR	52
ELECTRICAL.....	54
HEATER, AIR-CONDITIONER AND VENTILATION	55
FULL AUTOMATIC AIR-CONDITIONER.....	55E