

[Click here to get the complete manual](#)

## Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Fuel System</b>	<b>2</b>
<b>Cooling System</b>	<b>3</b>
<b>Engine Top End</b>	<b>4</b>
<b>Clutch</b>	<b>5</b>
<b>Engine Lubrication System</b>	<b>6</b>
<b>Engine Removal/Installation</b>	<b>7</b>
<b>Crankshaft/Transmission</b>	<b>8</b>
<b>Wheels/Tires</b>	<b>9</b>
<b>Final Drive</b>	<b>10</b>
<b>Brakes</b>	<b>11</b>
<b>Suspension</b>	<b>12</b>
<b>Steering</b>	<b>13</b>
<b>Frame</b>	<b>14</b>
<b>Electrical System</b>	<b>15</b>
<b>Appendix</b>	<b>16</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.





**ER-5**

# **Motorcycle Service Manual**

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Department/Consumer Products & Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.