

[Click here to get the complete manual](#)



SHOP MANUAL

Manufacturer:

Doosan Infracore Norway AS
N - 6440 Elnesvågen - NORWAY

Printed in Norway

Dealer:

Contents

0 General

1 Engine

2 Transmission

3 Driveline

4 Lubrication

5 Hydraulic

6 Electrical system

7 Front frame

8 Rear frame

9 Option

10 Error codes list

Chapter 0

General instructions

Index

Foreword	4
Torque limit table	5
Types of sealing-/locking compounds and lubricants	6
Safety in workshop.....	7
Working on machine	8
Personal Protective Equipment (PPE).....	11
Vibration	12
Injurious noise	13
Organic solvent	14
Fueling.....	15
Fire and Explosion Prevention.....	15
Fire and explosion risks	17
In case of Fire	18
Coolant	19
Refrigerant	20
Air pollution	21
Operation in extreme conditions	22
Liquid or gas under high pressure	26
Asbestos	27
Lead	27
Battery hazard prevention	28
Disposal of hazardous materials	30
Jacked up vehicle or bodywork	31
Crushing and Cutting Danger	31
Heavy units	32
More than one person working with the same object.....	33
Involuntary start of electric motors etc.	33
Rotating parts	34
Splinters, flying object When using certain tools.....	35
Springs under load.....	36
Precautions for disassembly and assembly	37

Foreword

The Shop Manual is prepared as an aid to performing quality repairs by giving the service personnel an understanding of the dump truck, and showing the correct way perform repairs and make judgements.

Make sure that you understand the manual and use it at every available opportunity. The manual will also serve as a useful guide to office personnel and other persons who are involved with the dump truck in one way or another.

How to use the SHOP MANUAL:

The main index give an view of the chapters index page no.

The manual is divided into the following chapters:

Chapter 1:	Engine	Chapter 6:	Electric system
Chapter 2:	Transmission	Chapter 7:	Front frame
Chapter 3:	Drive line	Chapter 8:	Rear frame
Chapter 4:	Lubrication	Chapter 9:	Option
Chapter 5:	Hydraulic system	Chapter 10:	Error codes list

In the chapters index you will find the page no. for the description of each part.

Each part will describe: Structure and function:

This section explains how the components are built and how they work.

Testing and adjusting:

This section explains checks to be made before and after performing repairs, as well as adjustments to be done at the completion of the checks and repairs.

Disassembly and assembly:

This section describes how to remove, install, disassemble, repair and assemble components, and the work order. Special tools are listed at the end of each chapter. The special tools are an excellent aid in the work shop. By using special tools, the job will be easier to perform and in some cases a special tool is required to carry out the work. List of all special tools for the complete truck are listed in the "Special Tool Guide".

Maintenance standard:

This section gives the judgement standards when inspecting disassembled parts.

Troubleshooting:

When a fault is detected, this section is used as before the practical fault finding starts. A skilled and trained mechanic together with the Shop Manual is the best combination for troubleshooting when repair instruction is needed.

At the end of each chapters are the main Troubleshooting

This manual is valid for the serial nos. listed on the first page.

Distributing and updating:

Subscribed Shop Manuals will automatically be updated at revisions.

This manual is originally produced by Doosan Infracore Norway AS, 6440 Elnesvågen, Norway, and must not be reproduced, translated or made available to a third party, fully or partly, without our written permission.

NOTE

Because of the different variants the parts and images which are contained in this book can be different from the current model of dump truck . For the spare parts please used the parts catalogue for current model.