


Chapter 1

Engine

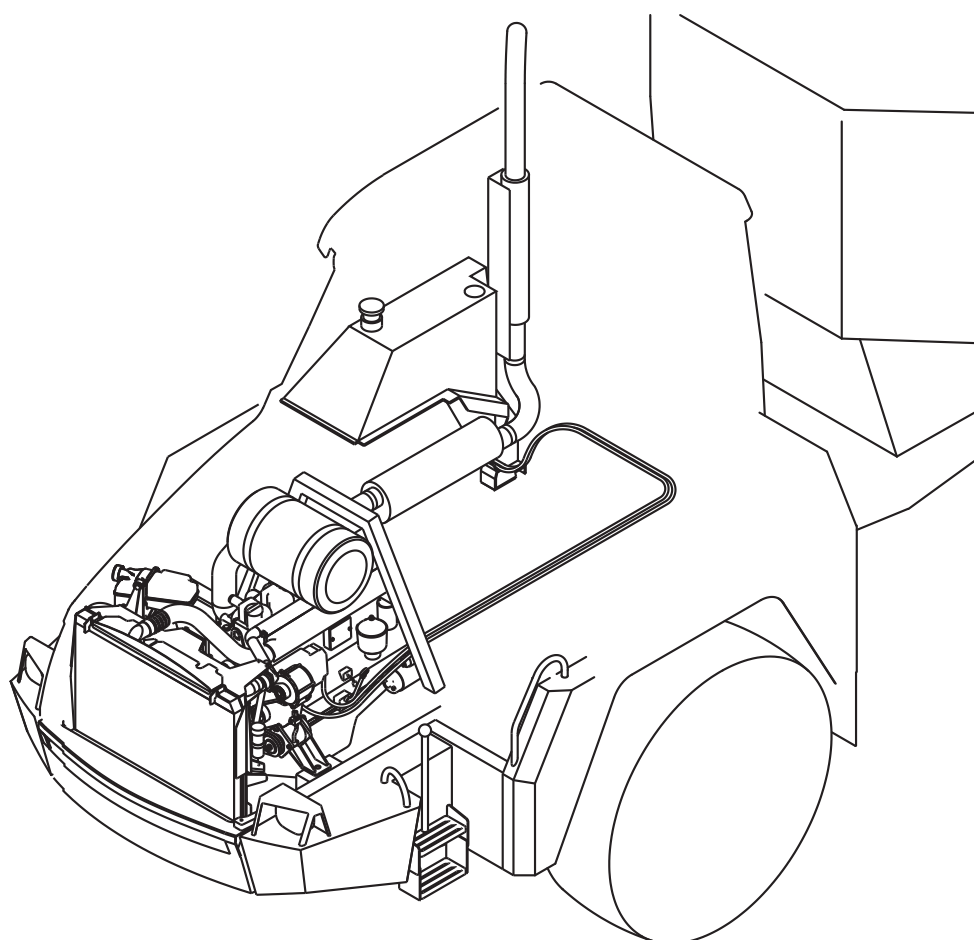

Chapter 1

Engine

Index

Removal of engine assembly	5
Lifting the engine.....	11
Engine identification	12
Fuel system	13
Schematic diagram of the fuel system	13
Overflow valve	13
General	14
FUEL	14
Fuel filter	15
Water separating prefilter	15
Feed pump	17
Diagnostic prosedure	18
Use of diagnostic kit, machine 810001 - 810052	18
Use of diagnostic kit, machine 810053 -	20
Measurement	23
Ecom standard settings code.....	26
Engine control unit, ECU	29
Wiring and cable duct.....	30
Throttle position sensor.....	30
Positions of sensors for ECU	31
Diagnostic lamp and switch (810001 - 810035)	32
Diagnostic lamp and switch (810036 -)	33
Fault codes.....	34
How to read fault codes from the ECU control unit	35
Flash codes tables	37
Overview of flash codes for coordinator	39
Renewing the control unit.....	41
Removing the ECU wiring	42
Cylinder head	46
Special tools.....	46
Cylinder head, parts view.	47
Valve mechanism	48
Dismantling	53
Renewing the valve stem seal.....	53
Replacement of valve seats	54
Machining the valve seats insert	55
Renewing the valve guides	57
Renewing PDE unit injector sleeves	58
Assembly	59
Fitting	59
PDE Injectors	60
Fitting the PDE injector	60
Adjusting unit injectors	64
Adjusting the valve clearance and unit injectors	66
Checking, adjusting the PDE injector rocker arms	67
Turbocharger	69
General	70
Special tools.....	71
Measuring radial clearance and axial clearance	72
Renewing the turbocharger	74

Continuation next page

Pistons and cylinder liners.....	75
Special tools.....	76
Connecting rods.....	77
Removing and dismantling connecting rods and pistons.....	78
Renewal of bearing bushing in connecting rod.....	80
Pistons.....	82
Assembling piston and connecting rod.....	84
Cylinderblock.....	85
Cylinder liner.....	85
Removing the cylinder liners.....	87
Measuring the cylinder liner height.....	88
Fitting the cylinder liners.....	89
Fitting the piston and connecting rod.....	90
Flywheel and flywheel housing.....	92
Special tools.....	93
Removing the flywheel.....	93
Renewing the rear crankshaft seal.....	95
Removing the flywheel housing.....	95
Fitting flywheel housing.....	96
Fitting the flywheel.....	98
Timing gears.....	99
Gear drive.....	99
Belt drive collant pump, generator and AC compressor.....	100
Renewing the seal in the front cover.....	101
Crankshaft damper.....	102
Timing gear, view exploded.....	103
Special tools.....	104
Intermediate gear.....	105
Camshaft gear.....	108
Crankshaft gear.....	109
Camshaft.....	110
Replacement of camshaft bearing.....	111
Crankshaft.....	118
Removal.....	119
Fitting.....	122
Lubrication system.....	123
Oil pump.....	123
Lubrication oilways.....	124
Oil pressure.....	125
Oil cooler, engine.....	126
Oil cooler view.....	127
Renewing seals.....	128
Oil filter.....	129
Centrifugal oil cleaner.....	130
Dismantling and assembly.....	131
Cooling fan.....	135

Continuation next page