

[Click here to get the complete manual](#)

Mega 500-V

Shop Manual

023-00033E

Serial Number 1001 and Up

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

TABLE OF CONTENTS

Safety

Wheel Loader Safety	S0103010K
---------------------------	-----------

Specifications

Specifications for Mega 500-V	S0203070K
-------------------------------------	-----------

General Maintenance

General Maintenance Procedures	S0302000
Standard Torques	S0309000

Upper Structure

Counterweight.....	S0403040K
Fuel Transfer Pump	S0405500
Hydraulic Oil Tank	S0406040K

Lower Structure and Chassis

Center Joint (Articulation Joint).....	S0502020K
--	-----------

Engine and Drive Train

Axle (ZF AP 420R).....	S0602170K
Air-Conditioner.....	S0605050K
Transmission and Torque Converter (ZF 4WG-310).....	S0607080K
Transmission Error Codes (ZF)	S0607900C

Hydraulics

Accumulator.....	S0703000
Cylinders.....	S0705010
Main Pump (Denison T6DMY Series).....	S0708460K
Steering and Brake Pump (Denison T67DB Series).....	S0708470K

Brake Pedal Valve	S0709240K
Main Control Valve (Toshiba)	S0709455K
Pilot Control Valve	S0709476K
Flow Amplifier (Danfoss).....	S0709665K
Power Steering Unit.....	S0709730K
Restriction Valve.....	S0709750K
Hydraulic Schematic (Mega 500-V)	S0793060K

Electrical System

Electrical System	S0802190K
Electrical Schematic (Mega 500-V)	S0893060K

Attachments