

[Click here to get the complete manual](#)

## **DX27Z**

Shop Manual

K1028288E

Serial Number 5001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

# Table of Contents

## Safety

Track Excavator Safety .....	SP001061
------------------------------	----------

## Specifications

Specification for DX27Z .....	SP001106
-------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP000016
Standard Torques .....	SP000813

## Upper Structure

Cabin .....	SP001063
Swing Bearing.....	SP001064

## Lower Structure and Chassis

Track Assembly .....	SP001099
----------------------	----------

## Engine and Drive Train

Drive Coupling (Main Pump) .....	SP001066
----------------------------------	----------

## Hydraulics

Accumulator.....	SP000028
Center Joint (Swivel).....	SP001067
Cylinders.....	SP001100
Swing Motor.....	SP001101
Travel Motor.....	SP001102
Main Pump.....	SP001103
Main Control Valve.....	SP001071
Remote Control Valve (Work Lever / Joystick) .....	SP001072

Travel Control Valve.....	SP000839
Pedal Valve.....	SP001073
Hydraulic Schematic (DX27Z).....	SP001104

## **Electrical System**

Electrical System .....	SP001142
Electrical Schematic (DX27Z) .....	SP001144

## **Attachments**

Working Attachments.....	SP001105
Bucket.....	SP001076