

[Click here to get the complete manual](#)

# SD 200

Shop Manual

950106-00444

Serial Number 1001 and Up (Tier II)

July 2011

DISD reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

# TABLE OF CONTENTS

## Safety

Wheel Loader Safety .....	S0103010K
---------------------------	-----------

## Specifications

Specifications for SD 200.....	SP002380
--------------------------------	----------

## General Maintenance

General Maintenance Procedures.....	S0302000
Standard Torques.....	S0309000

## Upper Structure

Counterweight.....	SP002360
Hydraulic Oil Tank .....	SP002361

## Lower Structure and Chassis

Center Joint (Articulation Joint).....	SP002362
--	----------

## Engine and Drive Train

Engine .....	SP002530
Front Axle .....	SP002363
Rear Axle .....	SP002364
Air Conditioner.....	SP002345
Transmission and Torque Converter .....	SP002365

## Hydraulics

Cylinders.....	SP002366
Main Pump.....	SP002367
Main Control Valve.....	SP002368
Pilot Control Valve.....	SP002369
Priority Valve.....	SP002370
Steering Unit.....	SP002371
Hydraulic Schematic (SD 200).....	SP002372

**Brake**

Brake System ..... SP002359  
Parking System ..... SP002373

**Electrical System**

Electrical System ..... SP002374  
Electrical Schematic (SD 200)..... SP002375

**Attachments**