

[Click here to get the complete manual](#)

DL200

DL200TC

Shop Manual

K1024538E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Wheel Loader Safety.....	SP000865
--------------------------	----------

Specifications

Specification for DL200/ DL200TC.....	SP000914
---------------------------------------	----------

General Maintenance

General Maintenance Procedures	SP001055
Standard Torques	SP000813

Drive Train

Transmission and Torque Converter.....	SP001011
Transmission Error Codes (ZF).....	SP001056
Axle.....	SP001018
Drive Shaft.....	SP001019

Brake

Service Brake.....	SP001080
Brake Supply Valve.....	SP001081
Parking Brake	SP001082
Brake Pedal Valve.....	SP001083
Accumulator.....	SP001084

Steering

Steering	SP001085
Cushion Valve.....	SP000328
Emergency Steering	SP001086

Frame

Articulation Center	SP001087
Counterweight.....	SP000130

Tank

Oil Tank.....	SP001088
Fuel Tank.....	SP001089

Hydraulics

Cylinders.....	SP001027
Main Pump.....	SP001212
Main Control Valve.....	SP001090
Load Isolation System.....	SP001091
Cooling System.....	SP001092
Pilot System.....	SP001093
Hydraulic Schematic DL200.....	SP001094

Electrical System

Air Conditioner	SP001211
Electrical System	SP001095
Electrical Schematic DL200/ DL250.....	SP000925