

[Click here to get the complete manual](#)

DL250

Shop Manual

K1023773E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Wheel Loader Safety.....	SP000865
--------------------------	----------

Specifications

Specification for DL250	SP000866
-------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000097
Standard Torques	SP000813

Drive Train

Transmission and Torque Converter.....	SP000867
Transmission Error Codes (ZF).....	SP001056
Front Axle (ZF-MT-L 3085).....	SP000868
Rear Axle (ZF-MT-L 3075).....	SP000869
Drive Shaft	SP000870

Brake

Service Brake.....	SP000871
Brake Supply Valve.....	SP000872
Parking Brake	SP000873
Brake Pedal Valve.....	SP000874
Accumulator.....	SP000875

Steering

Steering	SP000876
Cushion Valve.....	SP000328
Emergency Steering	SP000877

Frame

Articulation Center	SP000878
Counterweight.....	SP000130

Tank

Oil Tank.....	SP000879
Fuel Tank.....	SP000880

Hydraulics

Cylinders.....	SP001027
Main Pump.....	SP001035
Main Control Valve.....	SP000881
Load Isolation System.....	SP000882
Cooling System.....	SP000883
Pilot System.....	SP000884
Hydraulic Schematic DL250.....	SP000886

Electrical System

Air Conditioner	SP001211
Electrical System	SP000924
Electrical Schematic DL200/ DL250.....	SP000925