Click here to get the complete manual

DL420

Shop Manual 950106-00009E Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Serial Number 5001 and Up

Product Label

Instructions

Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine

Table of Contents

Safety	
Wheel Loader Safety	. SP002004
Specifications	
•	0
Specification for DL420	. SP002005
General Maintenance	
General Maintenance Procedures	. SP000097
Standard Torques	. SP000098
Engine	
QSM11 Engine	. SP001669
Drive Train	
Transmission and Torque Converter (ZF 4WG-260-4)	. SP002033
Transmission Error Codes (ZF)	
Front Axle (ZF - MT-L 3105)	
Rear Axle (ZF - MT-L 3095)	
Drive Shaft	
Brake	
Service Brake	. SP002006
Brake Supply Valve	. SP002007
Parking Brake	
Brake Pedal Valve	. SP000123
Accumulator	. SP002008
Steering	
Steering Unit	. SP002009

Flow Amplifier
Emergency Steering
Frame
Articulation Center
CounterweightSP000130
Tank
Oil TankSP002011
Fuel TankSP002012
Hydraulics
Main Control ValveSP000144
Load Isolation SystemSP002013
Cooling SystemSP002014
Pilot SystemSP002015
Hydraulic Schematic (DL420) SP002016
Electrical System
Air ConditionerSP000172
Electrical System SP002032
Electrical Schematic (DL420)