Click here to get the complete manual

DX225NLC

Shop Manual
K1024241E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety	
Track Excavator SafetySF	P000014
Specifications	
Specification for DX225NLCSF	P001010
General Maintenance	
General Maintenance ProceduresSF	P000016
Standard TorquesSF	P000813
Upper Structure	
CabinSI	P000943
CounterweightSF	P000940
Fuel TankSI	P001014
Fuel Transfer PumpSI	P000021
Swing BearingSF	P001109
Swing Reduction GearSF	P000915
Lower Structure and Chassis	
Track Assembly SF	P000911
Engine and Drive Train	
Drive Coupling (Main Pump)SF	P001069
Hydraulics	
Hydraulic System Troubleshooting, Testing and Adjustment SF	P000913
AccumulatorSF	P000028
Center Joint (Swivel)	P000029

CylindersSP000030)
Swing MotorSP001013	3
Travel MotorSP000922	2
Gear PumpSP000931	1
Main Control ValveSP000034	4
Axial Piston PumpSP001008	3
PTO ServerSP000933	3
Remote Control Valve (Work Lever / Joystick)SP000069	9
Travel Control Valve (with Damper))
Solenoid Valve AssemblySP000445	5
Breaker EPPR Valve (Opt)SP000192	2
Hydraulic Schematic (DX225NLC)SP001057	7
Electrical System	
Electrical System SP000935	5
Electrical Schematic (DX180LC/DX225LC/DX225NLC/DX255LC) SP000936	3
Attachments	
Boom and ArmSP000937	7
Bucket	9