

[Click here to get the complete manual](#)

# 521D Loader Service Manual 6-40742 Table of Contents

Description	Section No.	Form No.
<b>General</b> <span style="float: right;"><b>Tab 1</b></span>		
Section Index - General		6-42730
Standard Torque Specifications	1001	8-71602
Fluids and Lubricants	1002	6-40762
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		8-98902
<b>Engines</b> <span style="float: right;"><b>Tab 2</b></span>		
Section Index - Engines		6-42281
Engine and Radiator Removal and Installation	2000	6-42290
Engine and Radiator Removal and Installation P.I.N. JEE0135501 and Above	2000	6-48920
Stall Tests	2002	6-40770
For Engine Repair, See the Engine Service Manual		
<b>Fuel System</b> <span style="float: right;"><b>Tab 3</b></span>		
Section Index - Fuel System		6-42300
For Fuel System Repair, See the Engine Service Manual		
<b>Electrical</b> <span style="float: right;"><b>Tab 4</b></span>		
Section Index - Electrical		6-42311
Removal and Installation of Starter and Alternator	4001	6-42321
Electrical Specifications and Troubleshooting	4002	6-40782
Electrical Specifications and Troubleshooting P.I.N. JEE0135501 and Above	4002	6-48930
Batteries	4003	6-42330
Information and Diagnostic Center	4005	6-42351
Alternator - 65 Ampere	4007	7-12260
Alternator - 45 Ampere	4008	6-42360
<b>Steering</b> <span style="float: right;"><b>Tab 5</b></span>		
Section Index - Steering		6-42370
Removal and Installation of Steering Components	5001	6-42380
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-40790
Steering Control Valve	5003	6-42390
Steering Priority Valve	5004	6-42400
Steering Cylinders	5005	6-42410
Center Pivot	5006	6-42420
Auxiliary Steering Motor and Pump	5008	6-42430

**CASE CORPORATION**  
700 State Street  
Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
3350 South Service Road  
Hamilton, ON L7N 3M6 CANADA

Bur 6-42722

Copyright © 2003 Case Corporation  
Printed in U.S.A.  
August, 2001 (Revised February, 2003)

# 521D Loader Service Manual 6-40742 Table of Contents

Description	Section No.	Form No.
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		6-42442
Removal and Installation of Power Train Components	6001	6-42451
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-40800
Transmission	6003	6-42460
Front and Rear Axle	6004	6-42470
Front and Rear Axle P.I.N. JEE0135501 and Above	6004	6-48970
Drive Shafts, Center Bearing, and Universal Joints	6005	6-42480
Wheels and Tires	6006	6-42490
Transmission Control Valve	6007	6-42500
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		6-42510
Removal and Installation of Brake Components	7001	6-42521
Hydraulic Brake Troubleshooting	7002	6-40811
Brake Accumulators	7004	6-42531
Parking Brake	7008	6-42540
<b>NOTE:</b> For parking brake and brake pedal adjustments, see Section 9001.		
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		6-42550
Removal and Installation of Hydraulic Components	8001	6-42560
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-40820
Cleaning the Hydraulic System	8003	7-49640
Cylinders	8006	6-42590
Coupler Solenoid Locking Valve	8007	6-42600
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-42621
<b>Mounted Equipment</b>		<b>Tab 9</b>
Section Index - Mounted Equipment		6-42640
Pedals and Levers	9001	6-40830
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-42650
Air Conditioner System Service	9003	6-42660
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	6-42671
Loader	9006	6-42690
ROPS Cab and ROPS Canopy	9007	6-42700
Cab Glass Installation	9010	6-42710