

[Click here to get the complete manual](#)

**621F**  
**721F**  
**Tier 4**

**Wheel Loader**

*from PIN NBF213602 and above*

# SERVICE MANUAL

**Part number 84605841**

1st edition English

May 2012

**CASE**  
CONSTRUCTION

# Contents

---

## INTRODUCTION

Engine.....	10
Engine and crankcase.....	10.001
Air cleaners and lines.....	10.202
Engine lubrication system .....	10.304
Aftercooler.....	10.310
Engine cooling system .....	10.400
Fan and drive.....	10.414
Selective Catalytic Reduction (SCR) exhaust treatment .....	10.500
Engine generic sub-group .....	10.AAA
Transmission.....	21
Powershift transmission .....	21.113
Powershift transmission external controls .....	21.135
Powershift transmission internal components.....	21.155
Four-Wheel Drive (4WD) system .....	23
Drive shaft.....	23.314
Front axle system .....	25
Powered front axle .....	25.100
Front bevel gear set and differential.....	25.102
Final drive hub, steering knuckles, and shafts .....	25.108
Rear axle system.....	27
Powered rear axle .....	27.100
Rear bevel gear set and differential .....	27.106
Planetary and final drives.....	27.120
Brakes and controls .....	33
Hydraulic service brakes .....	33.202
Hydraulic systems.....	35

Hydraulic systems .....	35.000
Variable displacement pump .....	35.106
Pilot system.....	35.357
Main control valve .....	35.359
Auxiliary hydraulic valves and lines .....	35.525
Front loader arm hydraulic system .....	35.701
<b>Steering.....</b>	<b>41</b>
Auxiliary steering .....	41.910
<b>Wheels .....</b>	<b>44</b>
Front wheels.....	44.511
<b>Cab climate control .....</b>	<b>50</b>
Air conditioning .....	50.200
<b>Electrical systems .....</b>	<b>55</b>
Electrical system .....	55.000
Fuel tank system .....	55.011
Engine cooling system .....	55.012
Engine control system.....	55.015
Service brake electrical system .....	55.030
Parking brake electrical system .....	55.031
Hydraulic system control .....	55.036
Steering control system .....	55.047
Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.050
Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.051
Harnesses and connectors .....	55.100
Engine starting system .....	55.201
Cold start aid .....	55.202
Alternator .....	55.301
Battery.....	55.302
External lighting .....	55.404

External lighting switches and relays .....	55.405
Warning indicators, alarms, and instruments .....	55.408
Loader arm and bucket control system .....	55.415
Cab/Platform harnesses and connectors .....	55.510
Cab controls .....	55.512
Cab lighting .....	55.514
Wiper/Washer system .....	55.518
Cab brake controls .....	55.519
Cab controls (Lift arm, Boom, Dipper, Bucket) .....	55.524
Selective Catalytic Reduction (SCR) electrical system .....	55.988
FAULT CODES .....	55.DTC
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
Pneumatically-adjusted operator seat .....	90.124
Cab .....	90.150