



# Bobcat®

EN


---

## Service Manual

# S100 Skid-Steer Loader

---

**S/N A2G811001 & Above**  
**S/N A8ET11001 - A8ET19999**

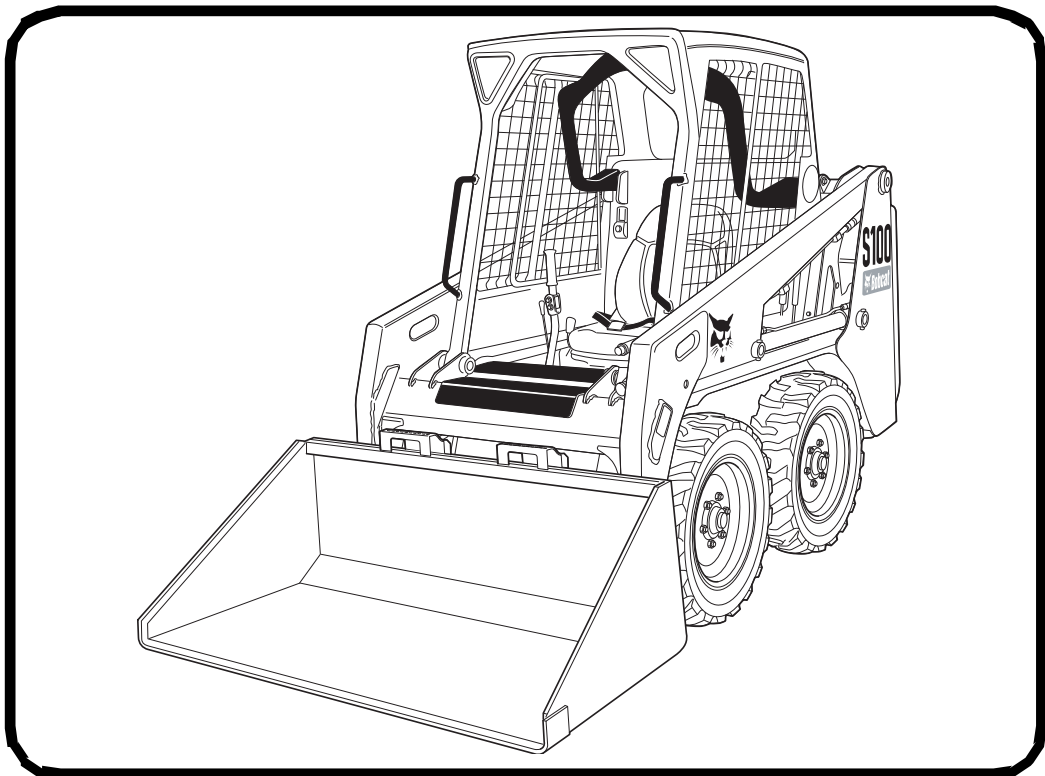

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS)**



## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HYDRAULIC / HYDROSTATIC SYSTEM .....	10-01
AIR CLEANER SERVICE .....	10-01	HYDRAULIC PUMP .....	20-01
ALTERNATOR .....	60-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BACK-UP ALARM SYSTEM .....	10-01, 60-01	HYDROSTATIC MOTOR .....	30-01
BATTERY .....	60-01	HYDROSTATIC PUMP .....	30-01
BLOWER FAN .....	20-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
BOBCAT CONTROLLER (MAIN) .....	60-01	INSTRUMENT PANELS .....	60-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS) .....	60-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	LIFT ARMS .....	50-01
BOB-TACH (POWER) BLOCK .....	20-01	LIFT ARM SUPPORT DEVICE .....	10-01
BOB-TACH (POWER-OPTION) .....	10-01, 50-01	LIFTING AND BLOCKING THE LOADER .....	10-01
BRAKE .....	40-01	LIGHTS .....	60-01
BUCKET POSITION VALVE .....	20-01	LOADER SPECIFICATIONS .....	SPEC-01
CAB DOOR .....	50-01	LOADER STORAGE AND RETURN TO SERVICE .....	10-01
CAMSHAFT AND TIMING GEARS .....	70-01	LUBRICATING THE LOADER .....	10-01
CASE DRAIN FILTER .....	30-01	LUBRICATION SYSTEM .....	70-01
CHAINCASE .....	40-01	MAINTENANCE CLOCK .....	60-01
CHARGE PRESSURE .....	30-01	MAIN RELIEF VALVE .....	20-01
CONTROL HANDLE / LEVER .....	50-01	MUFFLER .....	70-01
CONTROL PANEL .....	50-01	OIL COOLER .....	20-01
CONTROL PANEL SETUP .....	60-01	OPERATOR CAB .....	10-01, 50-01
CONTROL PEDALS AND LINKAGE .....	50-01	OPERATOR SEAT .....	50-01
CONVERSIONS .....	SPEC-01	OPERATOR SEAT (SUSPENSION) .....	50-01
CRANKSHAFT AND PISTONS .....	70-01	PASSWORD SETUP .....	60-01
CYLINDER (BOB-TACH) .....	20-01	PIVOT PINS .....	10-01
CYLINDER HEAD .....	70-01	REAR DOOR .....	50-01
CYLINDER (LIFT) .....	20-01	REAR GRILL .....	50-01
CYLINDER (TILT) .....	20-01	REGULAR MAINTENANCE .....	80-01
DIAGNOSTICS SERVICE CODES .....	60-01	REMOTE START TOOL .....	10-01
DRIVE BELT .....	30-01	SEAT BAR .....	50-01
DRIVE COMPONENTS .....	40-01	SEAT BAR SENSOR .....	60-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	SERVICE PC (LAPTOP COMPUTER) .....	60-01
ENGINE COOLING SYSTEM .....	10-01, 70-01	SERVICE SCHEDULE .....	10-01
ENGINE INFORMATION .....	70-01	SPARK ARRESTOR MUFFLER .....	10-01
ENGINE LUBRICATION SYSTEM .....	10-01	STARTER .....	60-01
ENGINE SPEED CONTROL .....	70-01	STOPPING THE ENGINE AND LEAVING THE LOADER .....	10-01
FINAL DRIVE TRANSMISSION (CHAINCASE) .....	10-01	TIRE MAINTENANCE .....	10-01
FLYWHEEL AND HOUSING .....	70-01	TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
FLYWHEEL RPM SENSOR .....	60-01	TOWING THE LOADER .....	10-01
FRONT AUXILIARY HYDRAULIC COUPLER BLOCK .....	20-01	TRACTION LOCK .....	60-01
FUEL SYSTEM .....	10-01, 70-01	TRANSPORTING THE BOBCAT LOADER .....	10-01
FUEL TANK .....	50-01	TROUBLESHOOTING .....	80-01
HEATER COIL .....	80-01	WINDOW (FRONT DOOR) .....	50-01
HEATER FAN .....	80-01	WINDOW (REAR) .....	50-01
HEATER SYSTEM .....	80-01	WINDOW (SIDE) .....	50-01
HEATER UNIT .....	80-01	WINDOW (TOP) .....	50-01
HEATER VALVE .....	80-01		
HYDRAULIC CONNECTION SPECS .....	SPEC-01		
HYDRAULIC CONTROL VALVE .....	20-01		
HYDRAULIC FLUID RESERVOIR .....	20-01		
HYDRAULIC / HYDROSTATIC FILTERS .....	20-01		
HYDRAULIC / HYDROSTATIC FLUID SPECIFICATIONS .....	SPEC-01		