



# Bobcat®


---

## Service Manual

# S100 Skid-Steer Loader

---

S/N A2G711001 & Above  
S/N A89L11001 & Above

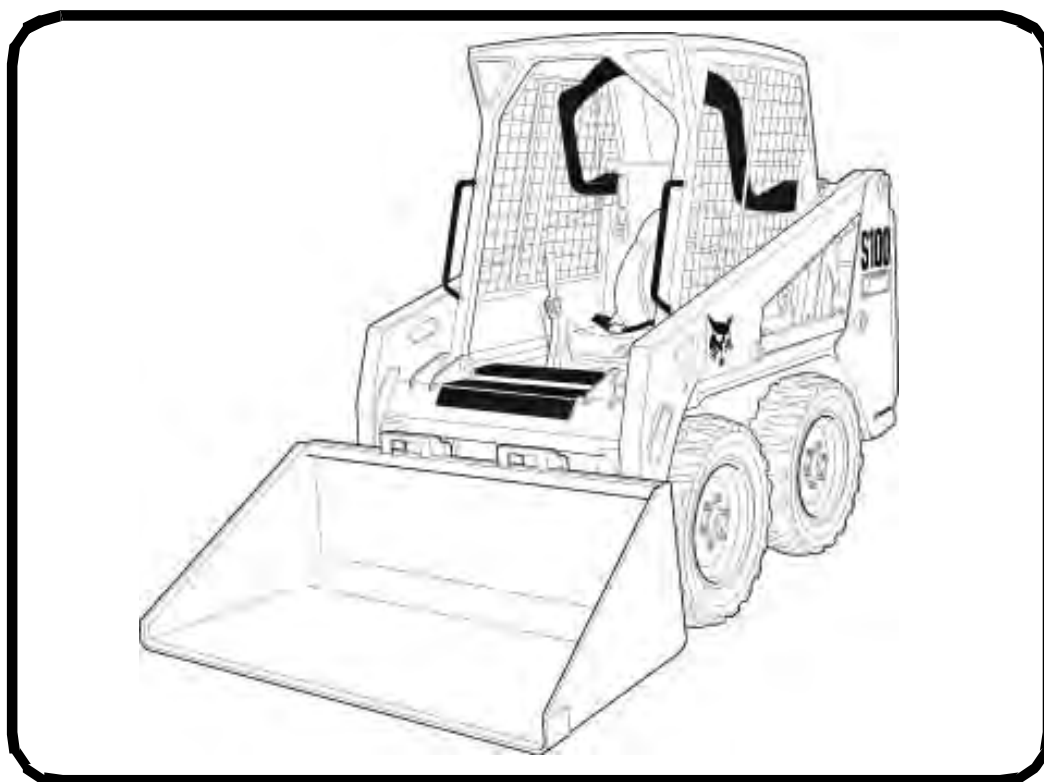

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*



## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HYDROSTATIC MOTOR .....	30-01
AIR CLEANER SERVICE .....	10-01	HYDROSTATIC PUMP .....	30-01
ALTERNATOR .....	60-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
BACK-UP ALARM SYSTEM.....	60-01	INSTRUMENT PANELS .....	60-01
BATTERY .....	60-01	LIFT ARMS.....	50-01
BOBCAT CONTROLLER (MAIN).....	60-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
BOBCAT INTERLOCK CONTROL		LIFT ARM SUPPORT DEVICE.....	10-01
SYSTEM (BICS) .....	60-01	LIFTING AND BLOCKING THE LOADER.....	10-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	LIGHTS.....	60-01
BRAKE .....	40-01	S100 LOADER SPECIFICATIONS.....	SPEC-01
BUCKET POSITION VALVE .....	20-01	LOADER STORAGE AND RETURN TO SERVICE	10-01
CAMSHAFT AND TIMING GEARS.....	70-01	LUBRICATING THE LOADER.....	10-01
CHAINCASE .....	40-01	LUBRICATION SYSTEM.....	70-01
CHARGE PRESSURE .....	30-01	MAIN RELIEF VALVE .....	20-01
CONTROL HANDLE / LEVER .....	50-01	MAINTENANCE CLOCK .....	60-01
CONTROL PANEL .....	50-01	MUFFLER.....	70-01
CONTROL PEDALS AND LINKAGE .....	50-01	OIL COOLER.....	20-01
CONVERSIONS .....	SPEC-01	OPERATOR CAB .....	10-01, 50-01
CRANKSHAFT AND PISTONS .....	70-01	OPERATOR SEAT .....	50-01
CYLINDER (LIFT) .....	20-01	OPERATOR SEAT (SUSPENSION).....	50-01
CYLINDER (TILT) .....	20-01	PIVOT PINS .....	10-01
CYLINDER HEAD.....	70-01	REAR DOOR .....	50-01
DIAGNOSTICS SERVICE CODES.....	60-01	REAR GRILL .....	50-01
DRIVE BELT .....	30-01	REGULAR MAINTENANCE .....	80-01
DRIVE COMPONENTS.....	40-01	REMOTE START TOOL .....	10-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	SEAT BAR .....	50-01
ENGINE COOLING SYSTEM.....	10-01, 70-01	SEAT BAR SENSOR.....	60-01
ENGINE LUBRICATION SYSTEM .....	10-01	SERVICE PC (LAPTOP COMPUTER).....	60-01
ENGINE INFORMATION .....	70-01	SERVICE SCHEDULE.....	10-01
ENGINE SPEED CONTROL .....	70-01	SPARK ARRESTOR MUFFLER.....	10-01
FINAL DRIVE TRANSMISSION (CHAINCASE) .....	10-01	STARTER .....	60-01
FLYWHEEL RPM SENSOR.....	60-01	STOPPING THE ENGINE AND	
FLYWHEEL.....	70-01	LEAVING THE LOADER .....	10-01
FRONT AUXILIARY HYDRAULIC COUPLERS .....	20-01	TIRE MAINTENANCE .....	10-01
FUEL TANK.....	50-01	TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
HEATER COIL .....	80-01	TOWING THE LOADER .....	10-01
HEATER FAN.....	80-01	TRACTION LOCK .....	60-01
HEATER SYSTEM.....	80-01	TRANSPORTING THE LOADER ON A TRAILER ..	10-01
HEATER UNIT.....	80-01	TROUBLESHOOTING .....	80-01
HEATER VALVE.....	80-01	WINDOW (FRONT DOOR) .....	50-01
HYDRAULIC CONNECTION SPECS.....	SPEC-01	WINDOW (REAR) .....	50-01
HYDRAULIC CONTROL VALVE.....	20-01	WINDOW (SIDE) .....	50-01
HYDRAULIC FLUID RESERVOIR.....	20-01	WINDOW (TOP) .....	50-01
HYDRAULIC / HYDROSTATIC FILTERS.....	20-01		
HYDRAULIC / HYDROSTATIC			
FLUID SPECIFICATIONS .....	SPEC-01		
HYDRAULIC / HYDROSTATIC SYSTEM .....	10-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC SYSTEM INFORMATION.....	20-01		