

[Click here to get the complete manual](#)




Bobcat®


Service Manual

S160 Skid-Steer Loader

S/N 529960001 & Above
S/N 530060001 & Above
S/N AC3260001 & Above
S/N AHWA11001 & Above

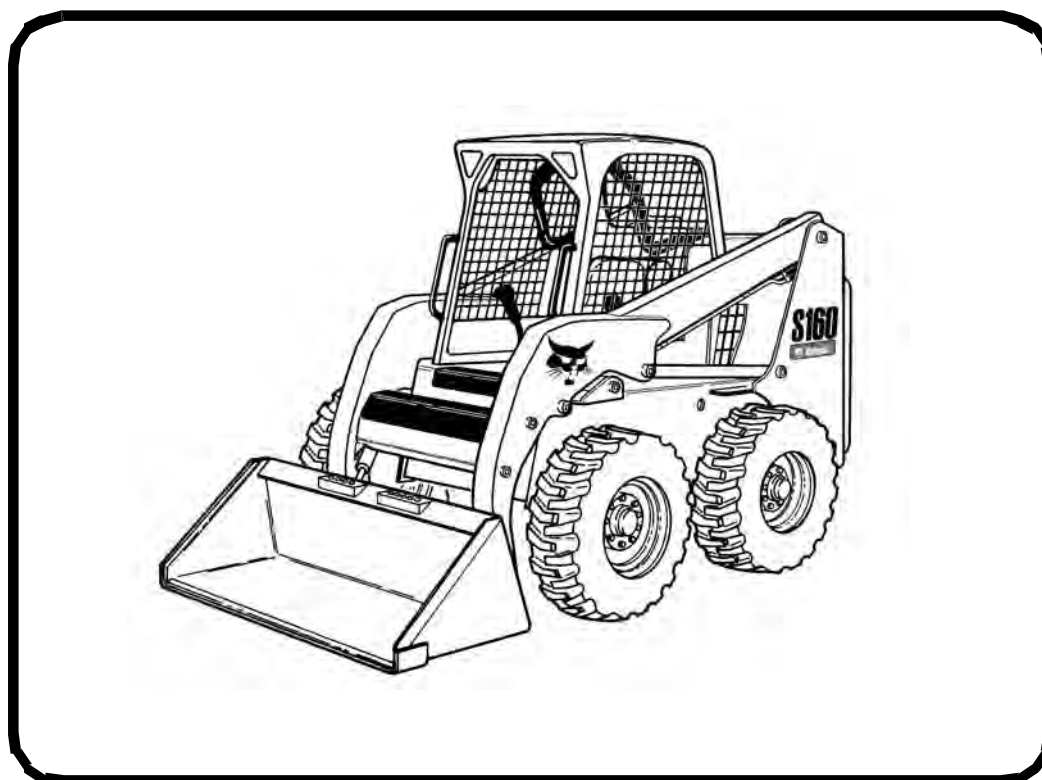

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

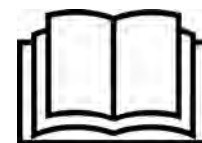

ALPHABETICAL INDEX

ACCESS PANEL (INSIDE)	50-01	ENGINE LUBRICATION SYSTEM	10-01
ACCESS PANEL (INSIDE) (SJC)	50-01	ENGINE COOLING SYSTEM	70-01
AIR CLEANER	70-01	ENGINE INFORMATION	70-01
AIR CLEANER SERVICE	10-01	ENGINE SPEED CONTROL	70-01
AIR CONDITIONING SYSTEM FLOW	80-01	ENGINE SPEED CONTROL (SJC)	70-01
ALTERNATOR	60-01	EVAPORATOR	80-01
		EVAPORATOR/HEATER UNIT	80-01
		EXPANSION VALVE	80-01
BACK-UP ALARM SYSTEM	60-01		
BATTERY	60-01	FINAL DRIVE TRANSMISSION (CHAINCASE)	10-01
BLOWER FAN	80-01	FLYWHEEL AND HOUSING	70-01
BOBCAT CONTROLLER (ACS)	60-01	FLYWHEEL RPM SENSOR	60-01
BOBCAT CONTROLLER (GATEWAY AND AUXILIARY)	60-01	FRONT AUXILIARY HYDRAULIC COUPLER BLOCK	20-01
BOBCAT CONTROLLER (SJC) (DRIVE)	60-01	FUEL SYSTEM	10-01, 70-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS)	60-01	FUEL TANK	50-01
BOB-TACH (HAND LEVER)	10-01, 50-01		
BOB-TACH (POWER)	10-01, 50-01	HEATER COIL	80-01
BOB-TACH (POWER) BLOCK	20-01	HEATER VALVE	80-01
BRAKE (SINGLE SPEED)	40-01	HIGH FLOW VALVE	20-01
BRAKE (TWO-SPEED)	40-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BUCKET POSITION VALVE	20-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
		HYDRAULIC CONTROL VALVE (STANDARD)	20-01
		HYDRAULIC/HYDROSTATIC FILTERS	20-01
		HYDRAULIC FLUID RESERVOIR	20-01
		HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
CAB DOOR	50-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
CALIBRATION	60-01	HYDRAULIC PUMP (STANDARD)	20-01
CAMSHAFT AND TIMING GEARS	70-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CASE DRAIN FILTER	30-01	HYDRAULIC PUMP (SJC)	20-01
CHAINCASE	40-01	HYDRAULIC PUMP (SJC) (HIGH FLOW)	20-01
CHARGE PRESSURE	30-01	HYDRAULIC SYSTEM INFORMATION	20-01
COMPRESSOR	80-01	HYDROSTATIC MOTOR	30-01
CONDENSER	80-01	HYDROSTATIC MOTOR (TWO SPEED)	30-01
CONTROL HANDLE/LEVER	50-01	HYDROSTATIC MOTOR CARRIER (SINGLE AND TWO-SPEED WITH MANUAL CONTROLS)	30-01
CONTROL HANDLE/LEVER (ACS)	50-01	HYDROSTATIC MOTOR CARRIER (SINGLE AND TWO-SPEED WITH SJC CONTROLS)	30-01
CONTROL HANDLE/LEVER (SJC)	50-01	HYDROSTATIC PUMP	30-01
CONTROL PANEL	50-01	HYDROSTATIC PUMP (SJC)	30-01
CONTROL PANEL (SJC)	50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL PANEL SETUP	60-01		
CONTROL PEDALS AND LINKAGE	50-01	INSTRUMENT PANELS	60-01
CONTROL PEDALS (ACS)	50-01		
CONTROL SYSTEM (ACS)	60-01		
CONVERSIONS	SPEC-01		
CRANKSHAFT AND PISTONS	70-01		
CYLINDER (BOB-TACH)	20-01		
CYLINDER (LIFT)	20-01		
CYLINDER (TILT)	20-01		
CYLINDER HEAD	70-01		
DIAGNOSTICS SERVICE CODES	60-01		
DRIVE BELT	30-01		
DRIVE COMPONENTS	40-01		
ELECTRICAL/HYD. CONTROLS	60-01		
ELECTRICAL/HYD. CONTROLS (SJC)	60-01		
ELECTRICAL SYSTEM INFORMATION	60-01		
EMERGENCY EXIT	10-01		
ENGINE COOLING SYSTEM	10-01		

ALPHABETICAL INDEX (CONT'D)

LIFT ARMS	50-01	WHEEL SPEED SENSOR (SJC)	60-01
LIFT ARM BYPASS CONTROL VALVE.....	20-01	WINDOW (CAB DOOR)	50-01
LIFT ARM SUPPORT DEVICE.....	10-01	WINDOW (REAR)	50-01
LIFTING AND BLOCKING THE LOADER.....	10-01	WINDOW (SIDE).....	50-01
LIGHTS.....	60-01	WINDOW (TOP).....	50-01
S160 LOADER SPECIFICATIONS.....	SPEC-01		
LOADER STORAGE AND RETURN TO SERVICE	10-01		
LUBRICATING THE LOADER.....	10-01		
LUBRICATION SYSTEM	70-01		
MAIN RELIEF VALVE	20-01		
MAINTENANCE CLOCK	60-01		
MUFFLER.....	70-01		
OIL COOLER.....	20-01		
OPERATOR CAB.....	10-01, 50-01		
OPERATOR SEAT	50-01		
OPERATOR SEAT (SUSPENSION).....	50-01		
PASSWORD SETUP	60-01		
PIVOT PINS.....	10-01		
REAR AUXILIARY DIVERTER VALVE	20-01		
REAR DOOR	50-01		
REAR GRILL	50-01		
RECEIVER/DRIER	80-01		
REGULAR MAINTENANCE	80-01		
REMOTE START TOOL KIT-MEL1563	10-01		
REMOTE START TOOL (SERVICE TOOL) ‘ KIT - 6689779	10-01		
SEAT BAR	50-01		
SEAT BAR SENSOR	60-01		
SERVICE PC (LAPTOP COMPUTER)	60-01		
SERVICE SCHEDULE.....	10-01		
SPARK ARRESTOR MUFFLER.....	10-01		
STARTER	60-01		
STEERING DRIFT COMPENSATION	60-01		
STOPPING THE ENGINE AND LEAVING THE LOADER	10-01		
SYSTEM CHARGING AND RECLAMATION	80-01		
THERMOSTAT.....	80-01		
TIRE MAINTENANCE	10-01		
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01		
TOWING THE LOADER	10-01		
TRACTION LOCK.....	60-01		
TRANSPORTING THE LOADER ON A TRAILER ..	10-01		
TROUBLESHOOTING.....	80-01		
TURBOCHARGER	70-01		
TWO-SPEED VALVE	30-01		