

[Click here to get the complete manual](#)



# Bobcat®

---


## Service Manual

# S205 Skid-Steer Loader


---

**S/N 530511001 - 530559999**

**S/N 530611001 - 530659999**

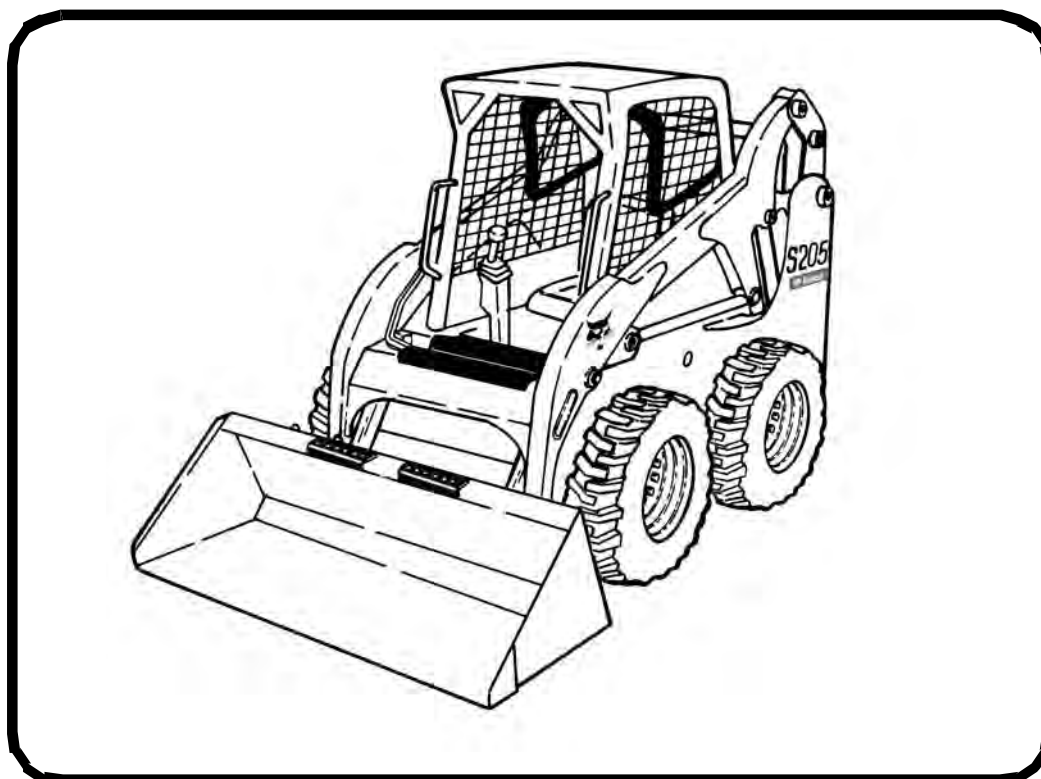

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

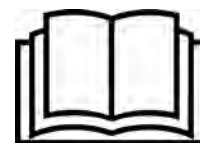

## ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) .....	50-01	ENGINE SPEED CONTROL (SJC) .....	70-01
ACCESS PANEL (INSIDE) (SJC) .....	50-01	EVAPORATOR .....	80-01
AIR CLEANER .....	70-01	EVAPORATOR/HEATER UNIT .....	80-01
AIR CLEANER SERVICE .....	10-01	EXPANSION VALVE .....	80-01
AIR CONDITIONING SYSTEM FLOW .....	80-01		
ALTERNATOR .....	60-01	FLYWHEEL AND HOUSING .....	70-01
		FLYWHEEL RPM SENSOR .....	60-01
BACK-UP ALARM SYSTEM .....	60-01	FRONT AUXILIARY HYDRAULIC	
BATTERY .....	60-01	COUPLER BLOCK .....	20-01
BLOWER FAN .....	80-01	FUEL SYSTEM .....	10-01, 70-01
BOBCAT INTERLOCK CONTROL		FUEL TANK .....	50-01
SYSTEM (BICS) .....	60-01		
BOBCAT CONTROLLER (ACS) .....	60-01	HEATER COIL .....	80-01
BOBCAT CONTROLLER (MAIN) .....	60-01	HEATER VALVE .....	80-01
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01	HIGH FLOW VALVE .....	20-01
BOB-TACH .....	10-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BOB-TACH (HAND LEVER) .....	50-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
BOB-TACH (POWER-OPTION) .....	50-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
BOB-TACH (POWER) BLOCK .....	20-01	HYDRAULIC/HYDROSTATIC FILTERS .....	20-01
BRAKE (SINGLE SPEED) .....	40-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BRAKE (TWO-SPEED) .....	40-01	HYDRAULIC/HYDROSTATIC	
BUCKET POSITION VALVE .....	20-01	FLUID SPECIFICATIONS .....	SPEC-01
		HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
CALIBRATION .....	60-01	HYDRAULIC PUMP (STANDARD) .....	20-01
CAMSHAFT AND TIMING GEARS .....	70-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CHARGE PRESSURE .....	30-01	HYDRAULIC PUMP (SJC) .....	20-01
COMPRESSOR .....	80-01	HYDRAULIC PUMP (SJC) (HIGH FLOW) .....	20-01
CONDENSER .....	80-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CONTROL HANDLE/LEVER .....	50-01	HYDROSTATIC MOTOR .....	30-01
CONTROL HANDLE/LEVER (ACS) .....	50-01	HYDROSTATIC MOTOR (TWO-SPEED) .....	30-01
CONTROL HANDLE/LEVER (SJC) .....	50-01	HYDROSTATIC MOTOR CARRIER	
CONTROL PANEL .....	50-01	(SINGLE AND TWO-SPEED WITH MANUAL	
CONTROL PANEL (SJC) .....	50-01	CONTROLS) .....	30-01
CONTROL PANEL SETUP .....	60-01	HYDROSTATIC MOTOR CARRIER	
CONTROL PEDALS AND LINKAGE .....	50-01	(SINGLE AND TWO-SPEED WITH SJC	
CONTROL PEDALS (ACS) .....	50-01	CONTROLS) .....	30-01
CONTROL SYSTEM (ACS) .....	60-01	HYDROSTATIC PUMP .....	30-01
CONVERSIONS .....	SPEC-01	HYDROSTATIC PUMP (SJC) .....	30-01
CRANKSHAFT AND PISTONS .....	70-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CYLINDER (LIFT) .....	20-01		
CYLINDER (BOB-TACH) .....	20-01	INSTRUMENT PANELS .....	60-01
CYLINDER (TILT) .....	20-01		
CYLINDER HEAD .....	70-01	LIFT ARMS .....	50-01
		LIFT ARM BYPASS CONTROL VALVE .....	20-01
DIAGNOSTICS SERVICE CODES .....	60-01	LIFT ARM SUPPORT DEVICE .....	10-01
DRIVE BELT .....	30-01	LIFTING AND BLOCKING THE LOADER .....	10-01
		LIGHTS .....	60-01
ELECTRICAL/HYD. CONTROLS .....	60-01	S205 LOADER SPECIFICATIONS .....	SPEC-01
ELECTRICAL/HYD. CONTROLS		LOADER STORAGE AND RETURN TO SERVICE ..	10-01
REFERENCE (SJC) .....	60-01	LUBRICATING THE LOADER .....	10-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	LUBRICATION SYSTEM .....	70-01
ENGINE COOLING SYSTEM .....	10-01		
ENGINE LUBRICATION SYSTEM .....	10-01	MAIN RELIEF VALVE .....	20-01
ENGINE COOLING SYSTEM .....	70-01	MAINTENANCE CLOCK .....	60-01
ENGINE INFORMATION .....	70-01	MUFFLER .....	70-01
ENGINE SPEED CONTROL .....	70-01		

## ALPHABETICAL INDEX (CONT'D)

OIL COOLER.....	20-01
OPERATOR CAB.....	10-01, 50-01
OPERATOR SEAT.....	50-01
OPERATOR SEAT (SUSPENSION).....	50-01
PASSWORD SETUP (IF EQUIPPED WITH KEYLESS START).....	60-01
PIVOT PINS.....	10-01
REAR AUXILIARY DIVERTER VALVE.....	20-01
REAR DOOR.....	50-01
REAR GRILL.....	50-01
RECEIVER/DRIER.....	80-01
REGULAR MAINTENANCE.....	80-01
REMOTE START TOOL KIT-MEL1563.....	10-01
REMOTE START TOOL (SERVICE TOOL) KIT-6689779.....	10-01
SEAT BAR.....	50-01
SEAT BAR SENSOR.....	60-01
SERVICE PC (LAPTOP COMPUTER).....	60-01
SERVICE SCHEDULE.....	10-01
SPARK ARRESTOR MUFFLER.....	10-01
SPEED SENSOR (SJC).....	60-01
STARTER.....	60-01
STEERING DRIFT COMPENSATION.....	60-01
STOPPING THE ENGINE AND LEAVING THE LOADER.....	10-01
SYSTEM CHARGING AND RECLAMATION.....	80-01
TEMPERATURE/PRESSURE.....	80-01
THERMOSTAT.....	80-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER.....	10-01
TRACK CARRIAGE COMPONENTS.....	40-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER.....	10-01
TROUBLESHOOTING.....	80-01
TURBOCHARGER.....	70-01
TWO-SPEED VALVE.....	30-01
WINDOW (FRONT DOOR).....	50-01
WINDOW (REAR).....	50-01
WINDOW (SIDE).....	50-01
WINDOW (TOP).....	50-01