

[Click here to get the complete manual](#)


553



Bobcat®

Service Manual

**S/N 528011001 & Above
S/N 528111001 & Above**

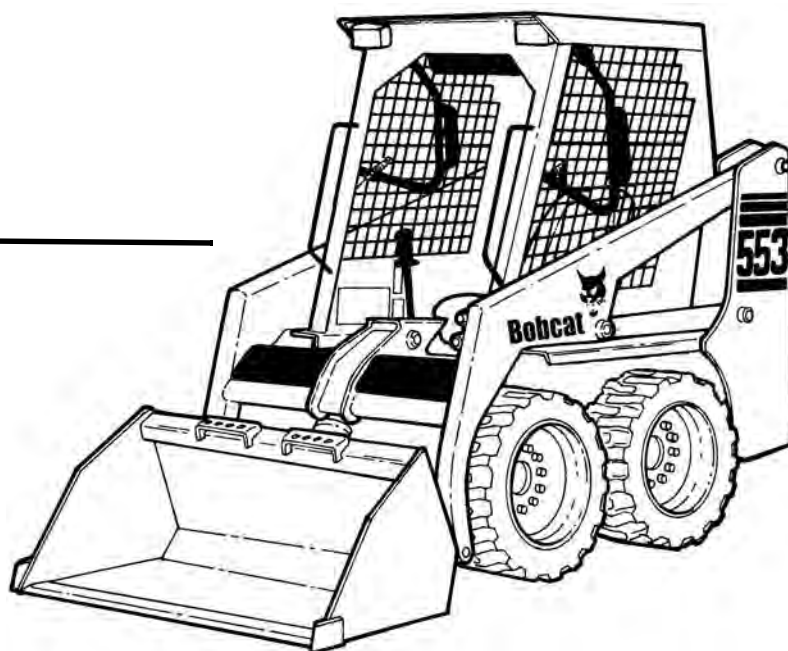

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6903125 (6-12)



Printed in U.S.A.

© Bobcat Company 2006

ALPHABETICAL INDEX

AIR CLEANER	70-01	LIFT ARM	50-01
AIR CLEANER SERVICE	10-01	LIFT ARM BY-PASS CONTROL VALVE.....	20-01
ALTERNATOR	60-01	LIFT ARM SUPPORT DEVICE	10-01
AUXILIARY CONTROL LOCKBOLT	10-01	LIFTING AND BLOCKING THE LOADER.....	10-01
BATTERY	60-01	LIGHTS	60-01
BICS™ SYSTEM (WITH PRESS TO OPERATE BUTTON)	60-01	LOADER SPECIFICATIONS	SPEC-01
BLOWER FAN HOUSING.....	70-01	LUBRICATION OF THE BOBCAT LOADER	10-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)	60-01	MAIN RELIEF VALVE	20-01
BOB-TACH	10-01, 50-01	MUFFLER.....	70-01
CHAINCASE	40-01	OIL COOLER.....	30-01
CONTROL PANEL	30-01	OPERATOR CAB	10-01, 50-01
CONTROL PEDALS	50-01	OPERATOR SEAT	50-01
CONVERSIONS	SPEC-01	PARKING BRAKE.....	40-01
CYLINDER (LIFT).....	20-01	PIVOT PINS	10-01
CYLINDER (TILT)	20-01	PORT BLOCK.....	30-01
DRIVE COMPONENTS	40-01	RADIATOR	70-01
ELECTRICAL SYSTEM INFORMATION	60-01	REAR DOOR	50-01
ENGINE	70-01	REAR GRILL	50-01
ENGINE COMPONENTS AND TESTING	70-01	RECONDITIONING THE ENGINE	70-01
ENGINE COOLING SYSTEM.....	10-01	REMOTE START	10-01
ENGINE LUBRICATION SYSTEM.....	10-01	RUBBER COUPLER LUBRICATION	10-01
ENGINE SPECIFICATIONS	SPEC-01	RUBBER DRIVE COUPLER	70-01
ENGINE SPEED CONTROL	70-01	SEAT BAR	50-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01	SEAT BAR RESTRAINT SYSTEM.....	01-01
FLYWHEEL	70-01	SERVICE SCHEDULE	10-01
FUEL SYSTEM	10-01	SPARK ARRESTOR MUFFLER.....	10-01
FUEL TANK.....	50-01	STARTER	60-01
HYDRAULIC CONTROL VALVE.....	20-01	STEERING	30-01
HYDRAULIC FILTER HOUSING	20-01	TIRE MAINTENANCE	10-01
HYDRAULIC FLUID RESERVOIR.....	20-01	TORQUE SPECIFICATIONS FOR BOLTS ...	SPEC-01
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01	TOWING THE LOADER.....	10-01
HYDRAULIC PUMP	20-01	TRANSPORTING THE BOBCAT LOADER.....	10-01
HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01	TROUBLESHOOTING	70-01
HYDRAULIC/HYDROSTATIC SYSTEM	10-01	WATER FLANGE.....	70-01
HYDRAULIC SYSTEM INFORMATION.....	20-01		
HYDROSTATIC MOTOR	30-01		
HYDROSTATIC PUMP	30-01		
HYDROSTATIC SYSTEM INFORMATION	30-01		
INSTRUMENT PANEL	60-01		