

[Click here to get the complete manual](#)

**751**




**Bobcat®**

# Service Manual

S/N 515711001–515729999

S/N 515611001–515619999

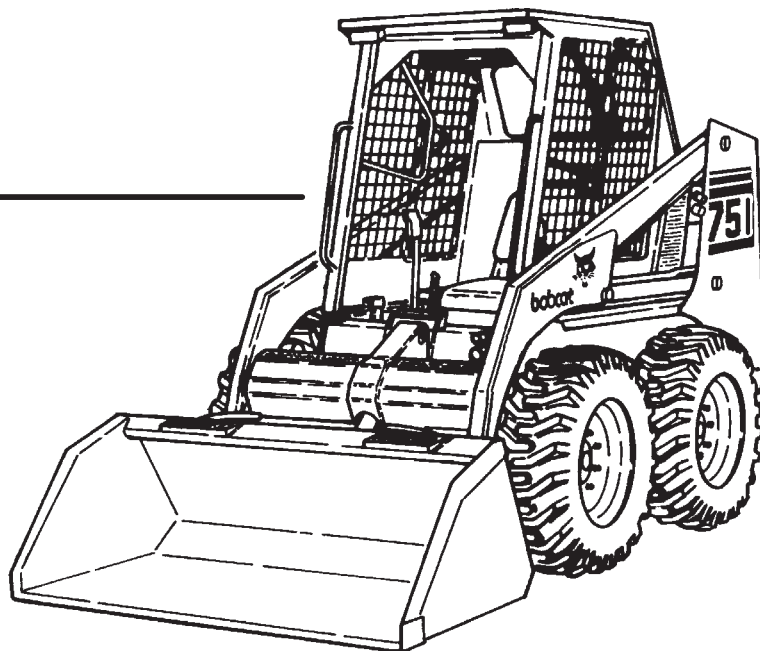

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**



## ALPHABETICAL INDEX

ACTUATORS	10-1	IDLER GEAR AND CAMSHAFT	7-1
ACTUATOR VOLTAGE TEST	10-1	LIFT ARMS	5-1
A.H.C. COMPONENTS	10-1	LIFT ARM SUPPORT DEVICE	1-1
A.H.C./PWM CONTROLLER	10-1	LIFTING AND BLOCKING THE LOADER	1-1
A.H.C. HANDLE	10-1	LIFT CYLINDER(S)	2-1
A.H.C. STEERING LEVER	10-1	LIFT LOCK BY-PASS VALVE	2-1
AIR CLEANER	7-1	LIFTING THE LOADER	1-1
AIR CLEANER SERVICE	1-1	LOADER SPECIFICATIONS	9-1
ALTERNATOR	6-1	LUBRICATION OF THE LOADER	1-1
ALTERNATOR BELT	1-1	MOTOR CARRIER	4-1
AXLE SEAL	4-1	OIL COOLER	3-1
AXLE, SPROCKET AND BEARINGS	4-1	OIL PUMP	7-1
BATTERY	6-1	OPERATOR CAB	1-1, 5-1
BOBCAT INTERLOCK CONTROL		OPERATOR CAB GAS CYLINDER	5-1
SYSTEM (BICS™)	8-1, 10-1	OPERATOR SEAT	5-1
BICS™ VALVE	2-1, 10-1	PARKING BRAKE	4-1
BICS™ SYSTEM CONTROLLER	8-1	PARKING BRAKE DISC	4-1
BLOWER HOUSING/FAN GEARBOX	7-1	PEDAL INTERLOCK LINKAGE	2-1
BOB-TACH	1-1, 5-1	PISTON AND CONNECTING ROD	7-1
CHAINCASE COVERS	4-1	PIVOT PINS	1-1
CHAINCASE FLUID	4-1	RADIATOR	7-1
CONTROL PANEL	3-1	REAR DOOR	5-1
CONTROL PEDALS	2-1	REAR GRILL	5-1
CONTROL VALVE	2-1	RELAY SWITCHES	6-1
CRANKSHAFT AND BEARINGS	7-1	REMOTE START SWITCH	1-1
CRANKSHAFT GEAR	7-1	ROCKER ARM AND SHAFT	7-1
CYLINDER BORE	7-1	SEAT BAR (W/COMPRESSION SPRINGS)	5-1
CYLINDER HEAD	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SEAT BAR SENSOR	8-1
DRIVE BELT	1-1	SEAT SENSOR	8-1
DRIVE BELT HOUSING	3-1	SERVICE SCHEDULE	1-1
DRIVE CHAIN	4-1	SPARK ARRESTOR MUFFLER	1-1
ELECTRICAL/HYDRAULIC CONTROLS		SPRING LOADER DRIVE BELT	
REFERENCE	8-1	TENSIONER PULLEY	3-1
ELECTRICAL SYSTEM INFORMATION	6-1	STANDARD INSTRUMENT PANEL	6-1
ENGINE	7-1	STANDARD TORQUE SPECIFICATIONS	
ENGINE COMPRESSION	7-1	FOR BOLTS	9-1
ENGINE COOLING SYSTEM	1-1	STARTER	6-1
ENGINE LUBRICATION SYSTEM	1-1	STEERING LINKAGE	3-1
ENGINE MUFFLER	7-1	STOPPING THE BOBCAT LOADER	1-1
ENGINE SPECIFICATIONS	9-1	SWITCH HANDLE	10-1
ENGINE SPEED CONTROL	7-1	TILT CYLINDER	2-1
FAN GEARBOX	1-1, 7-1	TIMING GEARS	7-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	TIMING GEARCASE COVER	7-1
FLYWHEEL	7-1	TIRE MAINTENANCE	1-1
FRONT LIGHTS	6-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
FUEL CAMSHAFT	7-1	TOWING THE LOADER	1-1
FUEL INJECTION PUMP	7-1	TRACTION LOCK	8-1
FUEL INJECTION NOZZLES	7-1	TRACTION LOCK GUIDES	4-1
FUEL SYSTEM	1-1	TRANSPORTING THE LOADER	1-1
FUEL TANK	5-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1
GLOW PLUGS	7-1	TROUBLESHOOTING (AHC)	10-1
HANDLE CONTROL UNIT	10-1	U.S. TO METRIC CONVERSION	9-1
HANDLE CONTROL UNIT TEST	10-1	VALVE CLEARANCE	7-1
HYDRAULIC CONNECTION SPECIFICATIONS	9-1	VALVE, VALVE SEAT AND GUIDE	7-1
HYDRAULIC CONTROL VALVE (AHC)	10-1	WATER PUMP	7-1
HYDRAULIC CYLINDERS	2-1	WIRING SCHEMATICS –WITH ADVANCED	
HYDRAULIC CYLINDER IDENTIFICATION	2-1	HAND CONTROL OPTIONS	10-1
HYDROSTATIC DRIVE MOTOR	3-1		
HYDRAULIC FILTER HOUSING	2-1		
HYDRAULIC FLUID RESERVOIR	2-1		
HYDRAULIC/HYDROSTATIC FLUID			
SPECIFICATIONS	9-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC SYSTEM INFORMATION	9-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		