

[Click here to get the complete manual](#)

7

 
5

3



Service Manual

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

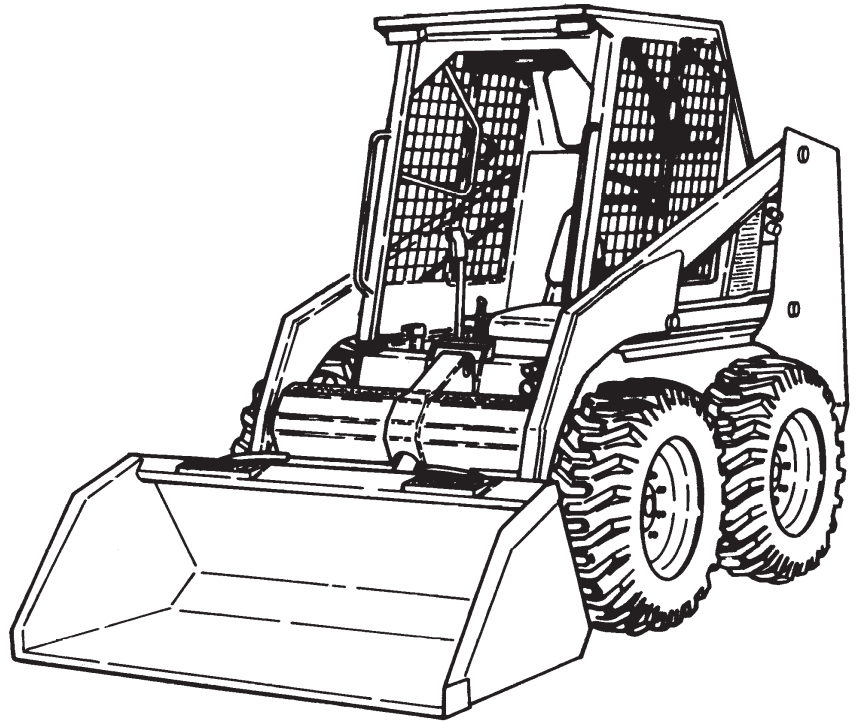

MELROE
INGERSOLL-RAND

6720326 (6-12)

Printed in U.S.A.

 
 **bobcat**[®]
© Melroe Company 1990

FOREWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified.

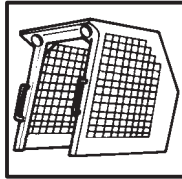

 
2. Check that ROPS mounting hardware is tightened and is Melroe approved.

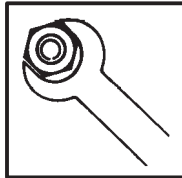

 
3. The seat belt must be correctly installed, functional and in good condition.

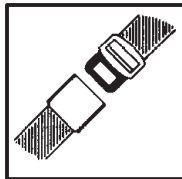

 
4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated.

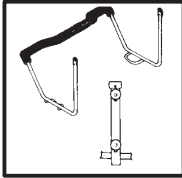

 5. Machine signs must be legible and in the correct location.

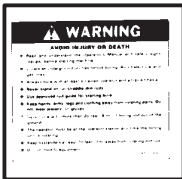

 6. Steering levers and foot pedals must return to neutral.

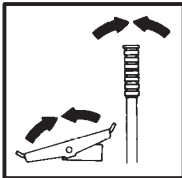

7. Check for correct function of the work lights and travel lights.



8. The parking brake must function correctly.



 
9. Enclosure door latches must open and close freely.




10. Bob-Tach wedges and linkages must function correctly and be in good condition.




11. Safety treads must in good condition.

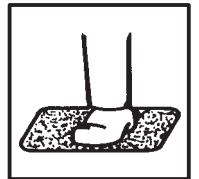

 
12. Check for correct function of indicator lamps (Optional on some models).

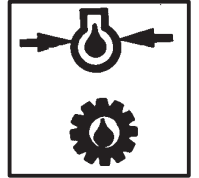

 13. Check hydraulic fluid level, engine oil level and fuel supply.

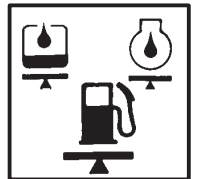

 
14. Inspect for fuel, oil or hydraulic fluid leaks.

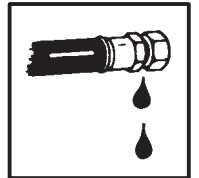


15. Lubricate the loader.



 
16. Check the condition of the battery and cables.

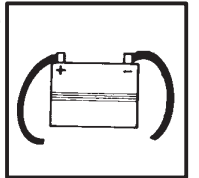

 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

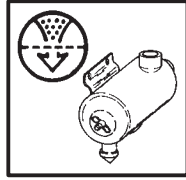

 
18. Check the electrical charging system.

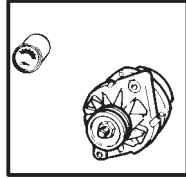

 
19. Check tires for wear and pressure.

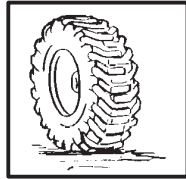

 20. Inspect for loose or broken parts or connections.

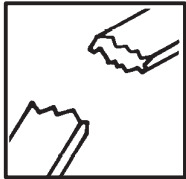

 21. Operate the loader and check all functions.

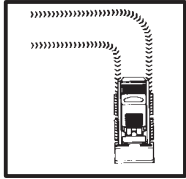

22. Check for any field modification not completed.



Recommend to the owner that all necessary corrections be made before the machine is returned to service.

