

**753**

**INCLUDES  
HIGH FLOW  
OPTION**




**Bobcat®**

# Service Manual

S/N 508630001 & Above  
S/N 511476001 & Above  
S/N 512716001 & Above  
S/N 513911001–513911148  
S/N 515811001–515829999  
S/N 516211001–516219999

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

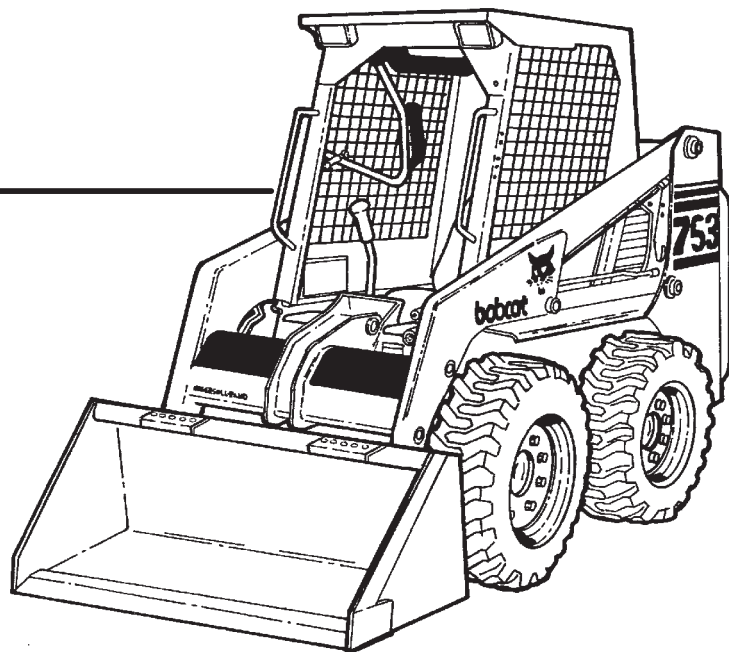

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



## ALPHABETICAL INDEX

|                                      |           |                                    |                          |
|--------------------------------------|-----------|------------------------------------|--------------------------|
| ACTUATORS                            | 10-1      | IDLER GEAR AND CAMSHAFT            | 7-1                      |
| ACTUATOR VOLTAGE TEST                | 10-1      | LIFT ARM SUPPORT DEVICE            | 1-1                      |
| A.H.C. COMPONENTS                    | 10-1      | LIFT ARMS                          | 5-1                      |
| A.H.C./PWM CONTROLLER                | 10-1      | LIFT CYLINDER(S)                   | 2-1                      |
| A.H.C. HANDLE                        | 10-1      | LIFT LOCK BY-PASS VALVE            | 2-1                      |
| A.H.C. STEERING LEVER                | 10-1      | LIFTING AND BLOCKING THE LOADER    | 1-1                      |
| AIR CLEANER                          | 7-1       | LIFTING THE LOADER                 | 1-1                      |
| AIR CLEANER SERVICE                  | 1-1       | LOADER SPECIFICATIONS – 763        | 9-1                      |
| ALTERNATOR                           | 6-1       | LUBRICATING THE LOADER             | 1-1                      |
| ALTERNATOR BELT                      | 1-1       | MONITOR SERVICE CODES              | 8-1                      |
| AXLE SEAL                            | 4-1       | MOTOR CARRIER                      | 4-1                      |
| AXLE, SPROCKET AND BEARINGS          | 4-1       | OIL COOLER                         | 3-1                      |
| BATTERY                              | 6-1       | OIL PUMP                           | 7-1                      |
| BICS™ SYSTEM CONTROLLER              | 8-1       | OPERATOR CAB                       | 1-1, 5-1                 |
| BICS VALVE                           | 2-1       | OPERATOR CAB GAS CYLINDER          | 5-1                      |
| BLOWER HOUSING/FAN GEARBOX           | 7-1       | OPERATOR SEAT                      | 5-1                      |
| BOBCAT INTERLOCK                     |           | OPERATION SENSING SYSTEM UNIT      | 8-1                      |
| CONTROL SYSTEM (BICS™)               | 8-1, 10-1 | PARKING BRAKE                      | 4-1                      |
| BOB-TACH                             | 1-1, 5-1  | PARKING BRAKE DISC                 | 4-1                      |
| BOSS® DIAGNOSTIC TOOL                | 8-1       | PISTON AND CONNECTING ROD          | 7-1                      |
| BOSS® INSTRUMENT PANEL               | 8-1       | PIVOT PINS                         | 1-1                      |
| CHAINCASE COVERS                     | 4-1       | RADIATOR                           | 7-1                      |
| CHAINCASE FLUID                      | 4-1       | REAR DOOR                          | 5-1                      |
| CONTROL INTERLOCK LINKAGE            | 2-1       | REAR GRILL                         | 5-1                      |
| CONTROL PANEL                        | 3-1       | REAR LIGHTS                        | 5-1                      |
| CONTROL PEDALS                       | 2-1       | RELAY SWITCHES                     | 6-1                      |
| CRANKSHAFT AND BEARINGS              | 7-1       | REMOTE START SWITCH                | 1-1                      |
| CRANKSHAFT GEAR                      | 7-1       | ROCKER ARM AND SHAFT               | 7-1                      |
| CYLINDER BORE                        | 7-1       | RPM SENSOR                         | 8-1                      |
| CYLINDER HEAD                        | 7-1       | SEAT BAR                           | 5-1                      |
| DECIMAL & MILLIMETER EQUIVALENTS     | 9-1       | SEAT BAR RESTRAINT SYSTEM          | 1-1                      |
| DRIVE BELT                           | 1-1       | SEAT BAR SENSOR                    | 8-1                      |
| DRIVE BELT HOUSING                   | 3-1       | SEAT SENSOR                        | 8-1                      |
| DRIVE CHAIN                          | 4-1       | SELECT VALVE (763H)                | 2-1                      |
| ELECTRICAL/HYDRAULIC (CONTROL REF.)  | 8-1       | SENDER AND SENSOR                  | 8-1                      |
| ELECTRICAL SYSTEM INFORMATION        | 6-1       | SERVICE SCHEDULE                   | 1-1                      |
| ENGINE                               | 7-1       | SPARK ARRESTOR MUFFLER             | 1-1                      |
| ENGINE COMPRESSION                   | 7-1       | SPRING LOADED DRIVE BELT TENSIONER |                          |
| ENGINE COOLING SYSTEM                | 1-1       | PULLEY                             | 3-1                      |
| ENGINE LUBRICATION SYSTEM            | 1-1       | STANDARD INSTRUMENT PANEL          | 6-1                      |
| ENGINE MUFFLER                       | 7-1       | STANDARD TORQUE SPECIFICATIONS     |                          |
| ENGINE SPECIFICATIONS                | 9-1       | FOR BOLTS                          | 9-1                      |
| ENGINE SPEED CONTROL                 | 7-1       | STARTER                            | 6-1                      |
| FAN GEARBOX                          | 1-1, 7-1  | STEERING LINKAGE                   | 3-1                      |
| FINAL DRIVE TRANSMISSION (CHAINCASE) | 1-1       | SWITCH HANDLE                      | 10-1                     |
| FIXED DRIVE BELT TENSIONER PULLEY    | 3-1       | STOPPING THE BOBCAT LOADER         | 1-1                      |
| FLYWHEEL                             | 7-1       | TILT LOCK VALVE                    | 2-1                      |
| FRONT LIGHTS                         | 6-1       | TILT CYLINDER                      | 2-1                      |
| FUEL CAMSHAFT                        | 7-1       | TIMING GEARS                       | 7-1                      |
| FUEL INJECTION NOZZLES               | 7-1       | TIMING GEARCASE COVER              | 7-1                      |
| FUEL INJECTION PUMP                  | 7-1       | TIRE MAINTENANCE                   | 1-1                      |
| FUEL SYSTEM                          | 1-1       | TORQUE SPECIFICATIONS FOR LOADER   | 9-1                      |
| FUEL TANK                            | 5-1       | TOWING THE LOADER                  | 1-1                      |
| GLOW PLUGS                           | 7-1       | TRACTION LOCK                      | 8-1                      |
| HANDLE CONTROL UNIT                  | 10-1      | TRACTION LOCK GUIDES               | 4-1                      |
| HYDRAULIC CONTROL VALVE              | 2-1       | TRANSPORTING THE LOADER            | 1-1                      |
| HYDRAULIC CONTROL VALVE (AHC)        | 10-1      | TROUBLESHOOTING                    | 2-1, 3-1, 6-1, 7-1, 10-1 |
| HYDRAULIC CYLINDER IDENTIFICATION    | 2-1       | TROUBLESHOOTING                    |                          |
| HYDRAULIC CYLINDERS                  | 2-1       | THE BOSS® & L.C.D. DISPLAY         | 8-1                      |
| HYDRAULIC FILTER HOUSING             | 2-1       | U.S. TO METRIC CONVERSION          | 9-1                      |
| HYDRAULIC FLUID RESERVOIR            | 2-1       | VALVE CLEARANCE                    | 7-1                      |
| HYDRAULIC/HYDROSTATIC                |           | VALVE, VALVE SEAT AND GUIDE        | 7-1                      |
| FLUID SPECIFICATIONS                 | 9-1       | WATER PUMP                         | 7-1                      |
| HYDRAULIC/HYDROSTATIC SYSTEM         | 1-1       |                                    |                          |
| HYDRAULIC PUMP                       | 2-1       |                                    |                          |
| HYDRAULIC SYSTEM INFORMATION         | 9-1       |                                    |                          |
| HYDROSTATIC DRIVE MOTOR              | 3-1       |                                    |                          |
| HYDROSTATIC DRIVE MOTOR 30 SERIES    | 3-1       |                                    |                          |
| HYDROSTATIC PUMP                     | 3-1       |                                    |                          |
| HYDROSTATIC SYSTEM INFORMATION       | 3-1       |                                    |                          |