




Bobcat®

Service Manual

S/N 518911001 - 518914999

S/N 516811001 - 516814999

S/N 517511001 - 517514999

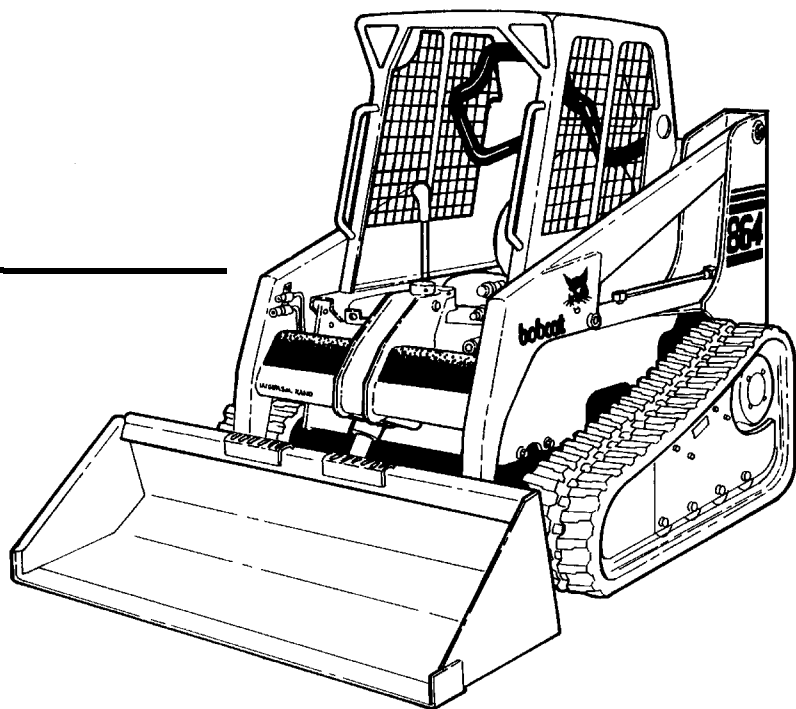

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

ALPHABETICAL INDEX

AHC SYSTEM	60-01	HYDRAULIC/HYDROSTATIC FILTER	20-01
AIR CLEANER	70-01	HYDRAULIC/HYDROSTATIC FLUID	
AIR CLEANER SERVICE	10-01	SPECIFICATIONS	SPEC-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC HYDROSTATIC SYSTEM	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC PUMP	20-01
ALTERNATOR	60-01	HYDRAULIC SYSTEM INFORMATION	20-01
AUXILIARY PRESSURE RELEASE (ACCUMULATOR)		HYDROSTATIC MOTOR	30-01
.....	20-01	HYDROSTATIC PUMP	30-01
		HYDROSTATIC SYSTEM INFORMATION	30-01
BASIC TROUBLESHOOTING	80-01		
BATTERY	60-01	INSTRUMENT PANEL	60-01
BOBCAT CONTROLLER	60-01		
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)		LIFT ARMS	50-01
.....	60-01	LIFT ARM SUPPORT DEVICE	10-01
BOB-TACH	10-01, 50-01	LIFT LOCK BYPASS CONTROL VALVE	20-01
BRAKE	40-01	LIFTING AND BLOCKING THE LOADER	10-01
BUCKET POSITION VALVE	20-01	LIGHTS	60-01
		LOADER SPECIFICATIONS	SPEC-01
CHARGE PRESSURE	30-01	LOADER TORQUE	SPEC-01
COOLING FAN	70-01	LUBRICATING THE LOADER	10-01
COMPONENTS	80-01		
COMPRESSOR	80-01	MAIN RELIEF VALVE	20-01
CONDENSER	80-01	MUFFLER	70-01
CONTROL PANEL	30-01		
CONTROLS	20-01	POWER BOB-TACH (OPTION)	10-01
CONVERSIONS	SPEC-01	POWER BOB-TACH BLOCK	20-01
CYLINDER(S)	20-01	PRESSURE RELIEF VALVE	80-01
		PRESSURE SWITCH	80-01
DIAGNOSTICS	60-01		
DRIVE BELT	30-01	RADIATOR	70-01
DRIVE COMPONENTS	40-01	REAR AUXILIARY DIVERTER	20-01
		REAR DOOR	50-01
ELECTRICAL	80-01	REAR GRILL	50-01
ELECTRICAL/HYD. CONTROLS REFERENCE	60-01	RECEIVER/DRIER	80-01
ELECTRICAL SYSTEM INFORMATION	60-01	RECOMMENDED SERVICE TOOLS	80-01
ENGINE & ENGINE MOUNTS	70-01	RECONDITIONING THE ENGINE	70-01
ENGINE COMPONENTS & TESTING	70-01	REGULAR MAINTENANCE	80-01
ENGINE COOLING SYSTEM	10-01	REMOTE START	10-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01	SAFETY	80-01
ENGINE SPEED CONTROL	70-01	SEAT BAR	10-01, 50-01
		SEAT BAR SENSOR	60-01
FAN GEARBOX	10-01	SELECT VALVE	20-01
FLYWHEEL AND HOUSING	70-01	SERVICE SCHEDULE	10-01
FUEL SYSTEM	10-01	STANDARD TORQUE SPECIFICATIONS FOR BOLTS	
FUEL TANK	50-01	SPEC-01
		STARTER	60-01
GENERAL AIR CONDITIONING SERVICE		STEERING	30-01
GUIDELINES	80-01	SYSTEM CHARGING AND RECLAMATION	80-01
		SYSTEM TROUBLESHOOTING CHART	80-01
HEATER/AC FAN	80-01		
HEATER COIL	80-01		
HEATER VALVE	80-01		
HYDRAULIC CONNECTION SPECS	SPEC-01		
HYDRAULIC CONTROL VALVE	20-01		
HYDRAULIC FLUID RESERVOIR	20-01		

ALPHABETICAL INDEX (CONT'D)

TEMPERATURE/PRESSURE	80-01
THE EVAPORATOR	80-01
THE EVAPORATOR/HEATER UNIT	80-01
THE EXPANSION VALVE.....	80-01
THERMOSTAT.....	80-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE LOADER	10-01
TROUBLESHOOTING.....	70-01
WIRING SCHEMATICS	60-01