





Bobcat®

Service Manual

G Series

S/N 514140001 & Above
S/N 514240001 & Above
S/N 517911001 & Above

S/N 520111001 & Above
S/N 520211001 & Above

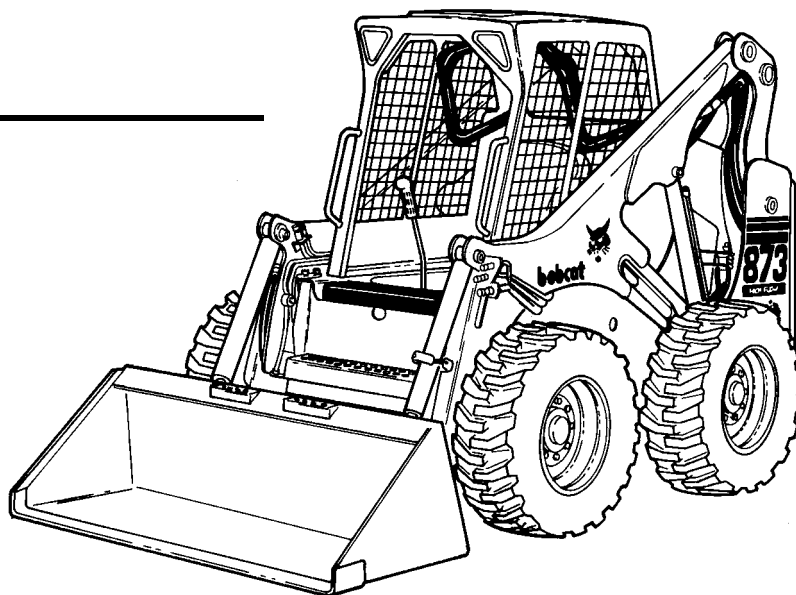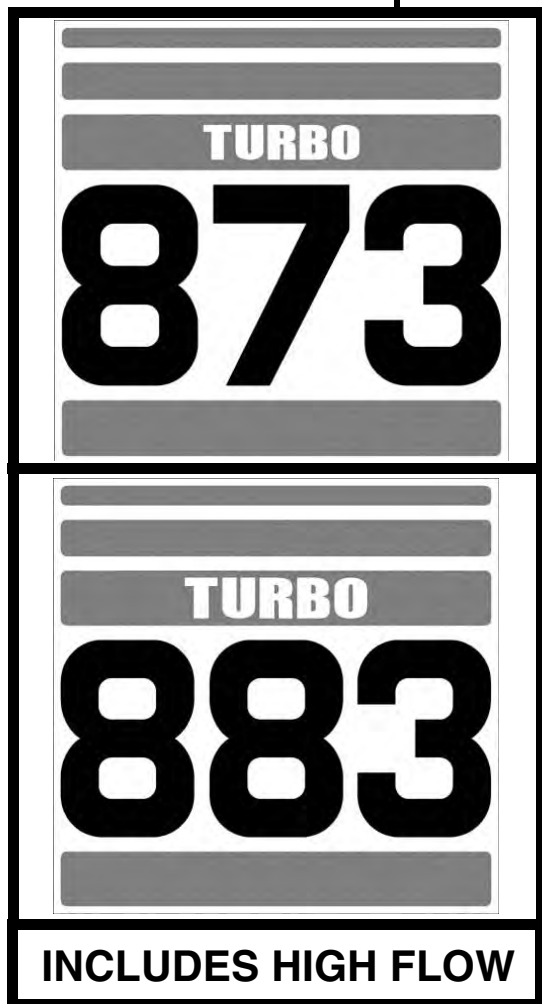

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	ELECTRICAL / HYDRAULIC CONTROLS	
ADVANCED HAND CONTROL (AHC) SYSTEM....	60-01	REFERENCE	60-01
ADVANCED HAND CONTROL (AHC) SYSTEM (W/ PUSH BUTTON FLOAT)	60-01	ENGINE.....	70-01
AIR CLEANER	70-01	ENGINE COMPONENTS AND TESTING	70-01
AIR CLEANER SERVICE	10-01	ENGINE COOLING SYSTEM	10-01
AIR CONDITIONING SERVICE.....	80-01	ENGINE LUBRICATION SYSTEM	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	ENGINE SPECIFICATIONS	SPEC-01
ALTERNATOR (55 AMP)	60-01	ENGINE SPEED CONTROL	70-01
ALTERNATOR (90 AMP)	60-01	EVAPORATOR	80-01
AUXILIARY PRESSURE RELEASE (ACCUMULATOR)	20-01	EVAPORATOR / HEATER UNIT.....	80-01
		EXPANSION VALVE	80-01
BASIC TROUBLESHOOTING	80-01	FAN GEARBOX.....	10-01
BATTERY	60-01	FINAL DRIVE TRANSMISSION (CHAINCASE.....	10-01
BICS™ SYSTEM	60-01	FLYWHEEL AND HOUSING	70-01
BOB-TACH.....	10-01, 50-01	FUEL SYSTEM.....	10-01
BOBCAT CONTROLLER.....	60-01	FUEL TANK	50-01
BLOWER FAN	80-01		
BRAKE	40-01	GENERAL AIR CONDITIONING SERVICE	
BRAKE (TWO-SPEED).....	40-01	GUIDELINES.....	80-01
BUCKET POSITION VALVE (873 - S/N 514147758 & BELOW)	20-01		
BUCKET POSITION VALVE (873 - S/N 514147759 & ABOVE & 883)	20-01	HEATER COIL	80-01
		HEATER VALVE	80-01
CHAINCASE	40-01	HYDRAULIC CONNECTION SPECS.	SPEC-01
CHARGE PRESSURE.....	30-30	HYDRAULIC CONTROL VALVE (FOOT CONTROL).....	20-01
COMPONENTS	80-01	HYDRAULIC CONTROL VALVE (ADVANCED CONTROL SYSTEM) (ACS) (AHC) ..	20-01
COMPRESSOR	80-01	HYDRAULIC FLUID RESERVOIR	20-01
CONDENSER	80-01	HYDRAULIC PUMP (ALUMINUM).....	20-01
CONTROL HANDLE	50-01	HYDRAULIC PUMP (ALUMINUM HIGH FLOW).....	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM (ACS) ADVANCED CONTROL HANDLE	50-01	HYDRAULIC PUMP (CAST IRON)	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM (ACS) SELECTABLE HAND / FOOT CONTROL....	50-01	HYDRAULIC PUMP (CAST IRON HIGH FLOW)	20-01
CONTROL HANDLE (ADVANCED HAND CONTROL) (AHC)	50-01	HYDRAULIC SYSTEM INFORMATION	20-01
CONTROL HANDLE (ADVANCED HAND CONTROL) (AHC) (W/ PUSH BUTTON FLOAT)	50-01	HYDRAULIC / HYDROSTATIC FILTER	20-01
CONTROL PANEL	50-01	HYDRAULIC / HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
CONTROL PEDALS	50-01	HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
CONTROL PEDALS (ACS)	50-01	HYDROSTATIC MOTOR	30-01
COOLING FAN	70-01	HYDROSTATIC MOTOR (TWO SPEED)	30-01
CONVERSIONS	SPEC-01	HYDROSTATIC MOTOR CARRIER.....	30-01
CYLINDER (LIFT)	20-01	HYDROSTATIC PUMP	30-01
CYLINDER (POWER BOB-TACH).....	20-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
CYLINDER (TILT)	20-01		
		INSTRUMENT PANEL.....	60-01
DIAGNOSTICS	60-01		
DRIVE COMPONENTS	40-01		
DRIVE BELT	30-01		

LIFT ARM BYPASS CONTROL VALVE.....	20-01
LIFT ARM SUPPORT DEVICE.....	10-01
LIFT ARMS.....	50-01
LIFTING AND BLOCKING THE LOADER.....	10-01
LIGHTS.....	60-01
LOADER SPECIFICATIONS (873).....	SPEC-01
LOADER SPECIFICATIONS (883).....	SPEC-01
LOADER TORQUE.....	SPEC-01
LUBRICATION OF THE BOBCAT LOADER	10-01
MAIN RELIEF VALVE (AHC).....	20-01
MAIN RELIEF VALVE (FOOT CONTROL)	20-01
MUFFLER.....	70-01
OIL COOLER.....	30-01
OIL COOLER (SEAL TO CONNECT) (STC).....	30-01
OPERATOR CAB.....	10-01, 50-01
OPERATOR SEAT.....	50-01
OPERATOR SEAT (SUSPENSION).....	50-01
POWER BOB-TACH.....	10-01
POWER BOB-TACH (883)	50-01
POWER BOB-TACH BLOCK (6674305 ALUMINUM)	20-01
POWER BOB-TACH BLOCK (6676547 ALUMINUM)	20-01
POWER BOB-TACH BLOCK (6677646 CAST IRON).....	20-01
POWER BOB-TACH BLOCK (6678206 CAST IRON).....	20-01
POWER BOB-TACH BLOCK (6678554) CAST IRON).....	20-01
PRESSURE RELIEF VALVE	80-01
PRESSURE SWITCH.....	80-01

RADIATOR	70-01
REAR AUXILIARY DIVERTER VALVE (SINGLE SHUTTLE)	20-01
REAR DOOR.....	50-01
REAR GRILL.....	50-01
RECEIVER / DRIER.....	80-01
RECONDITIONING THE ENGINE.....	70-01
REGULAR MAINTENANCE.....	80-01
REMOTE START.....	10-01
RPM SENSOR	70-01
SAFETY	80-01
SEAT BAR.....	50-01
SEAT BAR SENSOR.....	60-01
SELECT VALVE	20-01
SERVICE SCHEDULE	10-01
STARTER.....	60-01
SYSTEM CHARGING AND RECLAMATION.....	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE / PRESSURE.....	80-01
THERMOSTAT	80-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
TOWING THE LOADER.....	10-01
TRACTION LOCK	60-01
TRANSPORTING THE BOBCAT LOADER	10-01
TROUBLESHOOTING	70-01