

[Click here to get the complete manual](#)

963



Bobcat®

Service Manual

(S/N 562215001 & Above)

(S/N 516515001 & Above)



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

ALPHABETICAL INDEX

AHC SYSTEM.....	60-01	HYDROSTATIC MOTOR.....	30-01
AIR CLEANER.....	70-01	HYDROSTATIC PUMP.....	30-01
AIR CLEANER SERVICE	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
AIR CONDITIONING SERVICE.....	80-01	INSTRUMENT PANEL	50-01
AIR CONDITIONING SYSTEM FLOW	60-01	LIFT ARMS	50-01
BASIC TROUBLESHOOTING	80-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
BATTERY.....	60-01	LIFT ARM SUPPORT DEVICE	10-01
BICS™	10-01	LIFTING AND BLOCKING THE LOADER	10-01
BICS™ SYSTEM	60-01	LIGHTS	60-01
BOBCAT CONTROLLER.....	60-01	LOADER SPECIFICATIONS.....	SPEC-01
BOB-TACH.....	50-01	LUBRICATION THE LOADER	10-01
BRAKE.....	40-01	MAIN RELIEF VALVE.....	20-01
BUCKET POSITION VALVE	20-01	MUFFLER	70-01
CHAINCASE.....	40-01	OIL COOLER	30-01
CHARGE PRESSURE.....	30-01	OPERATOR CAB.....	10-01, 50-01
COMPONENTS	80-01	OPERATOR SEAT	50-01
COMPRESSOR.....	80-01	POWER BOB-TACH (OPTION)	10-01,50-01
CONDENSER	80-01	PRESSURE RELIEF VALVE.....	80-01
CONTROL PANEL.....	30-01	PRESSURE SWITCH	80-01
CONTROLS	20-01	PWM CONTROL.....	60-01
CONVERSIONS	SPEC-01	RADIATOR	60-01
COOLING FAN	70-01	REAR AUXILIARY DIVERTER	20-01
COOLING FAN FILTER	20-01	REAR DOOR	50-01
CYLINDER(S).....	20-01	REAR GRILL.....	50-01
DIAGNOSTICS SERVICE CODES.....	60-01	RECEIVER/DRIER.....	80-01
DRIVE BELT	30-01	RECONDITIONING THE ENGINE.....	70-01
DRIVE COMPONENTS	40-01	REGULAR MAINTENANCE.....	80-01
ELECTRICAL/HYDRAULIC CONTROL REF.....	60-01	REMOTE START	10-01
ELECTRICAL SYSTEM INFORMATION	60-01	SAFETY	80-01
ENGINE AND ENGINE MOUNTS	70-01	SEAT BAR.....	50-01
ENGINE COMPONENTS AND TESTING	70-01	SEAT BAR RESTRAINT SYSTEM.....	10-01
ENGINE COOLING SYSTEM.....	10-01	SEAT BAR SENSOR.....	60-01
ENGINE LUBRICATION SYSTEM	10-01	SERVICE SCHEDULE	10-01
ENGINE SPEED CONTROL	70-01	STARTER.....	60-01
ENGINE SPECIFICATIONS	SPEC-01	STEERING	30-01
EVAPORATOR	80-01	SYSTEM CHARGING AND RECLAMATION.....	80-01
EVAPORATOR/HEATER UNIT.....	80-01	SYSTEM TROUBLEHOOTING CHART	80-01
EXPANSION VALVE	80-01	TEMPERATURE/PRESSURE.....	80-01
FLYWHEEL AND HOUSING	70-01	THERMOSTAT	80-01
FUEL SYSTEM.....	10-01	TILT JUNCTION BLOCK.....	20-01
FUEL TANK	50-01	TIRE MAINTENANCE.....	10-01
GENERAL AIR CONDITIONING SERVICE		TOWING THE LOADER.....	10-01
GUIDLINES	80-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
HAND-LEVER BOB-TACH	10-01	TRACTION LOCK	60-01
HEATER COIL	80-01	TRANSPORTING THE LOADER.....	10-01
HEATER/AC FAN.....	80-01	TROUBLESHOOTING	70-01
HEATER VALVE	80-01		
HYDRAULIC CONTROL VALVE	20-01		
HYDRAULIC CONNECTION SPEC	SPEC-01		
HYDRAULIC/HYDROSTATIC FILTER.....	20-01		
HYDRAULIC/HYDROSTATIC FLUID SPEC.....	SPEC-01		
HYDRAULIC FLUID RESERVOIR.....	20-01		
HYDRAULIC PUMP.....	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		
HYDRAULIC/HYDROSTATIC SYSTEM	10-01		