

# B100


## B-Series



# Bobcat®

# Service Manual

SN 572111001 & Above

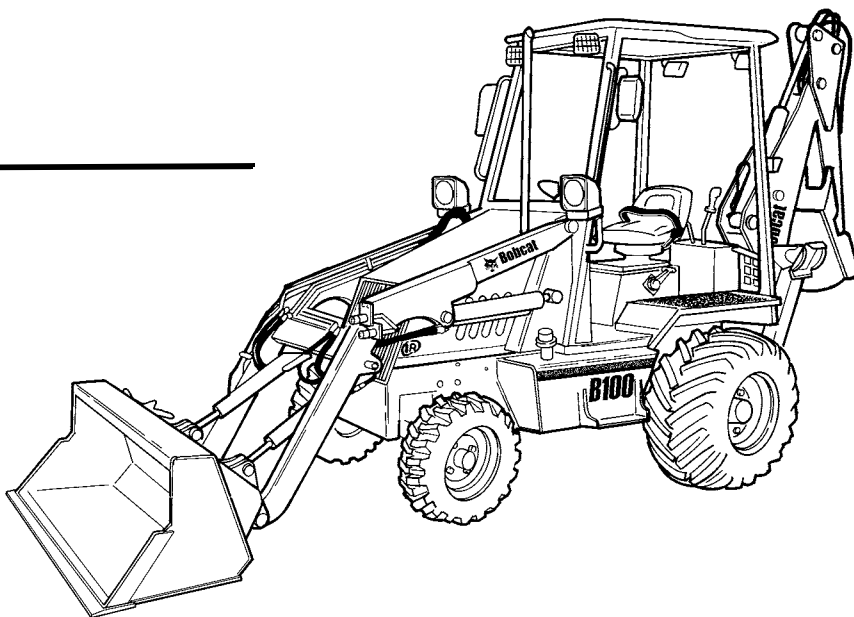

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HYDROSTATIC PUMP .....	30-01
AIR CLEANER SERVICE .....	10-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
ALTERNATOR .....	60-01	HYDROSTATIC TESTING.....	30-01
ALTERNATOR BELT .....	10-01		
APPROVED LIFT ARM SUPPORT DEVICE .....	10-01	INSTRUMENT PANEL.....	60-01
ARM CYLINDER.....	20-01		
ARM .....	50-01	LOADER BACKHOE SPECIFICATIONS.....	SPEC-01
AXLE AND DIFFERENTIAL.....	40-01	LOADER BACKHOE TORQUE .....	SPEC-01
AXLE HUB (FRONT) .....	50-01	LOADER CONTROL VALVE .....	20-01
AXLE TOE-IN.....	10-01	LIFT ARMS .....	50-01
		LIFT CYLINDER .....	20-01
BACKHOE CONTROL VALVE.....	20-01	LIFTING AND BLOCKING THE	
BATTERY .....	60-01	LOADER BACKHOE .....	10-01
BOB-TACH.....	50-01	LUBRICATING THE LOADER BACKHOE .....	10-01
BOB-TACH HAND LEVER.....	10-01		
BOOM .....	50-01	MAIN RELIEF VALVE .....	20-01
BOOM CYLINDER.....	20-01	MUFFLER.....	70-01
BOOM LOCK PIN .....	10-01		
BRAKE CALIPER .....	40-01	OIL COOLER.....	30-01
BUCKET .....	50-01	OPERATOR CAB .....	50-01
BUCKET CYLINDER .....	20-01	OPERATOR SEAT .....	50-01
CAB LIGHTS.....	60-01	PARKING BRAKE.....	40-01
CONVERSIONS .....	SPEC-01	PORT RELIEF VALVE	
		(BACKHOE CONTROL VALVE) .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	PORT RELIEF VALVE	
ENGINE .....	70-01	(LOADER CONTROL VALVE).....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01	PRESS TO DRIVE VALVE .....	20-01
ENGINE COOLING SYSTEM.....	10-01		
ENGINE COVER .....	10-01, 50-01	RADIATOR .....	70-01
ENGINE LUBRICATION SYSTEM.....	10-01	REAR AXLE .....	10-01
ENGINE SIDE COVERS.....	50-01	REAR AXLE AND DIFFERENTIAL .....	40-01
ENGINE SPECIFICATIONS.....	SPEC-01	RECONDITIONING THE ENGINE .....	70-01
ENGINE SPEED CONTROL .....	70-01	RUBBER DRIVE COUPLER .....	70-01
FENDER .....	50-01	SERVICE SCHEDULE .....	10-01
FLOOR PANELS.....	50-01	SPINDLE .....	50-01
FLYWHEEL.....	70-01	STABILIZER .....	50-01
FLYWHEEL HOUSING .....	70-01	STABILIZER CYLINDER .....	20-01
FRONT AXLE .....	50-01	STEERING CYLINDER .....	20-01
FUEL LEVEL SENDER.....	60-01	STARTER .....	60-01
FUEL PUMP .....	70-01	STEERING PUMP .....	20-01
FUEL SYSTEM .....	10-01	SWING CYLINDER .....	20-01
FUEL TANK.....	50-01	SWING FRAME .....	50-01
		SWING LOCK PIN.....	10-01
GEAR PUMP .....	20-01		
GRILL.....	50-01	TILT CYLINDER .....	20-01
GRILL FRAME .....	50-01	TIRE MAINTENANCE .....	10-01
		TORQUE SPECIFICATIONS	
HYDRAULIC FILTER HOUSING .....	20-01	FOR BOLTS.....	SPEC-01
HYDRAULIC FLUID RESERVOIR.....	20-01	TOWING THE LOADER BACKHOE .....	10-01
HYDRAULIC/HYDROSTATIC FLUID		TRANSPORTING THE LOADER BACKHOE.....	10-01
SPECIFICATIONS .....	SPEC-01	TRAVEL PEDAL .....	20-01
HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01	TROUBLESHOOTING .....	40-01, 70-01
HYDRAULIC SYSTEM INFORMATION.....	20-01	TURBOCHARGER .....	70-01
HYDROSTATIC DRIVE MOTOR.....	30-01	X-CHANGE.....	50-01