


B200



Bobcat®

Service Manual

(S/N 570211001 & Above)

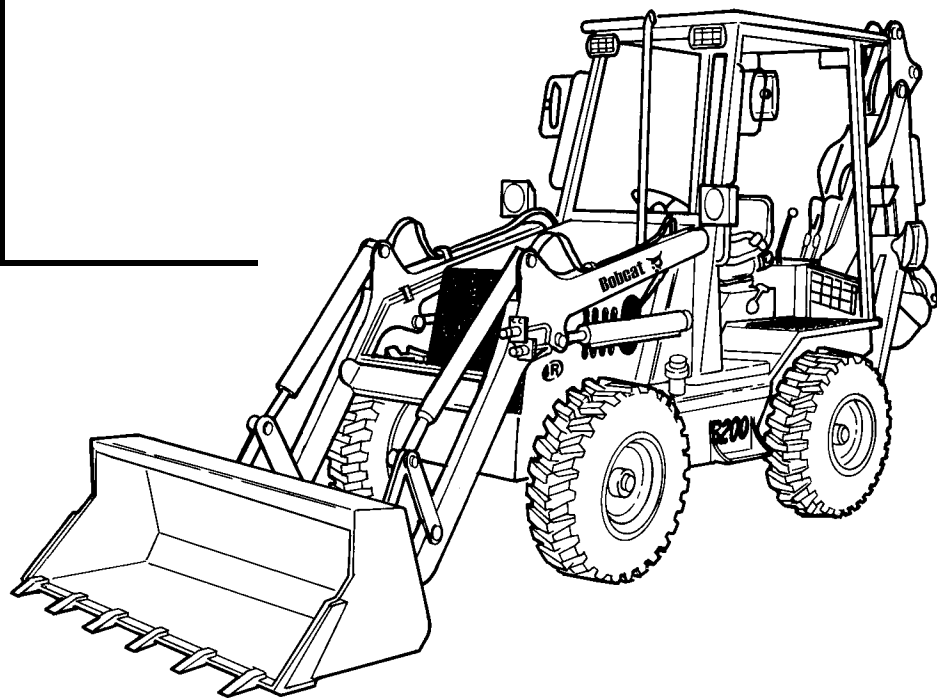

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDROSTATIC DRIVE MOTOR	30-01
AIR CLEANER SERVICE	10-01	HYDROSTATIC PUMP	30-01
ALTERNATOR	60-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
ALTERNATOR BELT	10-01	HYDROSTATIC TESTING.....	30-01
ARM CYLINDER.....	20-01		
ARM	50-01	INSTRUMENT PANEL.....	60-01
AXLE AND DIFFERENTIAL (REAR)	40-01		
AXLE TOE-IN.....	10-01	LOADER BACKHOE SPECIFICATIONS.....	SPEC-01
		LOADER BACKHOE TORQUE	SPEC-01
BACKHOE BOOM LOCK.....	10-01	LOADER CONTROL VALVE	20-01
BACKHOE CONTROL VALVE.....	20-01	LIFT ARMS	50-01
BATTERY	60-01	LIFT ARM SUPPORT DEVICE.....	10-01
BOB-TACH.....	50-01	LIFT CYLINDER	20-01
BOB-TACH HAND LEVER.....	10-01	LIFTING AND BLOCKING THE	
BOOM	50-01	LOADER BACKHOE	10-01
BOOM CYLINDER.....	20-01	LUBRICATING THE LOADER BACKHOE	10-01
BRAKE CALIPER	40-01		
BUCKET	50-01	MAIN RELIEF VALVE	20-01
BUCKET CYLINDER	20-01	MUFFLER.....	70-01
CAB LIGHTS.....	60-01	OIL COOLER.....	30-01
CONVERSIONS	SPEC-01	OPERATOR CAB	50-01
		OPERATOR SEAT	50-01
DRIVESHAFT	40-01		
DROP BOX	40-01	PARKING BRAKE.....	40-01
		PORT RELIEF VALVE	
ELECTRICAL SYSTEM INFORMATION	60-01	(BACKHOE CONTROL VALVE)	20-01
ENGINE	70-01	PORT RELIEF VALVE	
ENGINE COMPONENTS AND TESTING	70-01	(LOADER CONTROL VALVE).....	20-01
ENGINE COOLING SYSTEM.....	10-01		
ENGINE COVER	10-01, 50-01	RADIATOR	70-01
ENGINE LUBRICATION SYSTEM.....	10-01	REAR AXLE	10-01, 40-01
ENGINE SIDE COVERS.....	50-01	RECONDITIONING THE ENGINE	70-01
ENGINE SPECIFICATIONS.....	SPEC-01	RUBBER DRIVE COUPLER	70-01
ENGINE SPEED CONTROL	70-01		
		SERVICE SCHEDULE	10-01
FENDER	50-01	STABILIZER	50-01
FLOOR PANELS.....	50-01	STABILIZER CYLINDER	20-01
FLYWHEEL.....	70-01	STEERING CYLINDER	20-01
FLYWHEEL HOUSING	70-01	STEERING PUMP	20-01
FRONT AXLE	10-01, 40-01	STARTER	60-01
FRONT AXLE PIVOT FRAME	50-01	SWING CYLINDER	20-01
FRONT LIGHTS.....	60-01	SWING FRAME	50-01
FUEL LEVER SENDER	60-01		
FUEL SYSTEM	10-01	TILT CYLINDER	20-01
FUEL TANK.....	50-01	TIRE MAINTENANCE	10-01
		TORQUE SPECIFICATIONS	
GEAR PUMP	20-01	FOR BOLTS.....	SPEC-01
GRILL.....	50-01	TOWING THE LOADER BACKHOE	10-01
GRILL FRAME	50-01	TRANSPORTING THE LOADER BACKHOE.....	10-01
		TRAVEL PEDAL	20-01
HYDRAULIC FILTER HOUSING	20-01	TROUBLESHOOTING	70-01
HYDRAULIC FLUID RESERVOIR.....	20-01	TURBOCHARGER	70-01
HYDRAULIC SYSTEM INFORMATION.....	20-01	TURN INDICATOR LIGHTS (FRONT)	60-01
HYDRAULIC/HYDROSTATIC FLUID		TURN INDICATOR LIGHTS (REAR).....	60-01
SPECIFICATIONS	SPEC-01	X-CHANGE™	50-01
HYDRAULIC/HYDROSTATIC SYSTEM	10-01		