

# B250


## B Series



# Bobcat®

# Service Manual

**S/N 572211001 & Above**

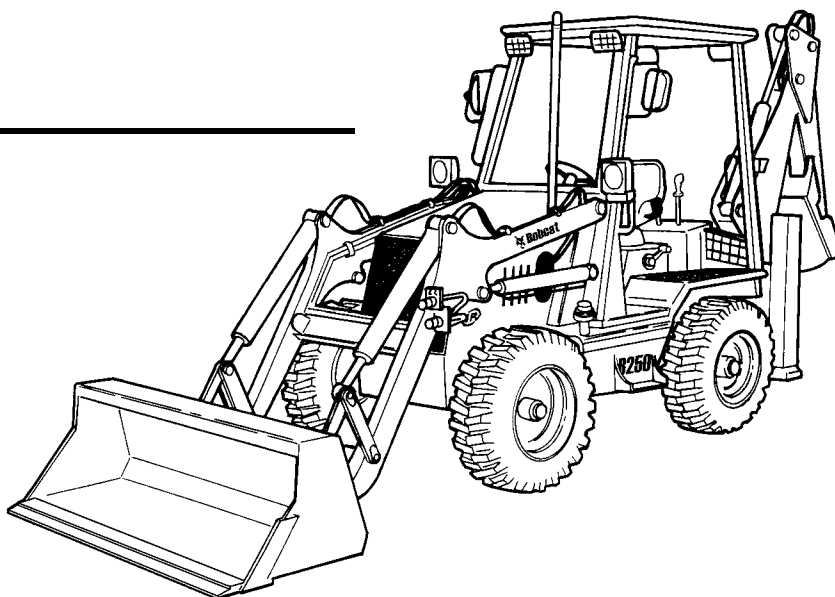

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HEATER FAN .....	80-01
AIR CLEANER SERVICE .....	10-01	HEATER UNIT .....	80-01
ALTERNATOR .....	60-01	HYDRAULIC FILTER HOUSING .....	20-01
ALTERNATOR BELT .....	10-01	HYDRAULIC FLUID RESERVOIR .....	20-01
APPROVED LIFT ARM SUPPORT DEVICE .....	10-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
ARM CYLINDER .....	20-01	HYDRAULIC/HYDROSTATIC FLUID	
ARM .....	50-01	SPECIFICATIONS .....	SPEC-01
AXLE AND DIFFERENTIAL (FRONT) .....	40-01	HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
AXLE AND DIFFERENTIAL (REAR) .....	40-01	HYDROSTATIC DRIVE MOTOR .....	30-01
AXLE TOE-IN .....	10-01	HYDROSTATIC PUMP .....	30-01
		HYDROSTATIC SYSTEM INFORMATION .....	30-01
		HYDROSTATIC TESTING .....	30-01
BACKHOE CONTROL VALVE .....	20-01		
BATTERY .....	60-01	INSTRUMENT PANEL .....	60-01
BOB-TACH .....	50-01		
BOOM .....	50-01	LIFT ARMS .....	50-01
BOOM CYLINDER .....	20-01	LIFT CYLINDER .....	20-01
BOOM LOCK PIN .....	10-01	LIFTING AND BLOCKING THE	
BRAKE CALIPER .....	40-01	LOADER BACKHOE .....	10-01
BUCKET .....	50-01	LOADER BACKHOE SPECIFICATIONS .....	SPEC-01
BUCKET CYLINDER .....	20-01	LOADER BACKHOE TORQUE .....	SPEC-01
		LOADER CONTROL VALVE .....	20-01
CAB DOOR .....	50-01	LUBRICATING THE LOADER BACKHOE .....	10-01
CAB LIGHTS .....	60-01		
COMPONENTS .....	80-01	MAIN RELIEF VALVE .....	20-01
CONVERSIONS .....	SPEC-01	MUFFLER .....	70-01
DRIVESHAFT .....	40-01	OIL COOLER .....	30-01
DROP BOX .....	40-01	OPERATOR CAB .....	50-01
		OPERATOR SEAT .....	50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01		
ENCLOSED CAB .....	50-01	PARKING BRAKE .....	40-01
ENGINE .....	70-01	PORT RELIEF VALVE	
ENGINE COMPONENTS AND TESTING .....	70-01	(BACKHOE CONTROL VALVE) .....	20-01
ENGINE COOLING SYSTEM .....	10-01	PORT RELIEF VALVE	
ENGINE COVER .....	10-01, 50-01	(LOADER CONTROL VALVE) .....	20-01
ENGINE LUBRICATION SYSTEM .....	10-01		
ENGINE SIDE COVERS .....	50-01	RADIATOR .....	70-01
ENGINE SPECIFICATIONS .....	SPEC-01	REAR AXLE .....	10-01, 40-01
ENGINE SPEED CONTROL .....	70-01	REAR WINDOW .....	50-01
		REAR WIPER .....	60-01
FENDER .....	50-01	RECONDITIONING THE ENGINE .....	70-01
FLOOR PANELS .....	50-01	RUBBER DRIVE COUPLER .....	70-01
FLYWHEEL .....	70-01		
FLYWHEEL HOUSING .....	70-01	SAPR BRAKE CONTROL VALVE .....	20-01
FRONT AXLE .....	10-01, 40-01	SAPR BRAKE CYLINDER .....	20-01
FRONT AXLE PIVOT FRAME .....	50-01	SERVICE SCHEDULE .....	10-01
FRONT LIGHTS .....	60-01	SIDE SHIFT LOCK CYLINDER .....	20-01
FRONT WIPER .....	60-01	STABILIZER FRAME .....	50-01
FUEL LEVEL SENDER .....	60-01	STABILIZER CYLINDER .....	20-01
FUEL SYSTEM .....	10-01	STEERING ANGLE ADJUSTMENT	
FUEL TANK .....	50-01	(FRONT AXLE) .....	40-01
		STEERING ANGLE ADJUSTMENT	
GEAR PUMP .....	20-01	(REAR AXLE) .....	40-01
GRILL .....	50-01	STEERING CYLINDER (FRONT) .....	20-01
GRILL FRAME .....	50-01	STEERING CYLINDER (REAR) .....	20-01

Continued on next page

## ALPHABETICAL INDEX (CONT'D)

STEERING PUMP .....	20-01
STEERING VALVE .....	20-01
STARTER .....	60-01
SWING CYLINDER .....	20-01
SWING FRAME .....	50-01
SWING LOCK PIN .....	10-01
TILT CYLINDER .....	20-01
TIRE MAINTENANCE .....	10-01
TORQUE SPECIFICATIONS	
FOR BOLTS .....	SPEC-01
TOWING THE LOADER BACKHOE .....	10-01
TRANSPORTING THE LOADER BACKHOE .....	10-01
TRAVEL PEDAL .....	20-01
TROUBLESHOOTING .....	70-01
TURBOCHARGER .....	70-01
TURN INDICATOR LIGHTS (FRONT) .....	60-01
TURN INDICATOR LIGHTS (REAR) .....	60-01
X-CHANGE™ .....	50-01