

B250




Bobcat®

Service Manual

B Series

S/N 572911001 & Above

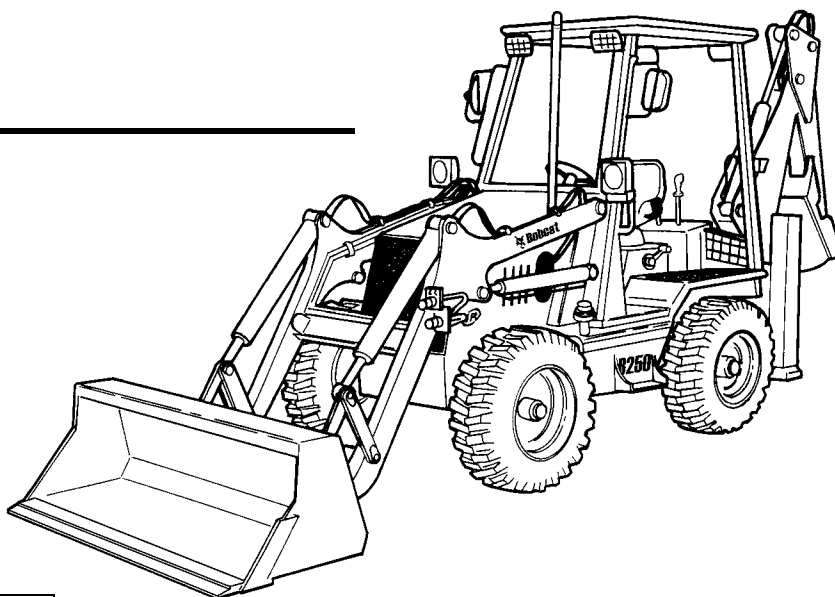

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

ALPHABETICAL INDEX

AIR CLEANER	70-01	HEATER FAN	80-01
AIR CLEANER SERVICE	10-01	HEATER UNIT	80-01
ALTERNATOR	60-01	HYDRAULIC FILTER HOUSING	20-01
ALTERNATOR BELT	10-01	HYDRAULIC FLUID RESERVOIR	20-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC SYSTEM INFORMATION	20-01
ARM CYLINDER	20-01	HYDRAULIC/HYDROSTATIC FLUID	
ARM	50-01	SPECIFICATIONS	SPEC-01
AUXILIARY CONTROL VALVE	20-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
AXLE AND DIFFERENTIAL (FRONT)	40-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLE AND DIFFERENTIAL (REAR)	40-01	HYDROSTATIC PUMP	30-01
AXLE TOE-IN	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
		HYDROSTATIC PUMP TESTING AND	
		ADJUSTMENT	30-01
BACKHOE CONTROL VALVE	20-01		
BATTERY	60-01	INSTRUMENT PANEL	60-01
BOB-TACH	10-01, 50-01		
BOOM	50-01	LIFT ARMS	50-01
BOOM CYLINDER	20-01	LIFT CYLINDER	20-01
BOOM LOCK PIN	10-01	LIFTING AND BLOCKING THE	
BRAKE CALIPER	40-01	LOADER BACKHOE	10-01
BUCKET	50-01	LOADER BACKHOE SPECIFICATIONS	SPEC-01
BUCKET CYLINDER	20-01	LOADER BACKHOE TORQUE	SPEC-01
		LOADER CONTROL VALVE	20-01
		LUBRICATING THE LOADER BACKHOE	10-01
CAB DOOR	50-01		
CAB LIGHTS	60-01	MAIN RELIEF VALVE	20-01
COMPONENTS	80-01	MUFFLER	70-01
CONVERSIONS	SPEC-01		
		OIL COOLER	30-01
DRIVESHAFT	40-01	OPERATOR CAB	50-01
DROP BOX	40-01	OPERATOR SEAT	50-01
ELECTRICAL SYSTEM INFORMATION	60-01	PARKING BRAKE	40-01
ENCLOSED CAB	50-01	PORT RELIEF VALVE	
ENGINE	70-01	(BACKHOE CONTROL VALVE)	20-01
ENGINE COMPONENTS AND TESTING	70-01	PORT RELIEF VALVE	
ENGINE COOLING SYSTEM	10-01	(LOADER CONTROL VALVE)	20-01
ENGINE COVER	10-01, 50-01		
ENGINE LUBRICATION SYSTEM	10-01	RADIATOR	70-01
ENGINE SIDE COVERS	50-01	REAR AXLE	10-01, 40-01
ENGINE SPECIFICATIONS	SPEC-01	REAR WINDOW	50-01
ENGINE SPEED CONTROL	70-01	REAR WIPER	60-01
		RECONDITIONING THE ENGINE	70-01
FENDER	50-01	RUBBER DRIVE COUPLER	70-01
FLOOR PANELS	50-01		
FLYWHEEL	70-01	SAPR BRAKE CONTROL VALVE	20-01
FLYWHEEL HOUSING	70-01	SAPR BRAKE CYLINDER	20-01
FRONT AXLE	10-01, 40-01	SERVICE SCHEDULE	10-01
FRONT AXLE PIVOT FRAME	50-01	SIDE SHIFT LOCK CYLINDER	20-01
FRONT LIGHTS	60-01	STABILIZER FRAME	50-01
FRONT WIPER	60-01	STABILIZER CYLINDER	20-01
FUEL LEVEL SENDER	60-01	STEERING ANGLE ADJUSTMENT	
FUEL SYSTEM	10-01	(FRONT AXLE)	40-01
FUEL TANK	50-01	STEERING ANGLE ADJUSTMENT	
		(REAR AXLE)	40-01
GEAR PUMP	20-01		
GRILL	50-01		
GRILL FRAME	50-01		

ALPHABETICAL INDEX (CONT'D)

STEERING CYLINDER (FRONT)	20-01
STEERING CYLINDER (REAR).....	20-01
STEERING PUMP	20-01
STEERING VALVE	20-01
STARTER	60-01
SWING CYLINDER	20-01
SWING FRAME.....	50-01
SWING LOCK PIN.....	10-01
TILT CYLINDER	20-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS	
FOR BOLTS.....	SPEC-01
TOWING THE LOADER BACKHOE	10-01
TRANSPORTING THE LOADER BACKHOE.....	10-01
TRAVEL PEDAL	20-01
TROUBLESHOOTING.....	40-01, 70-01
TURBOCHARGER	70-01
TURN INDICATOR LIGHTS (FRONT).....	60-01
TURN INDICATOR LIGHTS (REAR).....	60-01
X-CHANGE™	50-01