

# B300


## B-Series



# Bobcat®

# Service Manual

(S/N 573111001 & Above)

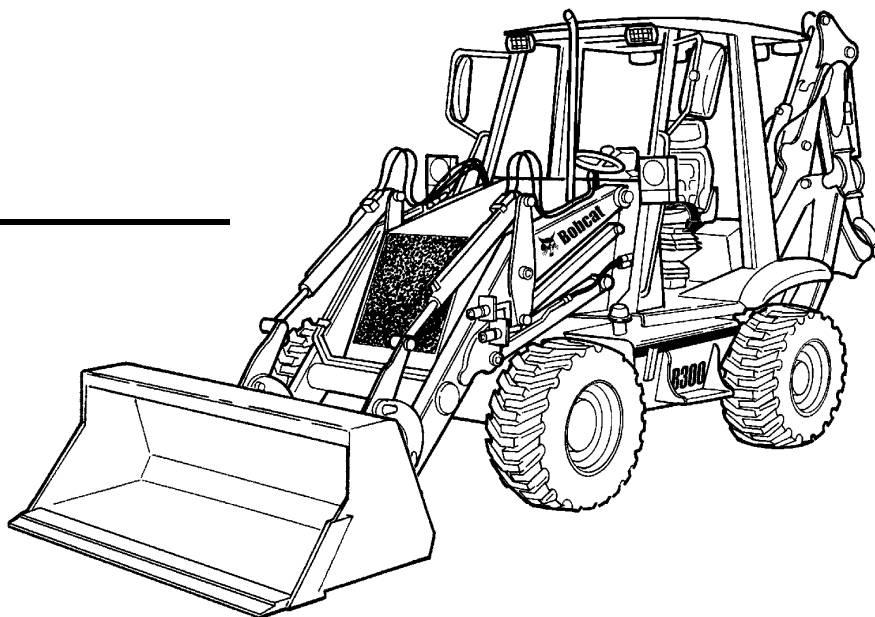

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HYDRAULIC FILTER .....	20-01
AIR CLEANER SERVICE .....	10-01	HYDRAULIC FILTER HOUSING .....	20-01
ALTERNATOR .....	60-01	HYDRAULIC FLUID RESERVOIR .....	20-01
ALTERNATOR BELT .....	10-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC/HYDROSTATIC FLUID	
ARM CYLINDER .....	20-01	SPECIFICATIONS .....	SPEC-01
ARM .....	50-01	HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
AXLE AND DIFFERENTIAL (FRONT) .....	40-01	HYDROSTATIC DRIVE MOTOR .....	30-01
AXLE AND DIFFERENTIAL (REAR) .....	40-01	HYDROSTATIC PUMP .....	30-01
AXLES (FRONT AND REAR) .....	10-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
AXLE TOE-IN .....	10-01	HYDROSTATIC PUMP TESTING .....	30-01
BACKHOE CONTROL VALVE .....	20-01	INSTRUMENT PANEL .....	60-01
BATTERY .....	60-01		
BOB-TACH .....	50-01	LIFT ARMS .....	50-01
BOB-TACH HAND LEVER .....	10-01	LIFT CYLINDER .....	20-01
BOOM .....	50-01	LIFTING AND BLOCKING THE	
BOOM CYLINDER .....	20-01	LOADER BACKHOE .....	10-01
BOOM LOCK PIN .....	10-01	LOADER SPECIFICATIONS .....	SPEC-01
BRAKE PEDAL ASSEMBLY .....	40-01	LOADER BACKHOE TORQUE .....	SPEC-01
BUCKET .....	50-01	LOADER CONTROL VALVE .....	20-01
BUCKET CYLINDER .....	20-01	LUBRICATING THE LOADER BACKHOE .....	10-01
BUCKET POSITIONING LINK .....	50-01		
		MAIN RELIEF VALVE .....	20-01
CAB LIGHTS .....	60-01	MASTER CYLINDER .....	20-01
CENTER FLOOR PANEL .....	50-01	MUFFLER .....	70-01
CONVERSIONS .....	SPEC-01		
		OIL COOLER .....	30-01
DRIVE COUPLER .....	70-01	OPERATOR CANOPY .....	50-01
DRIVESHAFT .....	40-01	OPERATOR SEAT .....	50-01
DROP BOX .....	40-01		
		PARKING BRAKE .....	40-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	PARKING BRAKE HOUSING .....	40-01
ENCLOSED CAB .....	50-01	PORT RELIEF VALVE	
ENGINE .....	70-01	(BACKHOE CONTROL VALVE) .....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01	PORT RELIEF VALVE	
ENGINE COOLING SYSTEM .....	10-01	(LOADER CONTROL VALVE) .....	20-01
ENGINE COVER .....	10-01, 50-01		
ENGINE LUBRICATION SYSTEM .....	10-01	OIL COOLER/RADIATOR .....	70-01
ENGINE SIDE COVERS .....	50-01	REAR AXLE .....	40-01
ENGINE SPECIFICATIONS .....	SPEC-01	RECONDITIONING THE ENGINE .....	70-01
ENGINE SPEED CONTROL .....	70-01		
		SERVICE BRAKE .....	40-01
FENDER .....	50-01	SERVICE SCHEDULE .....	10-01
FLOOR PANELS .....	50-01	STABILIZER .....	50-01
FLYWHEEL .....	70-01	STABILIZER CYLINDER .....	20-01
FLYWHEEL HOUSING .....	70-01	STEERING ANGLE ADJUSTMENT	
FRONT AXLE .....	40-01	(FRONT AXLE) .....	40-01
FRONT LIGHTS .....	60-01	STEERING ANGLE ADJUSTMENT (REAR AXLE) .....	40-01
FUEL LEVEL SENDER .....	60-01	STEERING CYLINDER (FRONT & REAR) .....	20-01
FUEL SYSTEM .....	10-01	STEERING PUMP .....	20-01
FUEL TANK .....	50-01	STEERING VALVE .....	20-01
		STARTER .....	60-01
GEAR PUMP .....	20-01	SWING CYLINDER .....	20-01
GRILL .....	50-01		
GRILL FRAME .....	50-01		

## ALPHABETICAL INDEX (CONT'D)

SWING FRAME .....	50-01
TILT CYLINDER .....	20-01
TIRE MAINTENANCE .....	10-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER BACKHOE .....	10-01
TRANSPORTING THE LOADER BACKHOE.....	10-01
TRAVEL PEDAL .....	70-01
TROUBLESHOOTING.....	70-01
TURN INDICATOR LIGHTS (FRONT).....	60-01
TURN INDICATOR LIGHTS (REAR).....	60-01
X-CHANGE™ .....	50-01