


BL-370

B Series



Service Manual

S/N 573211001 & Above

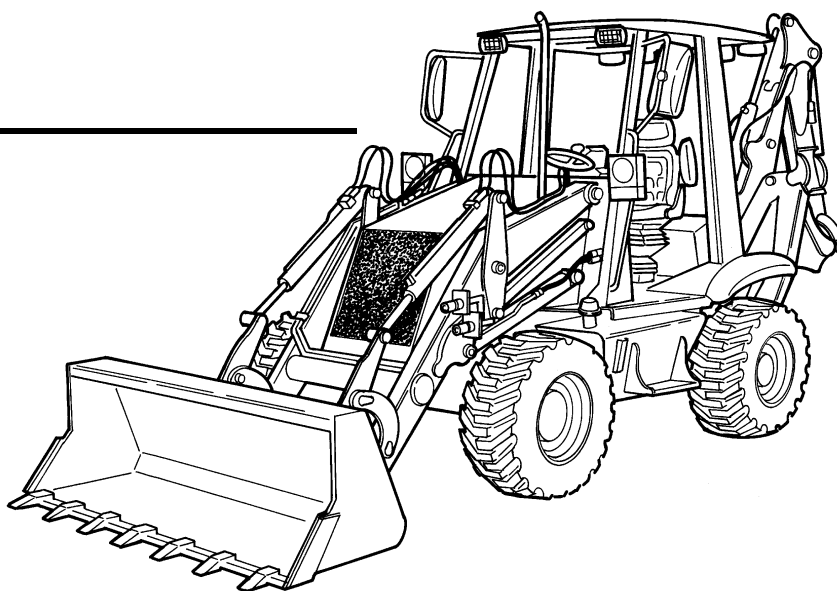

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC FILTER	20-01
AIR CLEANER SERVICE	10-01	HYDRAULIC FILTER HOUSING	20-01
ALTERNATOR	60-01	HYDRAULIC FLUID RESERVOIR	20-01
ALTERNATOR BELT	10-01	HYDRAULIC SYSTEM INFORMATION	20-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
ARM CYLINDER	20-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
ARM	50-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC PUMP	30-01
AXLE TOE-IN	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
		HYDROSTATIC PUMP TESTING	30-01
BACKHOE CONTROL VALVE	20-01		
BACKHOE LOADER TORQUE	SPEC-01	INSTRUMENT PANEL	60-01
BATTERY	60-01		
BOB-TACH	50-01	LIFT ARMS	50-01
BOB-TACH HAND LEVER	10-01	LIFT ARM STABILIZER	50-01
BOOM	50-01	LIFT CYLINDER	20-01
BOOM CYLINDER	20-01	LIFTING AND BLOCKING THE BACKHOE LOADER	10-01
BOOM LOCK PIN	10-01	LOADER CONTROL VALVE	20-01
BRAKE PEDAL ASSEMBLY	40-01	LOADER SPECIFICATIONS	SPEC-01
BUCKET	50-01	LUBRICATING THE BACKHOE LOADER	10-01
BUCKET CYLINDER	20-01		
		MAIN RELIEF VALVE	20-01
CAB LIGHTS	60-01	MASTER CYLINDER	20-01
CENTER FLOOR PANEL	50-01	MUFFLER	70-01
CONVERSIONS	SPEC-01		
DRIVE COUPLER	70-01	OPERATOR CANOPY	50-01
DRIVESHAFT	40-01	OPERATOR SEAT	50-01
DROP BOX	40-01		
ELECTRICAL SYSTEM INFORMATION	60-01	PARKING BRAKE HOUSING	40-01
ENCLOSED CAB	50-01	PORT RELIEF VALVE (BACKHOE CONTROL VALVE)	20-01
ENGINE	70-01	PORT RELIEF VALVE (LOADER CONTROL VALVE)	20-01
ENGINE COMPONENTS AND TESTING	70-01		
ENGINE COOLING SYSTEM	10-01	OIL COOLER/RADIATOR	30-01, 70-01
ENGINE COVER	10-01, 50-01	REAR AXLE	40-01
ENGINE LUBRICATION SYSTEM	10-01	RECONDITIONING THE ENGINE	70-01
ENGINE SIDE COVERS	50-01		
ENGINE SPECIFICATIONS	SPEC-01	SERVICE BRAKE	40-01
ENGINE SPEED CONTROL	70-01	SERVICE SCHEDULE	10-01
FENDER	50-01	STABILIZER	50-01
FLOOR PANELS	50-01	STABILIZER CYLINDER	20-01
FLYWHEEL	70-01	STEERING CYLINDER (FRONT & REAR)	20-01
FLYWHEEL HOUSING	70-01	STEERING PUMP	20-01
FRONT AXLE	40-01	STEERING VALVE	20-01
FRONT LIGHTS	60-01	STARTER	60-01
FUEL LEVEL SENDER	60-01	SWING CYLINDER	20-01
FUEL SYSTEM	10-01	SWING FRAME	50-01
FUEL TANK	50-01		
GEAR PUMP	20-01		
GRILL	50-01		
GRILL FRAME	50-01		

ALPHABETICAL INDEX (CONT'D)

TILT CYLINDER	20-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
TOWING THE LOADER BACKHOE	10-01
TRANSPORTING THE LOADER BACKHOE	10-01
TRAVEL PEDAL	70-01
TROUBLESHOOTING	40-01, 70-01
TURBO	70-01
TURN INDICATOR LIGHTS (FRONT)	60-01
TURN INDICATOR LIGHTS (REAR)	60-01
X-CHANGE™	50-01