


BL-370
BL-375

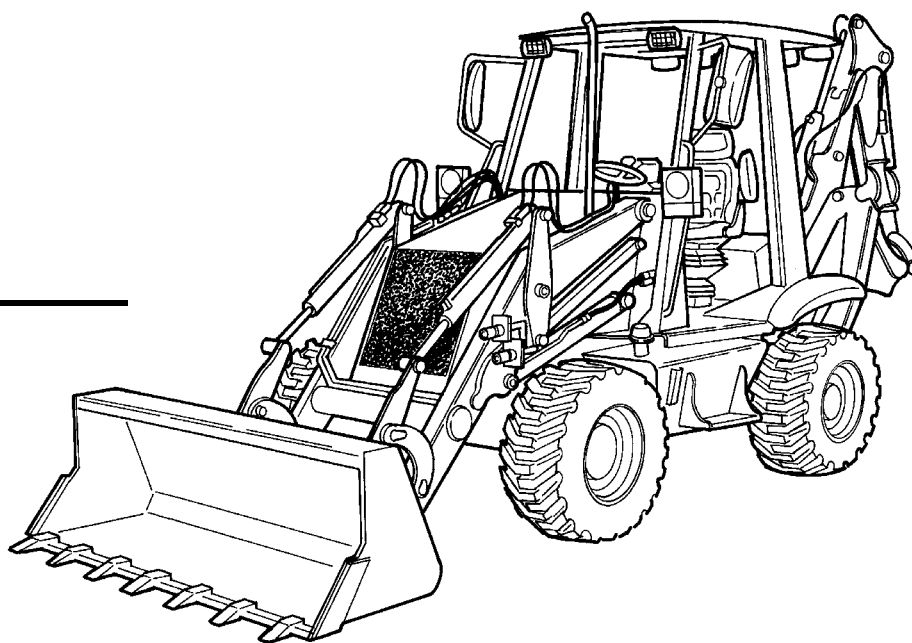

Service Manual

(S/N 570411001 & Above)
(S/N 571811001 & Above)



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
AIR CLEANER SERVICE	10-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
ALTERNATOR	60-01	HYDROSTATIC DRIVE MOTOR	30-01
ALTERNATOR BELT	10-01	HYDROSTATIC PUMP	30-01
ARM CYLINDER	20-01	HYDROSTATIC SYSTEM INFORMATION	30-01
ARM	50-01	HYDROSTATIC TESTING	30-01
AXLE TOE-IN	10-01		
		INSTRUMENT PANEL	60-01
BACKHOE BOOM LOCK	10-01	LOADER BACKHOE SPECIFICATIONS	SPEC-01
BACKHOE CONTROL VALVE	20-01	LOADER BACKHOE TORQUE	SPEC-01
BATTERY	60-01	LOADER CONTROL VALVE	20-01
BOB-TACH	50-01	LIFT ARMS	50-01
BOB-TACH HAND LEVER	10-01	LIFT ARM STABILIZER	50-01
BOOM	50-01	LIFT ARM SUPPORT DEVICE	10-01
BOOM CYLINDER	20-01	LIFT CYLINDER	20-01
BRAKE CALIPER	40-01	LIFTING AND BLOCKING THE LOADER BACKHOE	10-01
BUCKET	50-01	LUBRICATING THE LOADER BACKHOE	10-01
BUCKET CYLINDER	20-01		
		MAIN RELIEF VALVE	20-01
CAB LIGHTS	60-01	MUFFLER	70-01
CENTER FLOOR PANEL	50-01		
CONVERSIONS	SPEC-01	OIL COOLER	30-01
		OPERATOR CAB	50-01
DRIVE COUPLER	70-01	OPERATOR SEAT	50-01
DRIVESHAFT	40-01		
DROP BOX	40-01	PARKING BRAKE	40-01
		PORT RELIEF VALVE (BACKHOE CONTROL VALVE)	20-01
ELECTRICAL SYSTEM INFORMATION	60-01		
ENCLOSED CAB	50-01	RADIATOR	70-01
ENGINE	70-01	REAR AXLE	10-01, 40-01
ENGINE COMPONENTS AND TESTING	70-01	RECONDITIONING THE ENGINE	70-01
ENGINE COOLING SYSTEM	10-01		
ENGINE COVER	10-01, 50-01	SERVICE SCHEDULE	10-01
ENGINE LUBRICATION SYSTEM	10-01	STABILIZER	50-01
ENGINE SIDE COVERS	50-01	STABILIZER CYLINDER	20-01
ENGINE SPECIFICATIONS	SPEC-01	STEERING CYLINDER	20-01
ENGINE SPEED CONTROL	70-01	STEERING PUMP	20-01
		STEERING VALVE	20-01
FENDER	50-01	STARTER	60-01
FLOOR PANELS	50-01	SWING CYLINDER	20-01
FLYWHEEL	70-01	SWING FRAME	50-01
FLYWHEEL HOUSING	70-01		
FRONT AXLE	10-01, 40-01	TILT CYLINDER	20-01
FRONT AXLE PIVOT FRAME	50-01	TIRE MAINTENANCE	10-01
FRONT LIGHTS	60-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
FUEL LEVEL SENDER	60-01	TOWING THE LOADER BACKHOE	10-01
FUEL SYSTEM	10-01	TRANSPORTING THE LOADER BACKHOE	10-01
FUEL TANK	50-01	TRAVEL PEDAL	20-01
		TROUBLESHOOTING	40-01, 70-01
GEAR PUMP	20-01	TURBOCHARGER	70-01
GRILL	50-01	TURN INDICATOR LIGHTS (FRONT)	60-01
GRILL FRAME	50-01		
HYDRAULIC FILTER HOUSING	20-01		
HYDRAULIC FLUID RESERVOIR	20-01		
HYDRAULIC SYSTEM INFORMATION	20-01		

ALPHABETICAL INDEX (CONT'D)

TURN INDICATOR LIGHTS (REAR) 60-01

X-CHANGE™ 50-01